



Silabs RespShop Universal Windows Driver Installation Guide

[Home](#) » [silabs](#) » Silabs RespShop Universal Windows Driver Installation Guide 

Contents

- [1 Silabs RespShop Universal Windows Driver](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Drivers Install Instructions](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



Silabs RespShop Universal Windows Driver



Product Information

The product mentioned in the user manual is a CPAP (Continuous Positive Airway Pressure) device. It requires drivers to be installed on a computer before it can be used with the computer.

Product Usage Instructions

1. Prior to installing the driver, ensure that the CPAP device is unplugged from the computer.
2. If the boxes do not become colored when plugging in the CPAP device, follow the steps below:
3. Go to <https://www.silabs.com/developers/usb-to-uart-bridge-vcp-drivers>
4. On the webpage, select “downloads”.
5. Download the CP210x Universal Windows Driver by clicking on it.
6. Go to your downloads folder and double-click on the downloaded file.
7. Click on “Extract All”.
8. Leave the default folder and click “extract”.
9. Locate the file called “saber” (there are 2 of them). One will have an icon of a piece of paper and gear.
10. Right-click on the “saber” file with the icon and choose “Install” from the menu.
11. A pop-up message will appear indicating that the operation completed successfully.
12. Reset the computer.
13. Open the MiniCPAP software.
14. Plug in the CPAP device.

Drivers Install Instructions

- Prior to installing the driver make sure that the CPAP is unplugged from the computer
1. You will only need to do these steps if the boxes do not become colored when plugging in your CPAP
 2. Go to <https://www.silabs.com/developers/usb-to-uart-bridge-vcp-drivers>
 3. On this page, you'll select downloads

OVERVIEW DOWNLOADS TECH DOCS COMMUNITY & SUPPORT

VCP Drivers Features and Benefits

 
The CP210x USB to UART Bridge Virtual COM Port (VCP) drivers are required for device operation as a Virtual COM Port to facilitate host communication with CP210x products. These devices can also interface to a host using the direct access driver.

These drivers are static examples detailed in [Application Note 197: The Serial Communications Guide for the CP210x](#).

The CP210x Manufacturing DLL and Runtime DLL have been updated and must be used with v 6.0 and later of the CP210x Windows VCP Driver. Application Note Software downloads affected are AN144SW.zip, AN205SW.zip and AN223SW.zip. If you are using a 5.x driver and need support you can download Legacy OS Software.

4. Download the CP210x Universal Windows Driver by clicking on it


Go to your downloads folder and double click on the file




Click Extract All




Leave the default folder and click extract

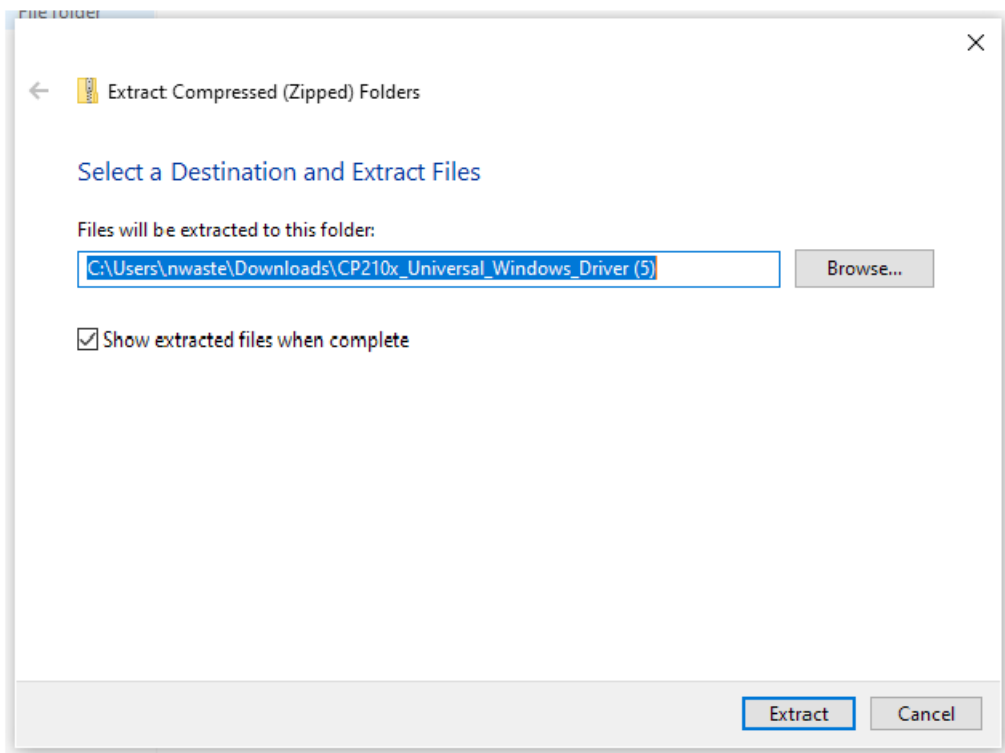

- Find the file called slabs, there are 2 of them. One will have an icon of a piece of paper and gear. Right-click on it and choose Install from the menu.

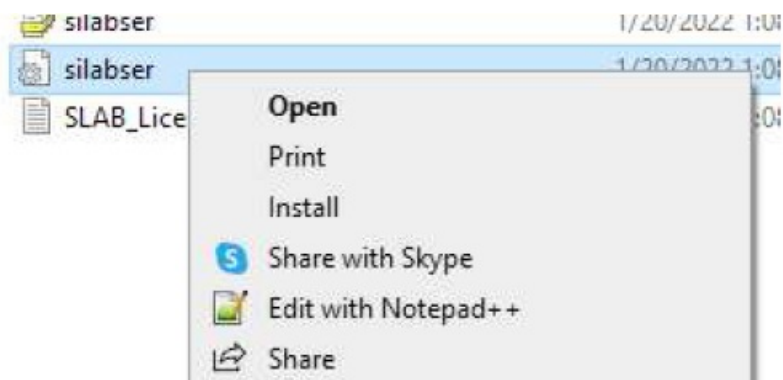


- You will get a pop-up that the operation was completed successfully

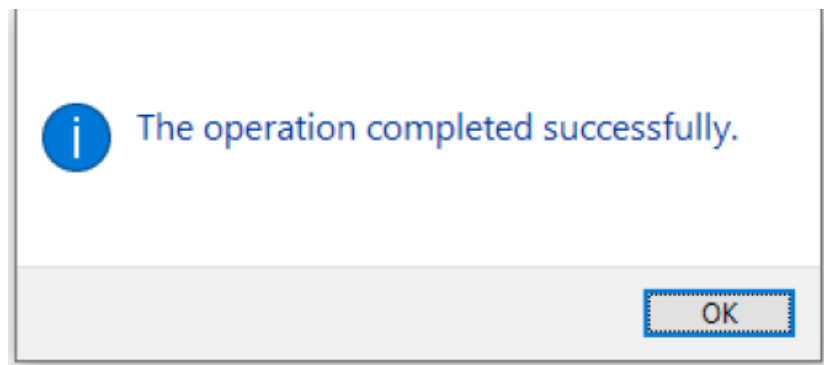

- Reset the computer, open the MiniCPAP software, and plug in the device

Documents / Resources

	<p>Silabs RespShop Universal Windows Driver [pdf] Installation Guide RespShop, RespShop Universal Windows Driver, Universal Windows Driver, Windows Driver, Driver</p>
---	--

References

-  [CP210x USB to UART Bridge VCP Drivers - Silicon Labs](#)