



SILENCER 56SL Two Way 3 Channel Extended Range Remote Start Keyless Entry System User Manual

[Home](#) » [SILENCER](#) » SILENCER 56SL Two Way 3 Channel Extended Range Remote Start Keyless Entry System User Manual 

Contents

- 1 SILENCER 56SL Two Way 3 Channel Extended Range Remote Start Keyless Entry System
- 2 CHANGING THE BATTERY
- 3 STANDARD LCD ICON CONFIGURATIONS:
- 4 LCD TRANSCIEVER REMOTE CONTROL
- 5 REMOTE TRANSMITTER OPERATION:
- 6 CHIRP INDICATION
 - 6.1 PARKING LIGHT
- 7 LOCK
- 8 UNLOCK
- 9 PANIC FUNCTION:
- 10 VALET MODE:
- 11 TRUNK RELEASE (AUX 1 / CH 1) OUTPUT
 - 11.1 AUX 2 (CH 2) TIME CONTROL OUTPUT (Optional Feature)
 - 11.2 SECOND VEHICLE SECURITY OPERATION.
- 12 REMOTE START OPERATION
- 13 Turbo Timer Mode
- 14 SILENCER LIMITED LIFETIME WARRANTY
- 15 Documents / Resources
- 16 Related Posts



SILENCER 56SL Two Way 3 Channel Extended Range Remote Start Keyless Entry System



CHANGING THE BATTERY


BATTERY REPLACEMENT: SLRF90A

The Two-Way remote transmitter is powered by one “AAA” Battery. When the power of the battery weakens icon shall be displayed on the LCD screen. When the old battery is replaced, there will be beep sounds to indicate the power is back up on the transmitter.



BATTERY REPLACEMENT: SLRF751

The One-way remote is powered by one CR2032 Battery. To replace battery use a coin or small flat blade screwdriver to carefully pry apart case

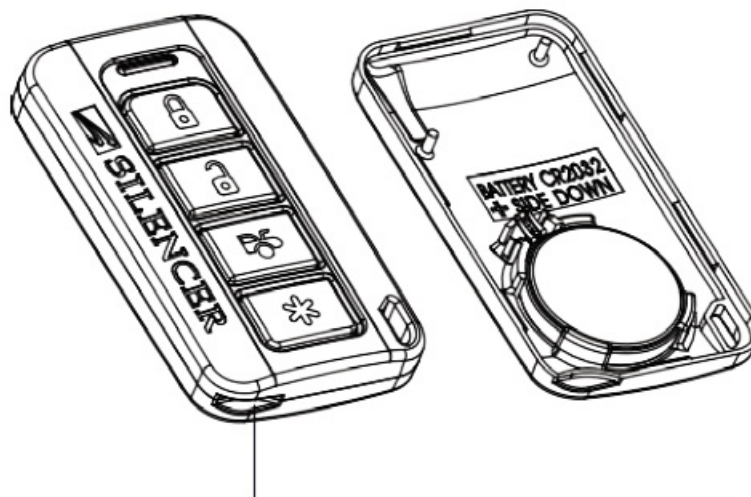





Small Flat Blade
Screwdriver or Coin

STANDARD LCD ICON CONFIGURATIONS:

	The lock icon will be displayed when the door are locked.		The unlock icon will be displayed when the door are unlocked.
	System trigger		Valet Mode All the function shall be temporally on hold.
	Trunk Release		Panic mode
	Engine Cranking Your vehicle engine cranking by remote control.		Engine Running Your vehicle's engine is running
	Timer Control Start Engine starts automatically every 2 or 3 hours		Driver paging
2	2nd Car Operation		Button Lock (Icon on)
	Remote Transmission You are transmitting the signal to control unit.		In – Range Indicator You are within the range of the remote control.
	Low Battery	SAVE	Power Save
	Melody Mode		Vibration Mode
	Alarm Clock		Parking Meter Reminder when time is up for parking

LCD TRANSCEIVER REMOTE CONTROL

1. Press the F buttons the number of times corresponding to the Level you wish to select; the LCD will display LEVEL number ()
2. Press the button while LEVEL number text is still on to perform the command.

Button	Direct Access	F x 1 Level 1	F x 2 Level 2	F x 3 Level 3
 1.0 sec.	Silent Arming	Vehicle's Status Check		
	Disarm & Unlock or Silent Disarming	Remote Valet ON / OFF	Car 1 / Car 2 operation	Voltage Check
	Trunk Release (Aux 1) CH 1	Aux 2 CH 2		
	Remote Start or Running Time Extender	Timer Start ON / OFF	Daily Timer Start ON / OFF	
F 1 sec		Melody / Vibration Mode	Power Save Mode ON / OFF	Button Lock ON / OFF

Vehicle's Status Check: Press F button first then press and hold buttons for 1 second and release.

The LCD remote transceiver will display the current status of the vehicle.

Second Vehicle Security Operation: Press F button 2 times first then press and release button to enter Second Vehicle Security Mode, Under this mode press button to select CAR 2 operation, The 2 icon and display on the LCD screen or CAR 1 operation and the 2 icon will disappear and display on the LCD screen.

Voltage Check: Press F button 3 times first then press and release button. The LCD remote transceiver will display the voltage condition of the vehicle.

Melody / Vibration Mode: Press F button first then press and hold F buttons for 1 seconds until the beep confirms, then release the button to enter Melody / Vibrating Mode, Under this mode press and hold F button for 1 seconds to select Melody Mode icon will display) or Vibration Mode icon will display) or both and icon will display).




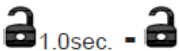













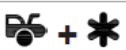



Power Saver Mode: Press F button 2 times first then press and hold F buttons for 1 seconds until the beep confirms to enter Power Saver Mode, Under this mode press and hold F button for 1 seconds until the beep confirms, then release the button to enable (The SAVE icon will display) or disable Power Save Mode (The SAVE icon will disappear).

While in Power Save Mode the LCD transmitter will not look for any incoming signals from main unit until a button is pressed.

Button Lock Mode: Press F button 3 times first then press and hold F buttons for 1 seconds until the beep confirms, then release the button to enter Button Lock Mode, Under this mode press and hold F button for 1 second to enable icon will display) or disable Button Lock Mode (The icon will disappear)., the remote control will beep/vibrate 2 times when a button is pressed indicating it is locked.

EXIT: Wait 10 seconds, or press the other buttons to leave the setting except the F button.

REMOTE TRANSMITTER OPERATION:

Transmitter Button	System Function	Remark
	Lock Doors	Tap the Lock button for a half second
	Silent Lock Doors	Press and hold for 1.0 seconds
	Panic Function	Press and hold for 3 seconds to Activate or Deactivate panic function
	Car Locator	Press when the system Locked
	Unlock Doors	Tap the Unlock button for a half second
	Silent Unlock Doors	Press and hold for 1.0 seconds
	Two Steps Door Unlock (optional)	Press twice within 3 seconds
 1.0sec. - 	Silent Two Steps Door Unlock	Press and hold the  button for 1.0 seconds first then press  button.
	Trunk Release (Aux 1)	Press and hold for 3 seconds
	Activate or Deactivate the Remote Start	Press button once. *.* Press twice if set to start safety mode.
	Running Time Extender	Press and hold for 2 seconds
 - 	Timer Start	Tap the  button first then tap  button.
 + 	Turbo Mode	Press together & release.
 + 	Aux 2 Timer Output	Press together & release.
 + 	Switch Code for 2nd Car Operation	Press together & release.
 + 	Shutdown Diagnostic	Press together & release
F	Level Setting.	
	Light up the LCD indicator and Function Setting	Press and hold for 1 second
	LCD Remote Programming Setting	Press and hold for 3 seconds

CHIRP INDICATION

Chirp	Function
1 Chirp	Lock
2 Chirps	Unlock
6 Chirps	Car Locator

PARKING LIGHT

Parking light	Function
1 Flash	Lock
2 Flashes	Unlock
12 Flashes	Car Locator
Constant On	Under Remote Start

LOCK

1. Press the button on the transmitter.
2. The system will lock the doors (if connected), and the horn chirps and parking lights flash once indicating that the keyless entry system is now locked. The icon and beeps play to confirm. If Valet Mode* is ON, the doors lock and the + icon and tone play on the LCD transceiver.

SILENT LOCKING: Press and hold the transmitter buttons for 1.0 second. The system will lock the doors. No chirp sound will be heard and the lock confirmation will be through the vehicles parking lights only.

UNLOCK

1. Press the button on the transmitter.
2. The horn will chirp twice and the parking lights will flash twice indicating that the system is now unlocked. The icon and beeps play to confirm. If Valet Mode* is ON, the doors unlock and the + and tone play on the LCD transceiver.
3. The vehicle's doors will unlock and the dome light will turn on for 30 seconds upon unlocking.

(**Note:** Power door locks and dome light must be installed with the keyless entry system.)

SILENT UNLOCKING: Press and hold the transmitter buttons for 1.0 second. This will unlock your doors. No chirp sound will be heard and the unlock confirmation will be through the vehicles parking lights only,

PATHWAY ILLUMINATION: When receiving an unlock signal, this feature will turn the parking lights "ON" for 30 seconds and for 10 seconds upon the lock signal. (See feature bank 2-04)

TWO-STEPS DOOR UNLOCK (Optional): This feature will independently unlock the driver's door only when disarming the keyless entry system.

- Pushing the button a second time within 3 seconds will unlock the other doors.

PANIC FUNCTION:

Press and hold the button for 3 seconds to activate the personal protection alarm and the icon will display on the LCD screen. During panic mode, the normal function of the transmitter buttons will be suspended. The transmitter and buttons can be used to lock and unlock the door (if the option is installed). To stop the alarm, press and hold the button on the transmitter again for 3 seconds. The system will automatically stop after 30 seconds.

VALET MODE:

When servicing or loaning your vehicle to others, the system should be placed in Valet Mode. Valet Mode prevents the system from remote starting functions.

Enter Valet Mode:

1. Under the system unlocked, turn ignition "ON/ OFF/ ON"
2. Press and hold valet switch for 2 seconds until the LED turns "ON" solid and icon will show on the LCD.

The LED will remain on as long as the system is in Valet Mode.

Exit Valet Mode:

1. Turn ignition "ON/OFF/ON".
2. Push and hold the valet switch for 2 seconds. The LED will turn off indicating the system is exiting the Valet Mode.

Remote Valet

Under the system unlocked, press the F button 1 time first then press the button. The parking lights will flash once, the remote will read "Valet On" and icon will show on the LCD.

Exit: Repeat this process to exit valet mode. The parking lights will flash twice, remote read "Valet Off" and icon will disappear confirming valet mode is disabled.

CAR LOCATOR:

Under the system Locked, press the button to activate the car locator function.

The horn will chirp 6 times. The parking light will flash 12 times, assisting you in easily locating your car.

DRIVER PAGING / LOST & FOUND. ((For two-way transceiver operation only)

This feature is useful in the event that someone wants to page the driver of a parked vehicle or someone cannot find his LCD remote transceiver. Under the ignition switch "OFF" condition,

press and hold the valet switch for 2 seconds to page the driver. One chirp sound is emitted from the vehicle, a paging melody will continue to sound and the icon will flash on the LCD screen.

DOMELIGHT CONVENIENCE SUPERVISION

The keyless entry system has a unique feature that will turn on your vehicle dome light as follows:

1. Upon unlocking, the interior light will remain on for 30 seconds.
2. If the activated the panic, the interior light will flash for the same duration as the horn.

Note: Turning on the ignition switch or locking the alarm will turn off the dome light.

IGNITION CONTROL DOOR LOCK/UNLOCK. (Programmable Feature)

If the vehicles door locks have been interfaced to the keyless entry system, the system will automatically lock the vehicle's doors when the ignition is turned "ON" and /or unlock the vehicle's doors when the ignition is turned "OFF". (Default setting is "OFF")

TRUNK RELEASE (AUX 1 / CH 1) OUTPUT

Press and hold the button on the transmitter for 3 seconds to remotely control the trunk release and the icon will show on LCD screen.

Aux 1 is a user-programmable timer output. You may program the built-in timer to send a ground signal for any time duration from 1 second to 90 seconds. For instance, this timer output may be used to turn on the headlights, power windows or sunroof.

Programmable Output:

Trunk (1 second pulse) / Aux 1 Latch / L Aux 1 Latch Reset with Ignition / Aux 1 Flex (Aux 1 Control by Remote / Control by Lock / Control by Unlock / Control by Lock & Unlock / Control by Remote Start) **Latch:** when the Aux 1 command is received the output will turn ON and remain ON and the text and tones play to confirm until the command is received again and text will be displayed on the LCD screen.

Latch/Reset/Ignition: when the Aux 1 command is received the wire will turn ON and remain ON until the ignition is turned ON & OFF t or he command is received again and text will be displayed on the LCD screen.

Flex: when the Aux 1 command is received the output will turn ON for the programmed time duration (default

1sec.).

Aux (CH 1) Output Control:

1. Control by Remote: This option allows Aux 1 to be triggered by remote control command.
Press and hold buttons for 3 seconds to activate Aux 1 function and. the text and tones play to confirm
2. Control by Lock: The Aux 1 output will activate for the lock command. If you send a second lock command it will not trigger Again.
3. Control by Unlock: The Aux 1 output will activate for the unlock command. If the vehicle is already in the unlocked state and you send a second unlock command it will not trigger the output.
4. Control by Lock and Unlock: the Aux 1 output will activate for the lock & unlock commands.
5. Control by Remote Start: the Aux 1 output will activate for any Remote Start activation.

AUX 2 (CH 2) TIME CONTROL OUTPUT (Optional Feature)

Press F button first then press button or press buttons + simultaneously to activate Aux 2 function and. the text and tones play to confirm.

Aux 2 is a user-programmable timer output. You may program the built-in timer to send a ground signal for any time duration from 1 second to 90 seconds. For instance, this timer output may be used to turn on the headlights, power windows or sunroof. (Factory defaults setting at 1 second output.) Programmable Output: Aux 2 Latch / Aux 2 Latch Reset with Ignition / Aux 2 Flex

(Aux 2 Control by Remote / Control by Lock / Control by Unlock / Control by Lock & Unlock / Control by Remote Start)

SECOND VEHICLE SECURITY OPERATION.

You can be utilized to control a second vehicle's keyless entry system. To program the remote control transmitter to a second vehicle, Press and hold the + buttons 2 seconds to select car 2 or car 1 operation.

4 Button Remote Transmitter:

For Car 2: When the LED start 2 pause flash then release buttons.

For Car 1: When the LED start 1 pause flash then release the buttons.

LCD Remote Transceiver:

For Car 2: When 2 icon and the text show on the LCD display then release the buttons. Under Car 2 mode, the 2 icon will flash.

For Car 1: When 2 icon disappears and the C-1 text show on the LCD display then release the buttons.

CLEAR THE FLASHING TAMPER WARNING MESSAGE ICONS:

The flashing warning message icons in the LCD display will clear and reset when the transmitter is used to lock the vehicle. Also, Locking then Unlocking the system will clear the flashing icons.

STOP THE MELODY SOUND:

Press any button on the LCD remote transmitter to stop the melody sound only.

ILLUMINATE LCD DISPLAY:

Press and hold the F button for 1 second and the LCD indicator will light up

OUT OF REMOTE CONTROL RANGE:

If the icon disappears to indicate the remote failed to receive a command confirmation.

WARNINGS

As with any product that performs automatic functions, there are certain safety precautions that you must practice and be aware of.

1. Keep the transmitter out of children's reach.
2. Do not leave anyone in the vehicle while running on remote control.
3. Alert servicing personnel that the vehicle can be started automatically.
4. Do not start the vehicle by remote while it's in an enclosed area or garage.
5. Always apply the parking brake and lock the vehicle as you exit the vehicle.
6. The vehicle windows must be rolled up.
7. Should the unit malfunction, disconnect the fuse until the problem is corrected.
8. The use and operation of this system is the sole responsibility of the operator.
9. Some areas may have local ordinances that prohibit leaving a vehicle running on public streets.
10. It is not safe to remote start the vehicle if the vehicle is parked on a steep incline.

REMOTE START OPERATION

A. To Remote Start the Vehicle

When you want to start your vehicle:

1. Press the button once on the transmitter.
2. The parking light will activate to indicate the remote start has received the signal.
3. The engine will start in approximately 5 seconds and the icon will blink to indicate that the engine is starting, the icon will show on the LCD screen, the parking lights will turn on. While the vehicle is running, the icon, the run time start countdown text and tones play to confirm. The countdown timer based on based on the 3, 10, 20, 30 or 45 minute run time set installation center. (See feature bank 3-04 setting).
4. The vehicle will run for a programmable 3 to 45 minute cycle before shutting down. When the countdown timer is off or press button, the system will be shut down, and the icon will disappear and tones play on the LCD screen.
5. The vehicle refused to start running after 3 unsuccessful attempts.
6. If Remote Start fails to start, the parking light will fast flash 4 times and FAIL text and a fault tone play on the LCD transceiver.

B. Programmable Safety Start

By default, your Silencer remote starter is programmed to start/stop after pressing the button 1 time. This default setting can be re-programmed to require 2 presses – .

This setting is known as "Child Safety Mode".

Contact your installer to reprogram this feature if needed.

C. Running Time Extender

User Programmable Run Time / Run Time Extension. The system has the ability to allow the user to extend the time the vehicle will be running under control of the remote start. This will only extend the run time back to the current run time setting during the current remote start cycle. If your system is set to run 20 minutes and the time remaining is 4 minutes, extending the run time will reset the countdown timer to 20 minutes and your vehicle will continue to run for another 20 minutes. Follow the steps below to extend the vehicle's run time.

1. The remote start must already be active.
2. Press and hold the button for 2 seconds
3. The system will chirp 1 time and flash the parking lights 4 times and the run time Restart the countdown text and tones play to confirm the run time has been reset and will indicate a countdown timer based on the 3, 10, 20, 30 or 45 minutes run time.

D. Operate The Vehicle While Running From The Remote Start

To operate the vehicle while the engine is running from the remote start:

1. Insert the ignition key and turn it to "ON" (not the start) position
2. Press the brake pedal.

Note: If the brake pedal is pressed before the key is in the "ON" position, the engine will shut down.

E. Temporary Stop Mode:

This mode allows the vehicle to remain running after the key has been removed from the ignition.

This feature is useful for occasions when you wish to exit and lock the vehicle for short periods of time but would like to leave the motor running and the climate control on.

1. While the vehicle is running, place the transmission in PARK, set the emergency / parking brake.
2. With your foot off the brake pedal, press the button once, the parking lights will turn on and the run time start countdown text and tones play to confirm that the system has entered Temporary Stop Mode.
3. Remove the keys from the ignition and exit the vehicle. Press the button to lock the vehicle's doors if desired.

Note: Do not leave children or animals unattended in the vehicle when using the temporary stop feature.

F. To Turn Off the Remote Start

When the engine is running (by remote start) and you want to stop it:

1. Press the button once on the remote transmitter under the remote start mode.
2. Move the optional remote start enable toggle switch to the "OFF" position. (If installed)
3. Press the brake pedal.
4. Pull down the hand brake. (For Turbo Timer Mode)

The vehicle will shut down and turn off the parking light and the icon will disappear and tones play to confirm the engine has stopped.

G. Disabling the Remote Start System: (If Installed)

This feature allows your system's remote start unit to be temporarily disabled to prevent the vehicle from being remote started accidentally. This feature is useful if the vehicle is being serviced or stored in an enclosed area. To disable the remote start, move the optional remote start enable toggle switch to the "OFF" position.

H. Timer Start Operation

This feature is designed to allow the user to have the system automatically remote start at the end of a selected timed cycle. (Runtime interval based on feature 3-05 option setting.) The running time interval will display on 2 ways LCD remote to confirm timer start is set.

Activate Timer start on / off

Depress F button first then press button or Press the button first, within 2 seconds presses the button to activate timer start (or if ON, deactivates). A chirp from siren and the parking light flashes 3 times and the icon, the or text

and tone play on the LCD transceiver.

Note: For Timer Start and Daily Timer Start:

1. This will be repeated in 24 hours.
2. Open the hood / trunk / doors or manually starts or remote starts the vehicle will cancel the timer start.
3. System needs to be locked or timer start will not start the engine.
4. 2 chirps from siren indicate fail to setting and the text and tone play on the LCD transceiver.

IMPORTANT: Timer Start and Daily Timer Start should be used only in open areas, never start and run the vehicle in an enclosed space as a garage or carport.

Contact your installer to reprogram this feature if needed.

Daily Timer Start: (See LCD programming 2 setting)

This option will allow the user to set a predetermined time to remote start on the 2 way LCD remote. Sets the time which you would like the start the vehicle first (predetermined time based on LCD programming 2 setting)

Note: it is important that the remote time is as accurate as possible when activating the timer mode to ensure that it will start at the desired time.

Activate Daily timer start on / off:

Depress F button 2 times first then press button (or if ON, deactivates). The parking light flashes 5 times and the icon, the text and tone play on the LCD transceiver to confirm activates predetermined time start. The vehicle is now programmed to start at the same time of the next day. Repeat the same step to turn off daily timer start mode.

Turbo Timer Mode

The built in turbo timer keeps the vehicle's engine running for either 1, 3, or 5 minutes, after the vehicle key has been removed from the ignition. This feature will keep oil running through the turbo system to allow for appropriate cooling time.

To activate:

- **Step 1:** While the vehicle is running, place the transmission in neutral, set the emergency / parking brake.
- **Step 2:** With your foot off the brake pedal, press buttons + simultaneously and the parking lights will turn on. Remove the key from the vehicle's ignition. The vehicle's engine should remain running even after the key has been removed. If the vehicle does not remain running visit your local authorized dealer for service.
- **Step 3:** Exit the vehicle and close the door. Press the transmitter button, the vehicle's doors will lock/arm and then engine will keep runs for the turbo runtime and the run time start countdown text and tones play to confirm. Cancelling Turbo Timer Mode:

The system will exit Turbo Timer Mode if any of the following occur:

- You did not activate the parking brake prior to turning off the ignition.
- You pressed the foot brake after the key was removed from the ignition
- You released the parking brake after the key was removed from the ignition.
- You entered valet mode, opened the vehicle's door, hood, trunk or set off the alarm.
- Press buttons + simultaneously to turn off turbo mode.

B Turbo Timer must be turned on by an authorized dealer.

Shutdown Diagnostics:

The unit has the ability to report the cause of the last shutdown of the remote start system.

Press Buttons + simultaneously.

4 Button Remote Transmitter: The parking light and chirps will report the reason of the system last shutdown by flashing in the following grouped patterns,

LCD Remote Transceiver: The LCD display on the 2-way remote will report the reason of the last shutdown, and the text and a fault tone play to confirm.

GROUP 1 (One Flash of Parking Light)		
Chirps	Shutdown Mode	Solution
1	Hood Open	<ul style="list-style-type: none"> • Close the hood. • Check 14-pin White/Black wire connection.
2	Optional Enable Switch OFF or Black / White must have a ground	<ul style="list-style-type: none"> • Check 14-pin Black/White wire connection. • Move the Enable Toggle Switch to “ON” position. (If installed.) Move the gear selector to “Park”/ “NEUTRAL” position
3	Foot Brake on	<ul style="list-style-type: none"> • Check 14-pin White/Violet wire connection • Release Foot Brake.
4	System is in Valet Mode	Exit the Valet mode
5	Hi Voltage (Voltage Checking Type)	Set the “Feature 3-02 to “Low Level”
	Low or No RPM (Tachometer Checking Type)	<ul style="list-style-type: none"> • Check 14-pin White/ Red wire connection • Set the “Feature 3-02 to “Hi Level” • Re-learning the RPM
6	The engine has run successfully but is still starting (Tachometer Checking Type)	<ul style="list-style-type: none"> • Set the “Feature 3-02 to “Low Level”

GROUP 2 (Two Flash of Parking Light)		
Chirps	Shutdown Mode	Solution
1	Over-Rev Shutdown	
2	Running Time expired	
3	Transmitter Shutdown	

LCD Remote Control Program Setting Enter:

1. Press and hold the F button for 3 seconds until the text and a tone play to confirm is heard and then release.
2. Press F button confirm the selection and move to the next setting, and the “Display” text and a tone play to confirm.

Exit: Press and hold the F button for 3 seconds until 2 beeps are heard and then release.

	Feature	Display	button	button	button	Function / Description
1	Time		Adjusts Hour	Adjusts Minute		Sets the time on your remote
2	Daily timer start	flash	Adjusts Hour	Adjusts Minute		Sets the time at which you want your vehicle to start every day.
3	Alarm Clock Time	flash	Adjusts Hour	Adjusts Minute	On/Off	Sets the time which you would like the remote alarm clock to alert you.
4	Parking Meter Timer	flash	Adjusts Hour	Adjusts Minute	On/Off	Sets the time which you would like the parking meter timer to alert you.
5	Backlight delay or turn off	5 / 10 / OFF	5 sec.	10 sec.	Backlight Turn off	Sets the Backlight of LCD
6	Car Icon Illumination	icon displayed or not	icon Displayed	Not		icon displayed when required by the 2-way information system.

SILENCER LIMITED LIFETIME WARRANTY

Magnadyne Corporation or its authorized agents will, for the life of the vehicle and to the original purchaser, repair, replace or refund the retail sales price of said product or any part thereof, at the option of the Magnadyne Corporation or its authorized agents, if said product or part is found defective in materials or workmanship, when properly connected and operating on the correct power requirements designated for the specific product. This warranty and Magnadyne Corporation or its authorized agents obligations, hereunder do not apply where the product was: damaged while in the possession of the consumer, subjected to unreasonable or unintended use, not reasonably maintained, utilized in commercial or industrial operation, or serviced by anyone other than Magnadyne Corporation or its authorized agent, or where the warning seal on the product is broken or the power plugs or wires are detached from the unit. Magnadyne Corporation or any of its authorized agents do not assume any labor costs for the removal and reinstallation of any product found to be defective, or the cost of transportation to Magnadyne Corporation or its authorized agents. Such costs are the sole responsibility of the purchaser. This warranty does not cover the cabinet, appearance items, normal wear and tear or accessories used in connection with the product resulting from improper installation, alteration, accident, misuse, abuse or acts of nature.

T

his Limited Life Time Warranty applies only to the receiver section of the security system. Neither the siren, transmitters, wire harness or any accessory item added to or used with a Remote Mobile security system are covered by this Limited Life Time Warranty. Sirens, transmitters, wire harness or any accessory item are covered by our standard 12 month limited warranty.

Magnadyne Corporation or its authorized agents shall not be liable to anyone for consequential or incidental damages or claims that may arise due to failure of product to operate properly except those accorded by law. Magnadyne's or its authorized agents liability to the repair, replacement of the product as stated above if all conditions of the warranty are met. No expressed warranty or implied warranty is given except those set forth

herein. Magnadyne does not warrant or guarantee against break in damage or the theft of the vehicle in part or whole, or against the loss or damage to the contents of any vehicle in which a security system is installed. Magnadyne security systems are only a deterrent against possible theft.

This warranty extends only to the original purchaser of the product and for the vehicle in which it was originally installed. This warranty is not transferable or assignable to any person or vehicle. Defective merchandise should be returned to the original point of purchase or secondly to Magnadyne Corporation, 1111 W. Victoria Street, Compton, CA 90220. A return authorization must be obtained before sending, or merchandise may be refused.

Warning: Some batteries may contain Perchlorate

What is Perchlorate? Perchlorate is both a naturally occurring and manmade contaminant increasingly found in groundwater, surface water and soil. Most perchlorate manufactured in the U.S. is used as an ingredient in solid fuel for rockets and missiles. In addition, perchlorate-based chemicals are also used in the construction of highway safety flares, fireworks, pyrotechnics, explosives, common batteries, and automobile restraint systems. Perchlorate contamination has been reported in at least 20 states. Perchlorate greatly impacts human health by interfering with iodide uptake into the thyroid gland. In adults, the thyroid gland helps regulate the metabolism by releasing hormones, while in children; the thyroid helps in proper development. Perchlorate is becoming a serious threat to human health and water resources. "Perchlorate Material – Special handling may apply." For more information, go to <http://www.dtsc.ca.gov/hazardouswaste/perchlorate/>

Documents / Resources

	<p>SILENCER 56SL Two Way 3 Channel Extended Range Remote Start Keyless Entry System [pdf] User Manual</p> <p>56SL, Two Way 3 Channel Extended Range Remote Start Keyless Entry System, Remote Start Keyless Entry System, Two Way 3 Channel Extended Range</p>
--	--