



SILENCER 662SSR Remote Start with Security and Keyless Entry System Installation Guide

[Home](#) » [SILENCER](#) » SILENCER 662SSR Remote Start with Security and Keyless Entry System Installation Guide 



662SSR Remote Start with Security and Keyless Entry System
Installation Guide



Contents


- 1 662SSR Remote Start with Security and Keyless Entry System
- 2 Mounting the Receiver/Control Center (RCC):
- 3 Programming System Features:
- 4 Feature Programming by RCC Button
- 5 Feature Programming by PC/Web
- 6 Remote Start Shutdown Diagnostics
- 7 Programming the Digital Shock Sensor:
- 8 GOVERNMENT REGULATION
- 9 Documents / Resources
 - 9.1 References
- 10 Related Posts

662SSR Remote Start with Security and Keyless Entry System


FOR PROFESSIONAL INSTALLATION ONLY!

If you are not proficient in the installation of this product or would like a full version of the installation manual, please visit our web [site@www.magnadyne.com](http://www.magnadyne.com)

REMOTE START with SECURITY & KEYLESS ENTRY SYSTEM

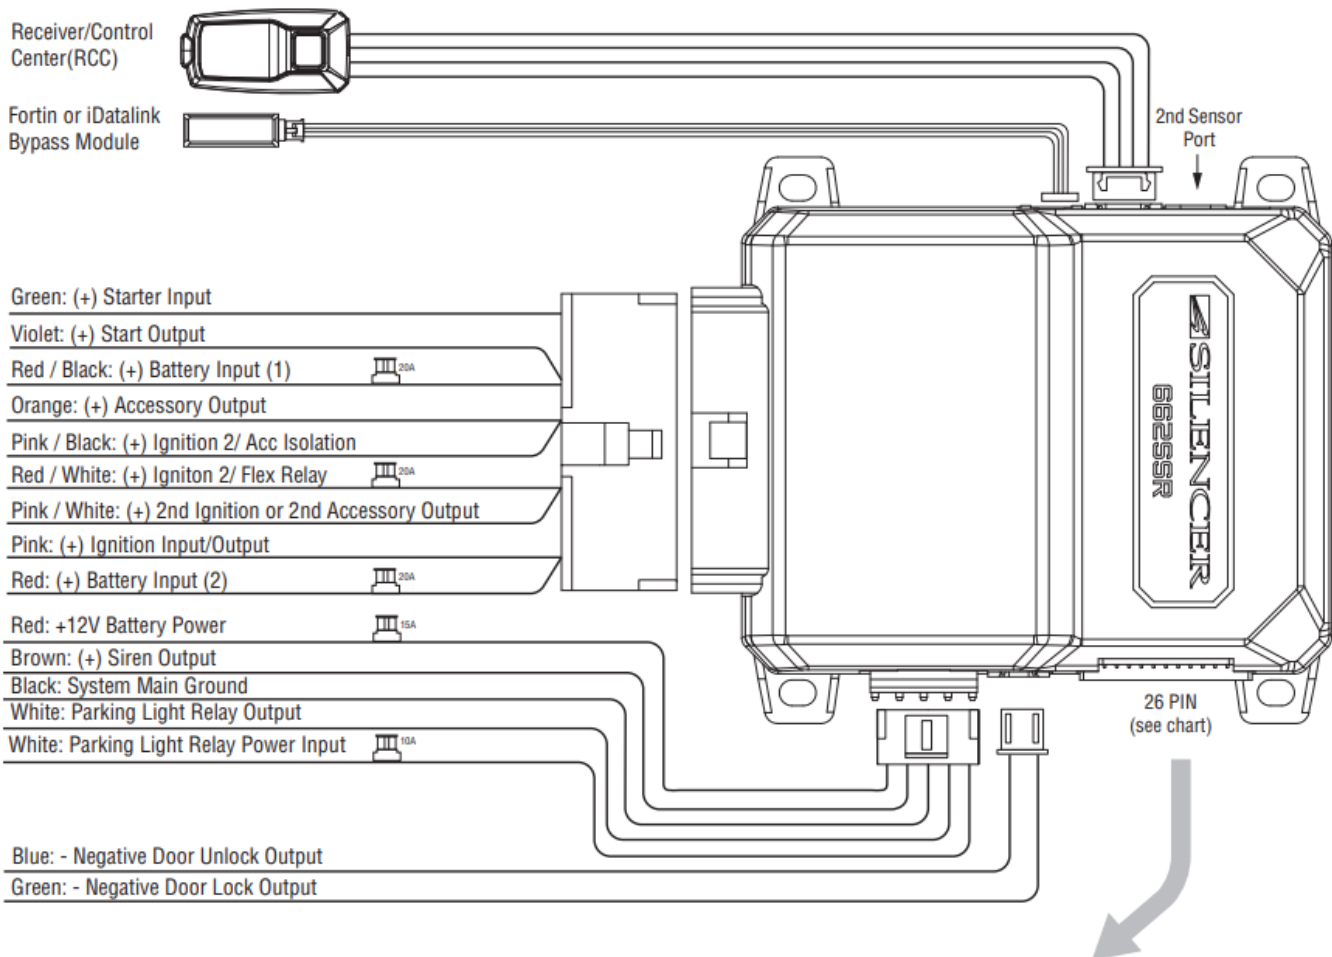

26 Pin Harness

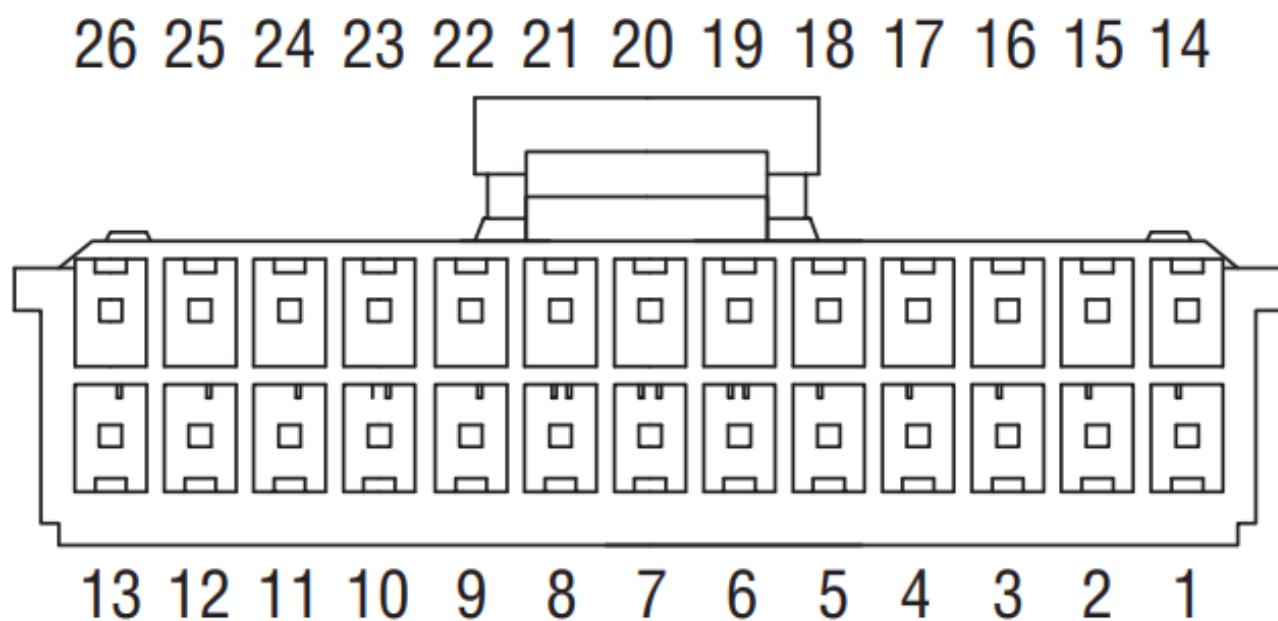

Pin	Color	Function	Pin	Color	Function
1	White/Violet	(-) 2nd Unlock Output	14	Black/Yellow	(-) Dome Light Supervision Output
2	Red/White	(-) Channel #3 Output	15	Blue/White	(-) 2nd Status or Rear Defog Output
3	Orange	(-) Ground When Armed	16	Dark Blue	(-) 1st Status Output
4	Brown	(+) Brake Switch Shutdown	17	Green/White	(-) Re-Arm the Factory Alarm Output
5	Gray	(-) Hood Pin Shutdown	18	Lt. Green/Black	(-) Disarm the Factory Alarm Output
6	Black/White	(-) Parking Brake Switch Input	19	Brown/Black	(-) Horn Output
7	Blue	(-) Instant trigger Trunk/Hood pin input	20	Orange/Black	(-) AUX Channel #6 Output
8	White/Blue	(-) External Activation Input	21	White/Black	(-) AUX Channel #5 Output
9	Gray/Black	(-) Diesel What to Start Input	22	Violet/Black	(-) AUX Channel #4 Output
10	Violet	(+) Door Trigger Input	23	Violet/Yellow	(-) Starter Output
11	Green	(-) Door Trigger Input	24	Orange/White	(-) Accessory Output
12	EMPTY	No Connection	25	Pink/White	(-) 2nd Ignition or Acc Output
13	Violet/White	(AC) Tach Input	26	Pink	(-) Ignition Output

Mounting the Receiver/Control Center (RCC):

1. Choose a location on the upper or sides of the vehicle A higher location is best.
2. Remove the backing liner from the mounting tape on the backside of the RCC and stick it to the windshield
3. Route the RCC cable to the location of the control

Programming System Features:

All SILENCER remote start systems have a menu of features that can be programmed to suit the installation requirements of any vehicle. These features can be set by using the RCC button learning procedure or by






Feature Programming by RCC Button

1. Open the driver's
2. Turn the ignition key ON then
3. Within 5 seconds, press and hold the RCC button to select the

- A single chirp indicates Menu #1.
- Hold the button longer for two You are in menu #2.
- Continue holding the RCC button for three You are in menu #3.

4. When the desired menu is reached, release the RCC
5. Within 5 seconds, press and release the RCC button the number of times corresponding to the feature you want to change then press and hold the button once more to lock the The siren / horn will chirp to match the feature selected. Release the RCC button.

Note: RCC switch pushes are sequential. For example, if you start at feature #1, then push and release the valet switch 2 more times, you will be at feature #3 and so on. Always remember to push and hold the valet switch one more time after each selection to lock the feature before using the transmitter to change the setting.

6. Use the  or  buttons on the SILENCER remote to adjust the
7. For features with only two options, the (lock icon) = 1 Chirp setting, while the  = 2 Chirp
8. For features with more than two settings, the  button selects the settings in ascending Press and release the  button as many times necessary to adjust the feature.
9. The horn/siren will chirp indicating which setting is 10. Turn the ignition key to ON to exit feature programming.

Menu #1 (Default in Bold)

Item	Feature	Chirps								
		1	2	3	4	5	6	7	8	9
1	Data Protocol	ADS	Fortin							
2	Confirmation Chirps	On	Off							
3	System Arming	Active	Passive							
4	Door Locking Mode	Active	Passive							
5	Forced Passive Arming	On	Off							
6	Ignition Key Controlled Locking	Off	On							
7	Ignition Key Controlled Unlocking	Off	On							
8	Panic with Ignition On	Off	On							

Menu #1 continued (Default in Bold)

Item	Feature	Chirps								
		1	2	3	4	5	6	7	8	9
9	Armed While Driving	Off	On							
10	Auto Starter Disable	On	Off							
11	Door Lock Pulse	0.8 sec	3.5 sec	0.4 Sec						
12	Horn Output	20 ms	30 ms	40 ms	50 ms	Full Alarm Only				
13	Horn Honk Mode	Pulsed	Constant							
14	Comfort Closure	Off	CC1	CC2						
15	Tilt Sensor Adjust	3*	1.5*	Off						

Menu #2 (Default in Bold)



Item	Feature	Chirps								
		1	2	3	4	5	6	7	8	9
1	Progressive Door Trigger	On	Off							
2	Nuisance Prevention Circuit	On	Off							
3	Valet Switch Pulse Count for Override	1 Pulse	2 Pulses	3 Pulses	4 Pulses	5 Pulses				
4	Door Trigger Error Chirp	On	Off							
5	Double Pulse Lock	Off	On							
6	Double Pulse Unlock	Off	On							
7	Ignition Key Controlled Dome Light	On	Off							
8	Siren Duration	30 sec	60 sec							
9	Factory Alarm Disarm with Trunk Release	On	Off							
10	Factory Alarm Disarm Pulse	Single	Double							
11	Factory Alarm Disarm	With Unlock	Before Unlock	Remote Start Only						

12	Channel #4 Linking	None	Arm	Disarm	Remote Start					
13	Channel #4 Output Type	Button Hold	Latched	Latched Off with ignition	30 sec	60 sec	90 sec			
14	Channel #5 Linking	None	Arm	Disarm	Remote Start					
15	Channel #5 Output Type	Button Hold	Latched	Latched Off with ignition	30 sec	60 sec	90 sec			
16	Channel #6 Linking	None	Arm	Disarm	Remote Start					
17	Channel #6 Output Type	Button Hold	Latched	Latched Off with ignition	30 Sec	60 sec	90 sec			

Menu #3 (Default in Bold)

Item	Feature	Chirps								
		1	2	3	4	5	6	7	8	9
1	Transmission Type	Automatic	Manual							
2	Engine Checking Mode	Wireless Tach	Voltage	Wired Tach	Off					
3	Cranking Duration	0.6 Sec	0.8 sec	1.0 sec	1.2 sec	1.4 sec	1.6 sec	1.8 sec	2.0 sec	4.0 sec
4	Remote Start Run Time	12 Minutes	24 Minutes	60 Minutes						
5	Anti-Grind Output	On	Off							
6	Diesel Start Delay	Wired Wait to Start	Timer 15 sec	Timer 30 sec	Timer 45 sec					
7	ACC Output During Diesel Wait to Start	Off	On							
8	2nd Ignition Behavior	Ignition 1	Accessory							
9	Blue/White Wire Function	Ground When Running	Rear Defog Latch 10 min	Rear Defog Pulse						
10	External Remote Start Trigger Pulse Count	1 Pulse	2 Pulses							
11	Parking Light Behavior	Constant	Flashing							
12	Timer Mode Run Time	12 Minutes	3 Minutes	6 Minutes	9 Minutes					
13	Turbo Timer Run Time	1 Minute	3 Minutes	5 Minutes	10 Minutes					
14	Timer Start Mode	Timer Start	Temp Start							

Access another feature within the same menu

1. RCC switch pushes are sequential. For example, if you start at feature #1, then push and release the valet switch 2 more times, you will be at feature #3 and so on.
2. Press and hold the RCC button after your selection. The siren/horn will chirp to match the feature selected.
3. Use the  and  buttons on the remote to adjust the feature.

Access another menu

1. Press and hold the RCC Button.
2. After 3 seconds, the system will advance to the next menu and confirm with siren/horn chirps.

Exiting the feature program mode

1. Set the ignition key to ON. A long confirmation chirp will be heard if a horn or siren is connected.
2. Automatic after 30 seconds with no input from the RCC button (long chirp).

Feature Programming by PC/Web

All SILENCER Security and Remote Starter Systems with programmable features can be programmed using a PC computer (excluding the 32CS model).

1. A Windows computer with internet support is required. The web interface supports Windows 7 (sp1) thru Windows 10 operating systems (Apple/Mac computers are not supported)
2. The web interface supports Microsoft Edge and Google Chrome browsers.
3. The USB programming adaptor model #ALA-21P is required.
4. Navigate to <https://magnadyne.com/ala-21p-instructions> and register an account.
5. Follow the instructions provided on the webpage and install any dongle drivers or browser updates recommended.

Engine Checking Mode:

The engine checking mode on all SILENCER remote start systems is set at "Wireless Tach" by default. Once all the wiring is complete and correct, the engine can be remote started without any other changes. Engine type, Extreme weather etc. may require a more defined type of engine checking for reliable operation. Use the information enclosed to setup alternate engine checking modes.

Wireless Tach Learning

1. After the installation is completed, use the SILENCER key fob and initiate the remote start sequence.
2. If the engine does not start on the first attempt, let the SILENCER module cycle and attempt to start the engine again. Up to (3) cranking attempts may be needed to start and run the engine.
3. When the engine starts and runs, let it run for at least 30 seconds.
4. Use the SILENCER key fob to shut down the engine.

Wireless Tach is programmed.

Hardwire Tach or Data Tach

- Hardwire Tach requires the Lt.Violet/White wire to be connected to a fuel injector wire or a coil wire.
- Check the data bypass module spec to make sure it will provide a data tach signal. Additional pre-programming of the data module may be required. Refer to the data module instructions.

To learn the tach signal

1. Start the vehicle with the key.
2. Within 5 seconds, press and hold the valet button on the RCC.
3. Once the tach signal is learned, the blue LED on the RCC will light or flash.
 - When tach learning from a hardwire connection, the parking lights will flash one time
 - When tach learning via the data module, the parking lights will flash two times.

Note: Depending on the data bypass module used, you may have to put the bypass module into tach learning mode first before performing the above procedure. Review the instructions of the data bypass module before proceeding.

Remote Start Shutdown Diagnostics

If the remote starter activates but the engine fails to remain running, a diagnostic procedure can be run to try and determine where the fault in the system is.

To Perform Shutdown Diagnostics

1. With the ignition key Off, press and hold the RCC button.
2. While holding the RCC button, turn the ignition key On then Off.
3. Release the RCC button.
4. Press and release the RCC button one time.






The RCC LED will report the last shutdown reason for 1 minute or until the ignition key is turned On again. Compare the LED flashes to the chart below.

Status LED Flashes	Reason for Shutdown
1	Over-Rev Shutdown
2	Runtime Expired
3	Shutdown by Transmitter (or Optional Push button)
4	Low or No RPM Detection
5	Hood Open Shutdown
6	(+) Brake Shutdown
7	(-) Parking Brake Shutdown
9	Low Vehicle Battery (Voltage Checking Mode Only)
10	Wait-to-Start
11	Alarm Trigger During Remote Start

Programming the Digital Shock Sensor:

Follow the enclosed procedure to set the sensitivity of the digital shock sensor.

Note: The pre-warning sensitivity adjusts in proportion to the shock sensitivity.

1. Set the system in disarmed mode.
2. Turn the ignition key ON/OFF 3 times (ending in off).
3. Within 5 seconds, press  +* buttons together for 2 seconds.
The horn/siren will emit (1) long chirp to indicate you are in Shock Sensor Sensitivity Adjustment Mode.
4. To increase sensitivity, press the  button. Each time you press the button  you will hear (1) chirp. When you reach the MAX level adjustment, you will hear 1 short + 1 long chirp.
5. To decrease sensitivity, press the  button. Each time you press the  button you will hear (2) chirps.
When you reach the MIN level adjustment, you will hear 2 short + 1 long chirp.
6. The shock sensor has 20 steps available for adjustment. The default setting is 10.
7. To return the shock sensor back to it's default setting, press and release the button. You will hear 3 chirps.
8. During the process you can test by knocking: 1short chirp – prewarn; 1 Long chirp – TRIGGER


To exit the Shock Sensor Sensitivity Adjustment Mode, turn the ignition key on. You will hear 3 long chirps.

Reset and Deletion:

If the programmable features need to be reset to default or the Wireless Tach feature needs to be reset for re-programming, follow the enclosed procedure.

1. Open at least one door on the vehicle
2. Turn the ignition key to the ON position
3. Within 5 seconds, press and release the RCC button the number of times required below to perform the task.
 - Press and release the RCC button two times to delete all of the programmed remote controls.
 - Press and release the RCC button three times to delete all features programming back to their default settings.

Note: This procedure does not erase Wireless Tach information.

- Press and release the RCC button four times to erase all pre-learned Wireless Tach information.
4. Once you have selected the function you want to perform, press and hold the RCC button. The RCC LED will flash and the horn will chirp (if connected) to confirm the functional step chosen. Do Not release the button.
 5. Press and release the  button of a programmed remote. The horn will chirp to confirm the feature has been reset/deleted.
 6. Release the RCC button and turn off the ignition key. The siren/horn will chirp (if connected) to confirm exit.

GOVERNMENT REGULATION

This device complies with Part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesirable operation.

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

To satisfy FCC RF exposure compliance requirements, the device and its antenna must maintain a separation distance of 20cm or more from the person's body, except for the hands and wrists, to satisfy RF exposure compliance.

WARNING! Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

SILENCER® 662 SSR


© Copyright 2022 Magnadyne Corporation.

All Rights Reserved. No part of this publication may be produced without the expressed written permission of Magnadyne Corporation.



Silencer is a registered trademark of Magnadyne Corporation.

For Warranty Information, please visit our website at www.silencer.com
www.silencer.com | call 310-735-2000 | IM_QS-662SSR_Rev-D

 Documents / Resources

	SILENCER 662SSR Remote Start with Security and Keyless Entry System [pdf] Installation Guide 662SSR, Remote Start with Security and Keyless Entry System, 662SSR Remote Start, 662SSR Remote Start with Security and Keyless Entry System, Remote Start
---	---

References

-  [Magnadyne - Entertaining your RV travels for over 50 years](#)
-  [ALA-21P Instructions](#)