

SILICON LABS CP210x Universal Windows Driver Software Installation Guide

Contents

- [1 CP210x Universal Windows Driver Software](#)
- [2 Product Information:](#)
- [3 Product Usage Instructions:](#)
 - [3.1 Documents / Resources](#)

CP210x Universal Windows Driver Software

Product Information:

The product is a CPAP (Continuous Positive Airway Pressure) device. It is designed to help individuals with sleep apnea breathe more easily during sleep by delivering a continuous flow of air through a mask.

The CPAP device requires drivers to be installed on a computer in order to establish communication between the device and the computer.

Product Usage Instructions:

1. **Important:** Prior to installing the driver, ensure that the CPAP device is unplugged from the computer.
2. If the boxes on the computer do not become colored when plugging in your CPAP device, follow the steps below:
3. Open a web browser and go to <https://www.silabs.com/developers/usb-to-uart-bridge-vcp-drivers>.
4. On the webpage, locate and select the “Downloads” section.
5. Download the “CP210x Universal Windows Driver” by clicking on it.
6. Navigate to your downloads folder and double click on the downloaded file.
7. In the extraction window, click on “Extract All”.
8. Leave the default folder as it is and click “Extract”.
9. In your downloads folder, find the file named “silabser”. There will be two files with this name, but choose the one with an icon of a piece of paper and gear.
10. Right click on the chosen “silabser” file and select “Install” from the menu.

11. A pop-up message will appear indicating that the installation was completed successfully.
12. Reset your computer.
13. Open the MiniCPAP software on your computer.
14. Plug in the CPAP device to the computer.

[View Fullscreen](#)




Drivers Install Instructions ***Prior to installing the driver make sure that the CPAP is unplugged from the computer*** 1. You will only need to do these steps, if the boxes do not become colored when plugging in your CPAP 2. Go to <https://www.silabs.com/developers/usb-to-uart-bridge-vcp-drivers> 3. On this page you'll select downloads

4. Download the CP210x Universal Windows Driver by clicking on it
5. Go to your downloads folder and double click on the file 6. Click Extract All

7. Leave the default folder and click extract
8. Find the file called silabser, there are 2 of them. One will have an icon of a piece of paper and gear. Right click on it and choose Install from the menu.

9. You will get a pop up that the operation completed successfully. 10. Reset the computer, open the MiniCPAP software and plug in the device

Documents / Resources

	<p>SILICON LABS CP210x Universal Windows Driver Software [pdf] Installation Guide CP210x Universal Windows Driver Software, CP210x, Universal Windows Driver Software, CP 210x Universal Windows Driver, Software</p>
---	--