



SILICON LABS Zombie Z-Wave Nodes Software Instruction Manual

 
[Home](#) » [SILICON LABS](#) » [SILICON LABS Zombie Z-Wave Nodes Software Instruction Manual](#) 

Contents


- [1 Removing Zombie Z-Wave nodes](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

Removing Zombie Z-Wave nodes

1. Download SiLabs' Z-Wave Software Development Kit and install it.
2. Plug in your Z-Wave stick
3. Run Z-Wave PC Controller 5.
4. Click the gear icon in the taskbar.

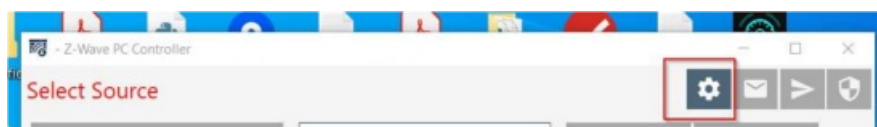


 5. Select the proper COM and click OK.
6. The stick information should show in the second box. Click Network Management.

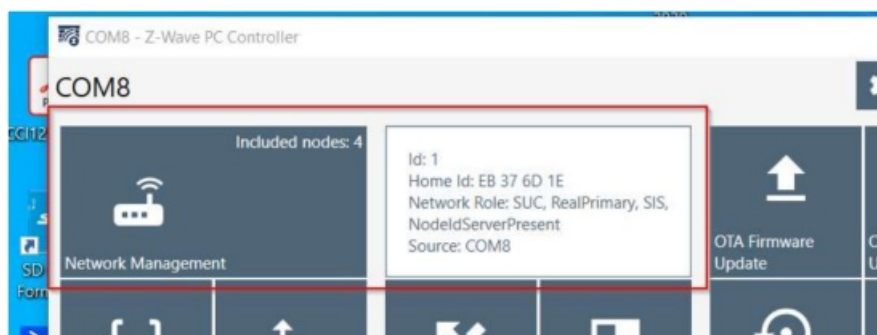

7. Choose a zombie node & click "Is Failed".

8. Then click “Remove Failed”.

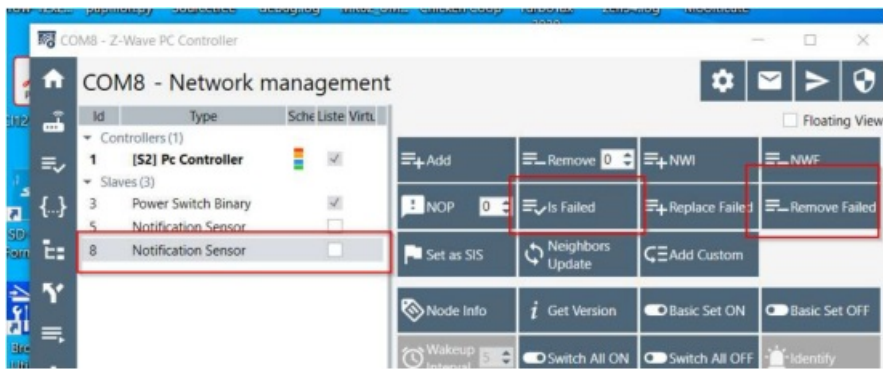

Documents / Resources



[SILICON LABS Zombie Z-Wave Nodes Software](#) [pdf] Instruction Manual
Zombie Z-Wave Nodes Software, Zombie Z-Wave Nodes, Software

Manuals+.