



Silonn SLIM17B Nugget Countertop Sonic Ice Maker Instruction Manual

[Home](#) » [Silonn](#) » Silonn SLIM17B Nugget Countertop Sonic Ice Maker Instruction Manual 

Contents

- 1 Silonn SLIM17B Nugget Countertop Sonic Ice Maker
- 2 IMPORTANT SAFETY INFORMATION
- 3 PRODUCT INTRODUCTION
- 4 CONTROL PANEL INTRODUCTION
- 5 USING YOUR ICE MAKER
- 6 HOW TO USE YOUR ICE MAKER
- 7 CLEANING AND MAINTENANCE
- 8 PRODUCT SPECIFICATIONS
- 9 TROUBLESHOOTING
- 10 Documents / Resources
 - 10.1 References
- 11 Related Posts



Silonn SLIM17B Nugget Countertop Sonic Ice Maker



IMPORTANT SAFETY INFORMATION

To reduce the risk of injury or property damage, please follow these safety precautions.

WARNING

- Voltage power from outlet must match specifications on appliance nameplate.
- This appliance must be grounded.
- Using an extension cord may cause overheating and increase the risk of fire.

If an extension cord MUST be used:

1. Only use an extension cord with grounding plug.
 2. The marked rating of an extension cord must be equal to or greater than the rating of this appliance.
- Do not operate if any component, including the cord or plug, is damaged.
 - Unplug the unit before cleaning by hand.
 - Only responsible and capable adults should operate the ice maker.
 - Do not place the power cord where it could be pulled by children or pose a tripping hazard.
 - Children should not be left unattended near the ice maker during operation.
 - Do not use water that is micro-biologically unsafe or of unknown quality.
 - Do not remove any safety, warning, or product information labels from the unit.
 - Do not touch the evaporator with your hands while the ice maker is operating.
 - Do not plug in or unplug the unit with
 - The unit must be placed and set up according to installation instructions before use. The unit is for indoor household use only.
 - Do not store or use flammable vapors or liquids near the unit.
 - Do not immerse any part of the unit in water.
 - Do not attempt to disassemble, repair, modify or replace any part of the ice maker without permission from Silonn or its affiliates.


WARNING

FIRE OR EXPLOSION HAZARD Flammable Refrigerant This unit contains an isobutane refrigerant, also known as R600a, a natural gas with high environmental compatibility. However, it is also combustible. Adhere to the warnings below to reduce the risk of injury or property damage.

1. When handling, installing, and operating the unit, care should be taken to avoid damage to the refrigerant tubing.
2. Only dispose of the unit according to Federal and Local Regulations.
Contact your local authorities for the environmentally safe disposal of the unit .
3. Keep ventilation openings around the unit's enclosure clear of obstruction.
4. Do not place the unit near heat sources such as an oven.
5. Ensure a minimum of three inches of clearance around the side and back walls of the unit for proper air circulation.
6. Do not place the unit in direct sunlight.

PRODUCT INTRODUCTION


Tip: To pull off the cover, place your fingers in the opening under the left side.

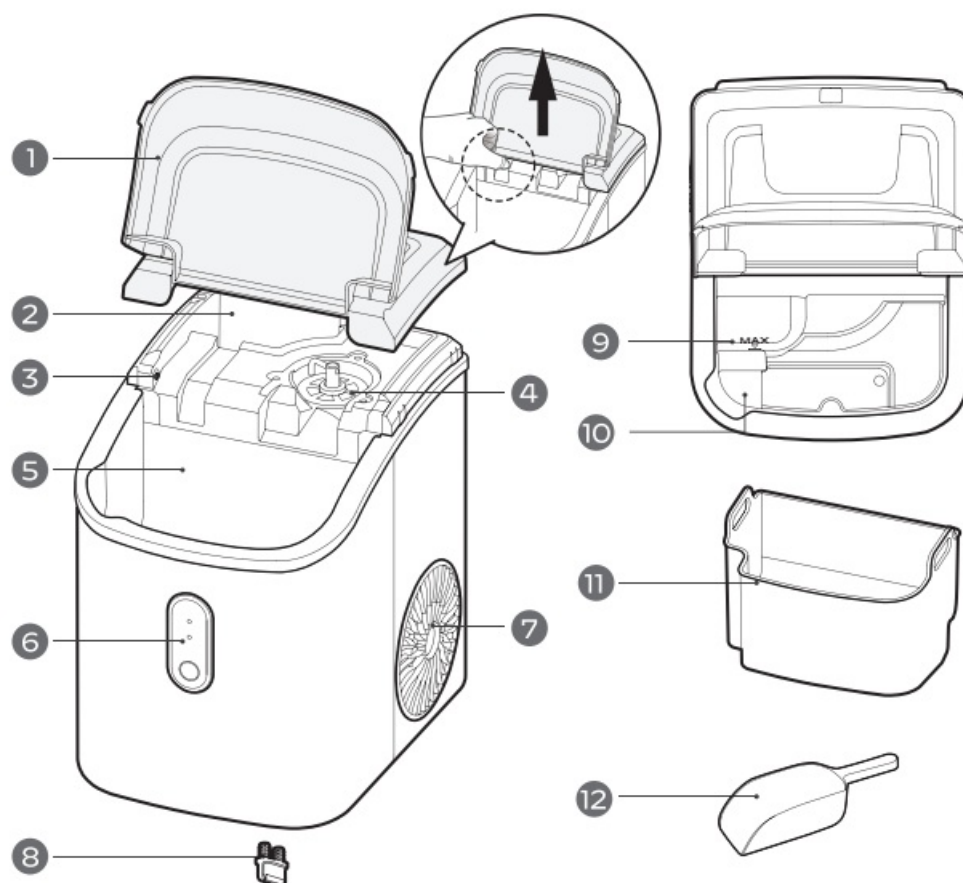

1. Removable Top Cover
2. Secondary Water Reservoir
3. Ice Full Sensor
4. Ice Outlet
5. Water Reservoir
6. Control Panel
7. Air Exhaust Fan

8. Drain Plug
9. Maximum Water Fill Line
10. Filter
11. Ice Basket
12. Ice Scoop

CONTROL PANEL INTRODUCTION

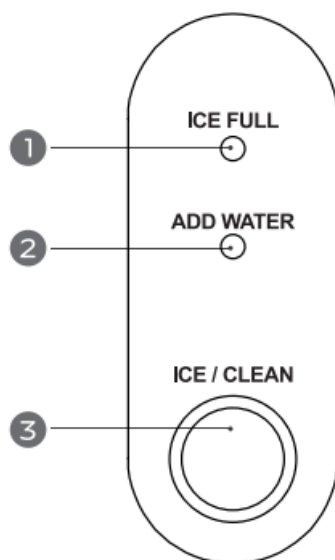

	Key (with indicator light)	Function
1	ICE FULL	The indicator light turns red when the ice basket is full.
2	ADD WATER	The indicator light turns red when the water reservoir needs water.
3	ICE/CLEAN	<p>Short press the “ICE/CLEAN” button to turn on the ice maker and the ring indicator light turns white.</p> <p>Short press the “ICE/CLEAN” button to turn off the ice maker and the ring indicator light turns red.</p> <p>The ring indicator light turns red when the ice maker is in standby mode. In standby mode, long- press the “ICE/CLEAN” button for 5 seconds and the ice maker will switch to self-cleaning mode. The ring indicator light will flash in white consecutively.</p>


USING YOUR ICE MAKER

BEFORE FIRST USE

1. Stand upright for 24hrs. Check for accessories.




2. Use in locations 10°C ~ 32°C.

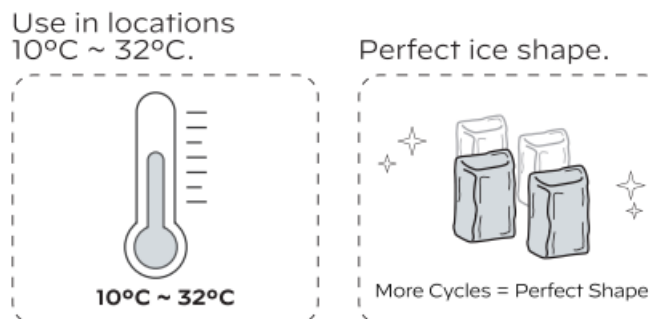

3. What Not To Do!




Do not put your fingers into the ice outlet. The ice maker will detect ice is full and stop working. Wait 3 mins before further operation.

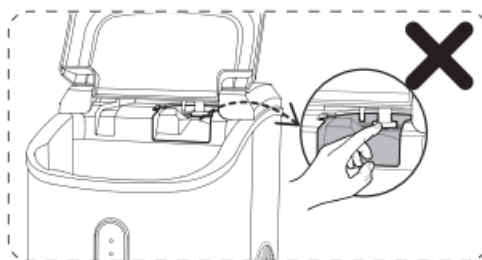

HOW TO USE YOUR ICE MAKER

1. Open cover and remove basket.
2. Pour water, do not exceed the "MAX" water mark.
3. Press the "ICE/CLEAN" button.
4. Wait 6min-8min.


Open cover and remove basket.

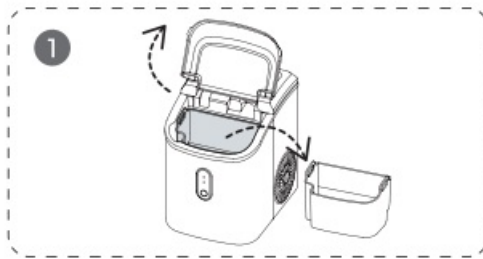


Pour water, do not exceed the "MAX" water mark.




Press the "ICE/CLEAN" button.

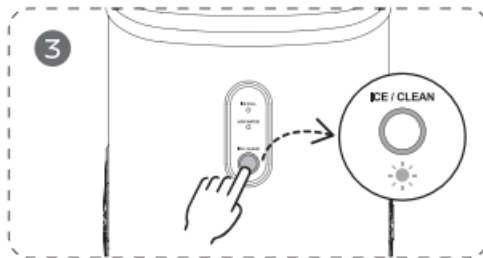


Wait 6min-8min.

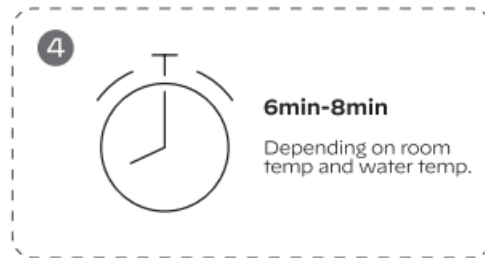

Ice full and ready when "ICE FULL" indicator is on.

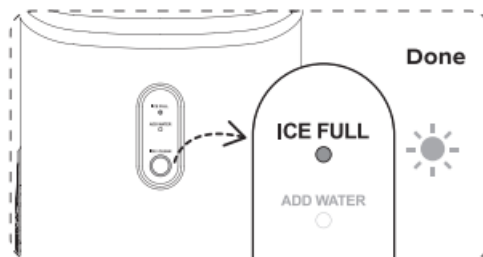



When "ADD WATER" indicator is red, add water and press "ICE/CLEAN".

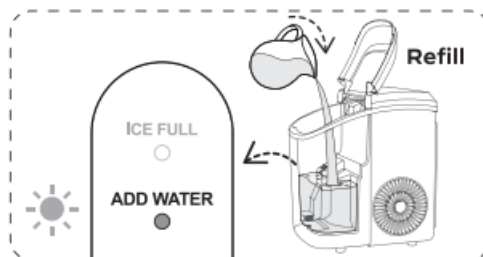


CLEANING AND MAINTENANCE

To keep your ice tasting fresh and the unit looking great, we recommend cleaning the unit once per week.

MANUAL CLEANING

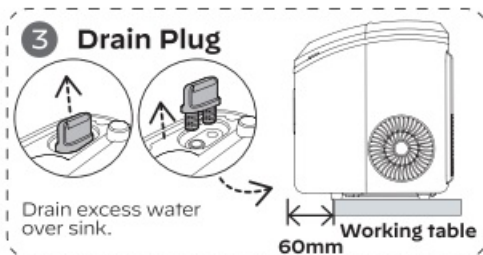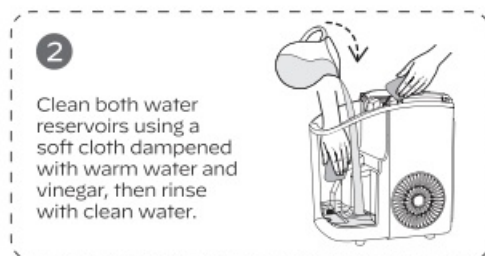

SELF-CLEANING (15-MIN PROCESS)

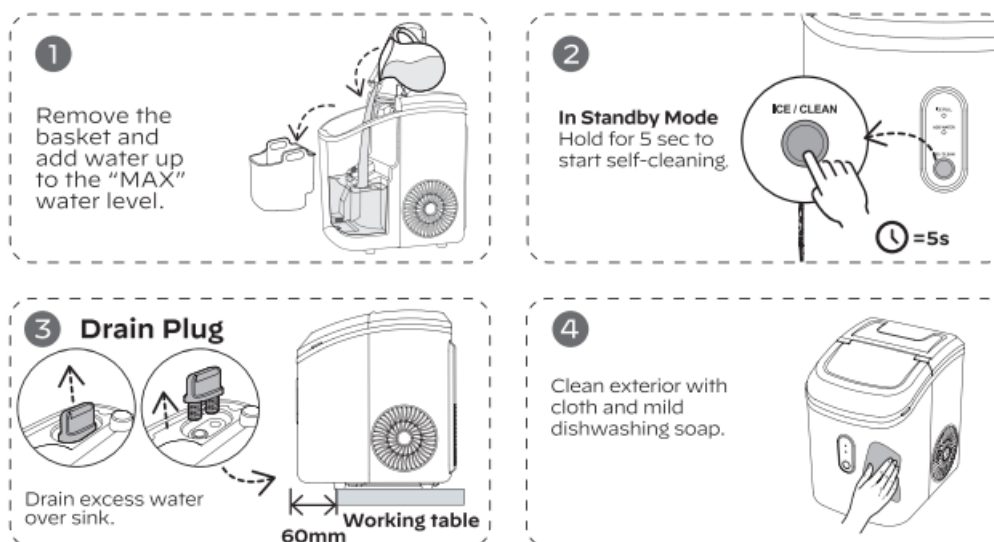

DO's & DON'Ts while cleaning and maintaining

- Do not use organic solvent, boiled water, detergent, strong acid and strong alkali etc. for cleaning.
- When the unit is not to be used for a long duration, drain the water completely & dry the interior.
- Store in a well ventilated area.

PRODUCT SPECIFICATIONS

Model	SLIM17B/SLIM17GI/ SLIM17G	SLIM17T
Voltage/Frequency	115V/60Hz	115V/60Hz
Ice-making Current	2.7A	2.7A
Water Reservoir	I,II	I,II
Ice Basket Capacity	1.76 lbs (0.8KG)	1.76 lbs (0.8KG)
Ice-making Rate	33 lbs per day	33 lbs per day
Ice Shape	Nugget	Nugget
Material	ABS,PP	ABS, PP, Stainless Steel
Net Weight	17.6 lbs (8KG)	17.6 lbs (8KG)
Product Size	11.3 x 8.66 x 12.68 inch (287 x 220 x 322mm)	11.3 x 8.66 x 12.68 inch (287 x 220 x 323mm)

TROUBLESHOOTING

Problem	Possible Causes	Solution
“ADD WATER” light is on.	Low water level or not enough water.	Stop making ice, refill water, press “ICE/CLEAN”, then restart and try again.
“ICE FULL” light is on.	There is too much ice.	Remove some ice.
	If there are no ice cubes, there may be an obstruction or the inner wall needs cleaning.	Remove the obstruction inside or clean the inner wall of the ice storage.
Ring indicator light flashes in red.	The ambient temperature or the water temperature in the inner tank is too high.	Please run the ice maker when the ambient temperature is below 90°F and pour colder water into the tank.
	Refrigerant liquid leakage.	Press the ICE button twice to restart the ice-making program. If this problem shows up again. Please contact the customer service.
	The cover motor is broken.	
	The pipe in the cooling system is blocked.	
Making Ice too slowly.	Hot air outlet has been blocked by something.	Hot air outlet must be guaranteed to have more than 5.9 inches of ventilation distance.
	The water temperature in the inner tank is too high.	Water temperature requirement between 7°C – 32°C.
	Refrigeration system malfunctions.	Please contact customer service.

SHORT AND LONG-TERM WARRANTY INFORMATION

30-DAY LIMITED WARRANTY

To provide customers with a quality shopping and user experience, the unit can be replaced or returned for a full refund within the 30-day period from the date of purchase.

30-DAY TO 1-YEAR LIMITED WARRANTY

After the 30-day warranty has expired, Silonn automatically activates a 1-year warranty from the date of purchase that covers product replacement.

30-DAY TO 1-YEAR WARRANTY LIMITATIONS

This warranty does not cover:


- Any condition resulting from incorrect or inadequate maintenance or care.
- Damage resulting from misuse, abuse, negligence, accidents, or shipping damage.
- Dissatisfaction due to buyer's remorse.

- Normal wear and tear.
- Damages incurred after initial transportation.

support@silonn.com

877-546-8603

Documents / Resources

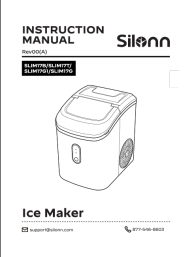 The image shows the cover of the instruction manual for the Silonn SLIM17B. It features the Silonn logo at the top right, the text 'INSTRUCTION MANUAL' and 'SLIM17B' at the top left, and a line drawing of the ice maker unit in the center. Below the drawing, it says 'Ice Maker' and provides contact information: 'support@silonn.com' and '877-546-8603'.	<p>Silonn SLIM17B Nugget Countertop Sonic Ice Maker [pdf] Instruction Manual SLIM17B Nugget Countertop Sonic Ice Maker, SLIM17B, Nugget Countertop Sonic Ice Maker, Countertop Sonic Ice Maker, Sonic Ice Maker, Ice Maker</p>
--	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)