



TA-2302 Toaster Instruction Manual

Contents [[hide](#)]

- [1 TA-2302 Toaster](#)
- [2 Safety instructions](#)
- [3 Description](#)
- [4 Before use](#)
- [5 Operation](#)
- [6 Cleaning and care](#)
- [7 Technical data](#)
- [8 Information on environmental protection](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)


TA-2302 Toaster



Read the operating instructions carefully before using the appliance and keep them in a

safe place for future reference.

Safety instructions

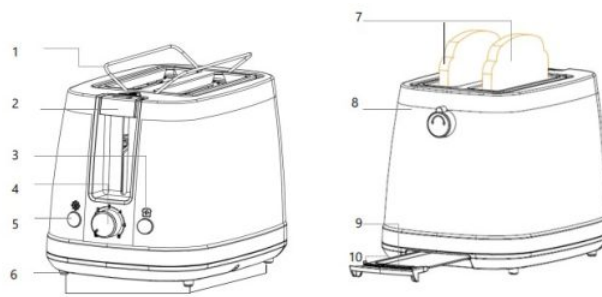
- The device can be used by children aged 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they are supervised or have been instructed in the safe use of the device and understand the resulting hazards.
- Cleaning and user maintenance shall not be performed by children unless they are 8 years or older and under supervision.
- Children under 8 years of age must be kept away from the device and its connecting cable.
- Children are not allowed to play with the device.
- This device is designed for indoor use only. Do not use it outdoors.
- Do not use the device in the bathroom or other rooms with high humidity.
- Never immerse the device, base, or power cord in water or other liquids. **RISK OF ELECTRIC SHOCK!**
- Do not place the device on or near hot surfaces such as stovetops, or near other heat sources such as ovens or radiators, and protect it from direct sunlight .
- Always place the device on flat surfaces.
-  Never place the device on soft, easily flammable surfaces such as carpets, newspapers, placemats, etc.
- Do not place the device near or under flammable objects such as curtains.
- Do not place any objects or other electrical devices on the device.
- Do not place any containers filled with water or other liquid on the device.
- Do not place burning candles on the device.
- Never pull on the power cord when unplugging the appliance; always grasp the plug.
- Never touch the device, the power cable or the power plug with wet or moist hands – risk of electric shock!
- Do not touch the tips of the plug when unplugging the device.
- Do not let the power cord hang down from the work surface.
- Always unplug the power cord,
- if you no longer use the device,
- in the event of disruptions during operation,



- with every cleaning.
- The device is not intended to be used with an external timer or a separate remote control system.
- Modifying or altering the product is not permitted for safety reasons.
- Handle the product carefully. It can be damaged by impacts, blows, or drops from even small heights.
- Do not open the device casing; there are no controls inside.
- Repairs to electrical appliances must be carried out by qualified personnel in order to comply with safety regulations and avoid hazards.
- Regularly check the power cord for damage. If it is damaged, do not operate the device. Take it to an authorized service center for repair.
- Do not move the device when it is in operation.
- Do not leave the device unattended when it is in operation.

Intended use:

- The appliance is designed exclusively for toasting bread/toast slices and for baking pastries on the bun warmer.
- Only one slice of bread/toast may be placed in each slot at a time.
- Bread/toast slices that are topped or spread with food must not be placed in the oven.
- The device may only be operated with the accessories supplied.
- The device is not intended for commercial use, but exclusively for use in the home, in coffee kitchens in offices or workshops as well as in apartment buildings, bed and breakfast establishments, motels or bed and breakfast establishments, etc.
- Any use other than that described in the instructions is considered improper and may result in damage to the device and serious injuries.
- Any damage caused by improper use or failure to follow these operating instructions or the safety instructions will void the warranty.

Description



1. Bun attachment
2. Operating lever
3.  Shutter button with light
4. Control for browning level 1 – 6
5.  Defrost button with light
6. Non-slip rubber feet
7. Roasting slots
8. Lifting/lowering control for bun attachment
9. Crumb tray
10. Cable winding (bottom)

Before use

Unpacking the device:

- Remove the packaging material.
- Packaging materials such as plastic bags or Styrofoam parts are dangerous for children.

Therefore, keep these parts away from children. Danger of choking!

- Many packaging materials are recycled – so please ensure that they are disposed of correctly; you will be making an important contribution to protecting the environment.

Mains connection:

- The device may only be connected to a properly installed, freely accessible protective contact socket.
- The mains voltage must correspond to the voltage indicated on the device's rating plate: 220- 240 V ~ 50-60 Hz.
- The device complies with the directives that are binding for CE marking.

Before first use:

- Check the device and power cord for any damage. If the device is damaged, do not operate it.
- Turn the browning control to level 6 and operate the appliance several times in a row without any toast. Refer to the “Operation” section below. Allow the appliance to cool down between each use. A slight odor and smoke may be emitted. This is normal and will decrease over time.

Ensure adequate ventilation.

Operation

General:

- The operating lever only engages when the device is connected to the power supply.
- The inserted slices of toast are automatically centered when lowered to ensure even browning.
- Do not use slices of toast that are too large (max. 12 x 12 cm) and/or too thick (max. 27 mm).

These can easily jam. If this happens, unplug the appliance, let it cool down, and remove the slice of toast using a blunt object, such as a wooden skewer. Be careful not to touch the heating elements.

- Never cover the roasting slots, especially not during operation!
- Do not insert fingers or other objects (e.g., knives, forks, spoons) into the toasting slots. RISK OF ELECTRIC SHOCK!

-  CAUTION: RISK OF BURNS!

Do not reach into the toasting slots while the appliance is in operation or until the appliance has completely cooled down and is disconnected from the power supply.

Toast bread:

1. Plug the power plug into the socket.
2. Set the desired browning level:

 = Warm-up position


1 = low browning level

6 = high degree of browning

- Place one slice of toast into each slot and press the control lever all the way down.
The trigger will light up and the appliance will begin heating.
- As soon as the desired degree of browning has been reached, the device switches off automatically and the slices of bread are lifted upwards.
- If you want to interrupt the toasting process before it automatically ends, press the release button.
- If you toast several times in a row, we recommend letting the appliance cool down in between (approx. 1 minute) to prevent overheating.

Timetable:


The following table shows the toasting time in minutes and seconds for each selected browning level. This applies to the first toasting cycle; for several consecutive toasting cycles, the toasting time will be adjusted, as the appliance is already preheated:

	1	2	3	4	5	6
0:30	1:20	1:50	2:20	2:50	3:20	3:50


Defrost function :

To toast frozen bread, proceed as described under “Toasting Bread,” but also press the Defrost button. The button’s backlight will turn on.

The toasting time is automatically adjusted to achieve the set browning level for the frozen bread.


Warm-up function : 

You can briefly reheat bread that has already been toasted but has cooled down.

To do this, set the browning control to position .  The bread will warm up briefly.

Baking function :

The device has an integrated bun attachment for baking pastries or rolls.


- Turn the bun warmer control 90° to the right to raise the metal brackets.
- Place pastries or rolls on the folded-up metal brackets. 
- Select a medium browning level and press the control lever down.
- After the appliance has switched off, turn the pastry/roll over and switch it on again.

- When you are no longer using the bun attachment, fold it back down by turning the control 90° to the left.

Important NOTE:

The pastries/rolls must not be placed directly on the toasting slots.

Cleaning and care

 Always unplug the device and allow it to cool down completely before cleaning it. Never immerse the device, including the power cord and plug, in water or other liquids.
RISK OF ELECTRIC SHOCK!

- For cleaning, use a slightly damp, soft cloth. If necessary, a mild detergent can be used.
- Never use harsh, abrasive, alcohol-based, or gasoline-based cleaning agents. Furthermore, avoid using hard brushes or metal cleaning utensils to avoid damaging the surfaces.
- If you do not use the device for an extended period of time, store it clean and dry in the box in a dry, dust-free place out of reach of children.

Crumb tray:

When making toast, crumbs fall through the toasting slots and are collected in the crumb tray in the base of the appliance. Remove the crumbs from time to time. To do so, pull the crumb tray out from the side and reinsert it clean. The appliance must not be operated without the crumb tray.

Cable winding:

There are loops on the bottom of the device for winding the cable. Please fully unwind the cable before using the device.

After the toasting process has finished and the appliance has cooled down, the cable can be rewound.

Technical data

Operating voltage :	AC 2 20-240 V ~ 50-60Hz
---------------------	-------------------------

Power:	800 – 900 watt
Device dimensions (WxHxD):	25.7 x 18 x 17.1 cm
Weight:	approx. 970 g

When off, the device has a power consumption of 0.00 watts.

*Typing errors, design and technical changes reserved;

Information on environmental protection



At the end of its service life, this product should not be disposed of with normal household waste. Instead, it must be handed over to a collection point for the recycling of electrical and electronic equipment. The symbol on the product, in the instruction manual, or on the packaging indicates this.

The materials are recyclable according to their labeling. By reusing, recycling, or otherwise disposing of old devices, you are making an important contribution to protecting our environment.

Please ask your local council for the responsible disposal facility.

Warranty / Guarantee

In addition to the statutory warranty, we grant a 24-month warranty on this device, calculated from the date of issue of the invoice or delivery bill. Within this warranty period, all manufacturing and/or material defects will be repaired and/or replaced free of charge, or (at our discretion) exchanged for an item of equal value and in perfect condition, on presentation of the invoice or delivery bill. The prerequisite for such a guarantee is that the appliance has been handled and maintained properly.

Claims beyond our warranty services are excluded. In justified cases, the guarantee only covers the repair of the appliance. Further claims and liability for any consequential damage are excluded. No guarantee can be given for parts that are subject to natural wear and tear or for damage caused by impact, incorrect operation, exposure to moisture or other external influences or by intervention by unauthorized third parties. In the event of a warranty claim, the appliance must be returned to your specialist dealer together with the invoice or delivery bill.

Warranty:

The warranty is expressly stipulated by law and only applies to defects that existed at the time the goods were handed over. The claim is always directed against the contractual partner (dealer), who must remedy the defect free of charge (for the consumer) or arrange for it to be remedied.

Guarantee:

The guarantee is a voluntary, contractual promise by the manufacturer (general importer) for which there are no minimum requirements in terms of content or form. However, many warranties only cover part of the costs incurred in remedying defects, but they usually apply to all defects that occur within a certain period.


Silva-Schneider Handelsges.m.b.H.

Karolingerstraße 1

A-5020 Salzburg



office@silva-schneider.at

Documents / Resources

	<p>Silva homeline TA-2302 Toaster [pdf] Instruction Manual</p> <p>TA-2302, TA-2302 Toaster, TA-2302, Toaster</p>
---	--

References

- [User Manual](#)

 silva homeline  silva homeline, TA-2302, TA-2302 Toaster, Toaster

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.