

SILVER MONKEY SMXC036 Fan Controller



SILVER MONKEY SMXC036 Fan Controller User Manual

[Home](#) » [SILVER MONKEY](#) » SILVER MONKEY SMXC036 Fan Controller User Manual 

Contents

- [1 SILVER MONKEY SMXC036 Fan Controller](#)
- [2 Overview](#)
- [3 Safety Information](#)
- [4 Package Contents](#)
- [5 Intended Use And Construction](#)
- [6 How To Use The Product](#)
- [7 Specification](#)
- [8 Warranty And Technical Support](#)
- [9 Disposal And The EU Compliance Statement](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)




SILVER MONKEY SMXC036 Fan Controller



Carefully read these instructions before using the product. Keep it for future reference.

Overview

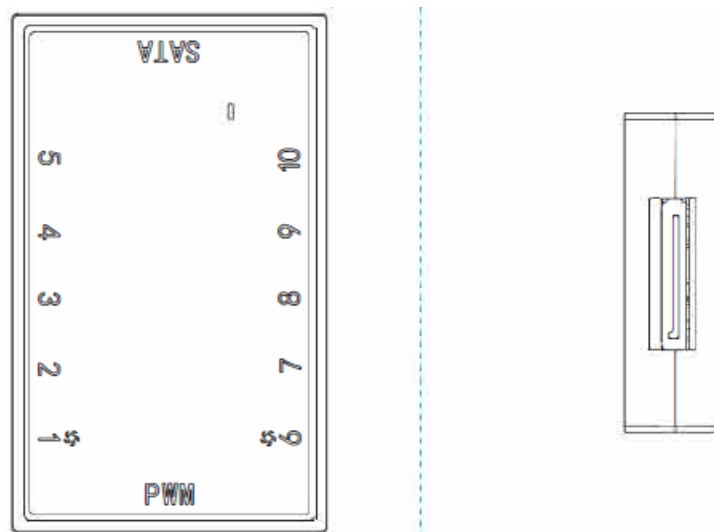

Safety Information

- Avoid direct contact with water and other liquids.
- Do not use the device in a humid environment.
- Keep the device out of the reach of children They may swallow some parts.
- Use the device only by the operating instructions.
- If the device stops working properly – contact us.


Package Contents

- Hub
- 3x PWM signal cable
- 1x SATA extension cable
- 3M foam
- User manual

Intended Use And Construction

SMX Aspre is a device designed to efficiently manage the speed of up to 10 fans.

- **A.** PWM signal connectors – used to transmit the signal and control the fan speed
- **B.** SATA connector – power supply connector
- **C.** PWM 4-pin connectors – used to connect fans

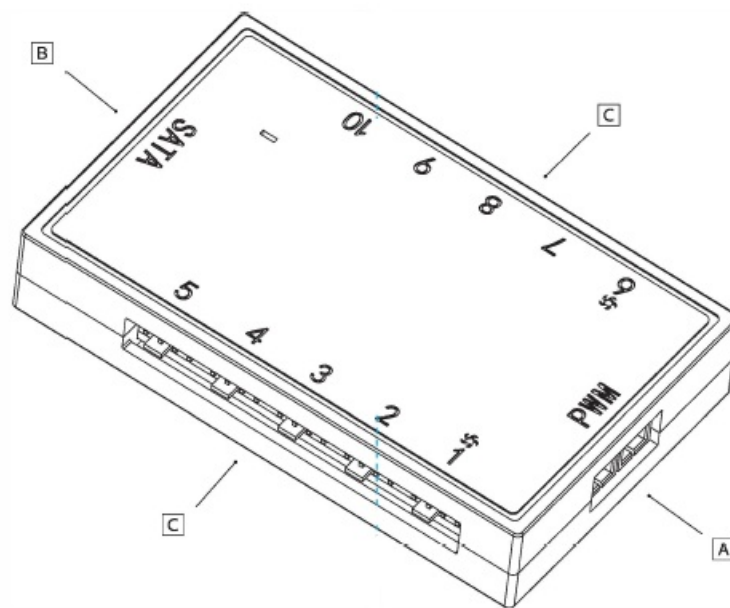

How To Use The Product

NOTE:

Before you start assembling the HUB, make sure the computer is turned off and unplugged from the power supply.

1. Connect the PWM cables of the fans to the corresponding connectors on the HUB **[C]**.
2. Connect the SATA cable to the corresponding connector on the HUB **[B]** and to the power supply connector on the computer.
3. Connect the supplied PWM cable to the appropriate HUB connector **[A]** and to the connector on the motherboard*.
 - The PWM signals you set are transmitted synchronously to all fans.
 - Channel 1 (white connector) controls fans 1 to 5, and channel 2 (black connector) controls fans 6 to 10.
 - If you use a dual or combined PWM cable, you can conveniently control all connected fans from one PWM port on the motherboard.

Most often this is the SYS_Fan, but we recommend checking the motherboard manufacturer's manual.

Specification

SMXC036	
Expansion ports	10
Power supply voltage	12 V
SATA power cable length	500 mm
PWM cable length	700 mm
Rated current	5 V
Max.voltage	5 V
Dimension	135.5 x 52.5 x 18.3 mm
Weight	80 g

Warranty And Technical Support

- Your product is covered by a 24-month manufacturer's warranty.
- For more information go to www.silvermonkey.com/support.
- If you have questions about using the product – contact us at kontakt@silvermonkey.com.

Manufacturer:

Silver Monkey sp. z o.o., ul. Twarda 18, 00-105 Warszawa, Poland.

Disposal And The EU Compliance Statement

- We, as the manufacturer of this equipment, declare that it meets the rules of the appropriate EU directives. If you need a copy of the EU Declaration of Conformity – contact us.
- Do not throw this equipment out with other household waste. This equipment is made from materials that may be harmful to the environment and human health if the product is disposed of in the wrong way. When you need – to throw away an old product, take it to a designated collection point.

Documents / Resources



[SILVER MONKEY SMXC036 Fan Controller](#) [pdf] User Manual
SMXC036 Fan Controller, SMXC036, Fan Controller, Controller

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.