

SILVERCREST®

HG10728

2

Slice

Toaster



SILVERCREST HG10728 2 Slice Toaster User Manual

[Home](#) » [SILVERCREST](#) » SILVERCREST HG10728 2 Slice Toaster User Manual 

Contents

- [1 SILVERCREST HG10728 2 Slice Toaster](#)
- [2 Specifications](#)
- [3 FAQs](#)
- [4 Warnings and symbols used](#)
- [5 Introduction](#)
- [6 Description of parts](#)
- [7 Technical data](#)
- [8 Safety instructions](#)
- [9 Operation](#)
- [10 Cleaning and storage](#)
- [11 Before first use](#)
- [12 Cleaning and care](#)
- [13 Troubleshooting](#)
- [14 Warranty](#)
- [15 Documents / Resources](#)
 - [15.1 References](#)

SILVERCREST®

SILVERCREST HG10728 2 Slice Toaster



Specifications

- **Product Name:** 2-Slice Toaster STK 750 A2
- **Type:** 2-Slice Toaster
- **Model:** IAN 466153_2404
- **Input Voltage:** Not specified
- **Power Consumption:** Not specified
- **Protection Class:** Not specified
- **Certification:** CE mark for conformity with relevant EU directives

FAQs












- **Q: What should I do if the toaster is not toasting evenly?**
 - **A:** Ensure that the browning level is set evenly on both sides and that the bread slices are placed symmetrically in the toasting slots for consistent results.
- **Q: Can I use the toaster for purposes other than making toast?**
 - **A:** No, the toaster is designed specifically for making toast and should not be used for any other purposes

to avoid damage or hazards.

- **Q: How do I clean the crumb tray?**

- **A:** Regularly remove and clean the crumb tray to prevent buildup. Slide out the crumb tray from the bottom of the toaster, empty it, and wipe it clean before reinserting it.

Warnings and symbols used

Warnings and symbols used			
The following warnings are used in the user manual, short manual and on the packaging:			
	DANGER! This symbol in combination with the signal word "Danger" marks a high-risk hazard that if not prevented could result in death or serious injury.		Alternating current/voltage
		Hz	Hertz (supply frequency)
		W	Watts
	WARNING! This symbol in combination with the signal word "Warning" marks a medium-risk hazard that if not prevented could result in death or serious injury.		NOTE: This symbol in combination with "Note" provides additional useful information.
			Use the product in dry indoor spaces only.
	CAUTION! This symbol in combination with the signal word "Caution" marks a low-risk hazard that if not prevented could result in minor or moderate injury.		Danger – risk of electric shock!
			Warning – hot surface!
	Symbol for protective earth		Food safe This product has no adverse effect on taste or smell.
CE	CE mark indicates conformity with relevant EU directives applicable for this product.		Safety information Instructions for use

Introduction

- We congratulate you on the purchase of your new product. You have chosen a high-quality product. The instructions for use are part of the product. They contain important information concerning safety, use, and disposal.
- Before using the product, please familiarise yourself with all of the safety information and instructions for use.
- Only use the product as described and for the specified applications. If you pass the product on to anyone else, please ensure that you also pass on all the documentation with it.

Intended use

- This product is designed for making toast. Do not use the product for any other purpose.
- This product is only intended for private household use, not for commercial purposes.
- The manufacturer accepts no liability for damages caused by improper use.

Scope of delivery

After unpacking the product, check if the delivery is complete and if all parts are in good condition. Remove all packaging materials before use.

- 1 2-slice toaster
- 1 Short manual

Description of parts

1. Toasting slots



2. (Stop button)

3. Mains cord with mains plug

4. Cord rewind

5. Crumb tray

6. Feet

7. Control dial (for browning level adjustment)

8. Lever

Technical data

Input voltage:	220–240 V~, 50–60 Hz
Power consumption:	750 W
Power consumption in off mode:	0 W
Protection class:	I
Certification:	
– HG10728:	GS (TÜV SÜD)
– HG10728-BS:	–

Safety instructions

- BEFORE USING THE PRODUCT, FAMILIARISE YOURSELF WITH ALL OF THE SAFETY INFORMATION AND INSTRUCTIONS FOR USE! WHEN PASSING THIS PRODUCT ON TO OTHERS, ALSO INCLUDE ALL THE DOCUMENTS!
- In the case of damage resulting from non-compliance with these operating instructions, the warranty claim

becomes invalid! No liability is accepted for consequential damage! In the case of material damage or personal injury caused by incorrect handling or noncompliance with the safety instructions, no liability is accepted!

Children and persons with disabilities

- **WARNING!** RISK OF LOSS OF LIFE OR ACCIDENT TO INFANTS AND CHILDREN!
- Never leave children unsupervised with the packaging material. The packaging material represents a danger of suffocation.
- Children frequently underestimate the dangers.
- Always keep children away from the packaging material.
- This product can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.
- Children shall not play with the product.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the product and its cord out of reach of children less than 8 years.

Intended use

- **WARNING!** Misuse may lead to injury. Use this product solely by these instructions. Do not attempt to modify the product in any way.

Electrical safety

- **DANGER!** Risk of electric shock! Never attempt to repair the product yourself. In case of malfunction, repairs are to be conducted by qualified personnel only.
- **DANGER!** Risk of burns! During use the product gets hot. Do not touch the product while in use nor immediately after use.
- **DANGER!** Risk of burns if non-standard toast is used. Due to the smaller size or shape, there is a risk of touching hot parts when removing the toasted toast or bread.
- **WARNING!** Risk of electric shock! Do not immerse the product in water or other liquids. Never hold the product under running water.
- **WARNING!** Risk of electric shock! Never use a damaged product. Disconnect the product from the mains supply and contact your retailer if it is damaged.
- If you notice any smoke or unusual noises, immediately disconnect the product from the mains supply. Have the product checked by a specialist before continued use.
- In the event of a fire, first, pull the plug from the mains outlet or disconnect the product from the mains supply before taking appropriate firefighting measures.
- The product is not to be used if it has been dropped if there are visible signs of damage.
- The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.
- Before connecting the product to the mains supply, check that the voltage and current rating correspond with the mains supply details shown on the product's rating label.
- Regularly check the mains plug and the mains cord for damages. If the mains cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

- Protect the main cord against damage. Do not let it hang over sharp edges, do not squeeze or bend it. Keep the main cord away from hot surfaces and open flames.

Operation

- The product must not be left unattended while it is connected to the supply mains.
- Do not move the product while it is in operation.
- Do not place the product on hot plates (gas, electric, coal cooking range, etc.). Operate the product on a level, stable, clean, heat-resistant, and dry surface.
- Do not cover the product while it is in use or shortly after use when it is still hot.
- The product is not intended to be operated by means of an external timer or a separate remote control system.

Cleaning and storage

- **WARNING!** Risk of injury! Disconnect the product from the mains supply before cleaning work and when not in use.
- Always clean the crumb tray after use (see “Cleaning and Care”).
- Do not store the hot product in a cupboard or in the packaging.
- Do not pull the mains plug out of the electrical outlet by the mains cord.
- Protect the product, its mains cord and mains plug against dust, direct sunlight, dripping, and splashing water.
- Store the product in a cool, dry place, protected from moisture and out of the reach of children.
- Protect the product against heat. Do not place the product close to open flames or heat sources such as stoves or heating appliances.

Before first use

1. Remove the packaging material.
2. Clean the product (see “Cleaning and Care”).

NOTES:

- The first few times the product is heated up, a faint odor may be present. Ensure sufficient ventilation in the area.
- Discard the first set of toasted bread slices.
- Set the browning level to at least level 4 for the first use.

Operation

1. Unwind the mains cord [3] from the cord and rewind [4] before use.
2. Connect the mains plug [3] to a suitable mains socket.

Off mode

- The product enters off mode once you connect the mains plug [3] to a mains socket while the lever [8] remains

in its initial position (up).

- The product remains in off mode until you press down the lever [8].
- When the toasting process is finished, the lever [8] moves upwards automatically. The product returns to off mode.

Toasting bread

• NOTES:

- The toasting result depends, among other things, on the type, moisture, and freshness of the bread.
- Dry or white bread browns quicker than fresh or dark bread.
- Insert the slice of bread in the center of the toasting slot [1] to achieve even browning.
- We suggest browning level 3 for golden browning when toasting 2 slices of bread.
- Browning level 6 causes a very strong browning. Thick bread slices may cause smoke to form. In this



case, stop the toasting process: Press [2].

- If you only want to toast a single slice of bread, use a lower browning level than for toasting 2 slices of bread.
 1. Insert a slice of bread into each toasting slot [1].
 - Do not use bread slices that are too thick.
 - The bread must not be jammed in the toast slot.
 2. Set the browning level: Set the control dial [7] to one of the browning levels, from 1 to 6.
 - 1 = very light toasting/light browning
 - 6 = very strong toasting/very strong browning
 3. Press down the lever [8] until it clicks into place. The bread is lowered. The product switches on.
 - **NOTE:** The lever [8] only engages when the mains plug [3] is connected to a mains socket.
 4. When the toasting process is finished, the bread is lifted. The lever [8] moves upwards.
 5. Remove the bread from the toasting slot [1].

Cancel toasting



- Press [2]. The lever [8] moves upwards.

Cleaning and care

- **DANGER!** Risk of electric shock! Before cleaning: Always disconnect the product from the main supply.
- **DANGER!** Risk of burns! Do not clean the product right after the operation. Let the product cool first.
- **WARNING!** Do not immerse the product's electrical components in water or other liquids. Never hold the product under running water.

Part	Cleaning method
o Housing	<ul style="list-style-type: none"> o Wipe down the housing with a slightly damp cloth. o Do not let any water or other liquids enter the product interior.
o Crumb tray [5	<ul style="list-style-type: none"> o Pull out the crumb tray [5. o Remove the crumbs. Wipe out the crumb tray 5[with a damp cloth . o Reinsert the crumb tray [5 .

Storage

- **DANGER!** Risk of burns! Do not store the product right after operation. Let the product cool first.
- Clean the product before storage.
- Run the mains cord [3] around the cord and rewind [4].
- Store the product in the original packaging when it is not in use.
- Store the product at a dry location out of the reach of children.

Troubleshooting

Problem	Possible Cause/Solution
Bread too strongly browned.	Use the control dial 7[to set a lower browning level .
Bread gets stuck in the product.	Disconnect the mains plug [3 . Let the product cool . Use a wooden spatula to remove the bread from the toasting slot [1 . Do not touch the heating elements.

Problem	Possible cause/Solution
Heavy smoke	The crumb tray [5 may be full . Disconnect the mains plug [3 . Let the product cool. Clean the crumb tray .

Disposal

- The packaging is made entirely of recyclable materials, which you may dispose of at local recycling facilities.



- Observe the marking of the packaging materials for waste separation, which are marked with abbreviations (a) and numbers (b) with the following meaning: 1–7: plastics/20–22: paper and fibreboard/80–98: composite materials.

Product:



- Contact your local refuse disposal authority for more details on how to dispose of your worn-out product.



- To help protect the environment, please dispose of the product properly when it has reached the end of its useful life and not in the household waste. Information on collection points and their opening hours can be obtained from your local authority.

Warranty

- The product has been manufactured to strict quality guidelines and meticulously examined before delivery. In the event of material or manufacturing defects, you have legal rights against the retailer of this product. Your legal rights are not limited in any way by our warranty detailed below.
- The warranty for this product is 3 years from the date of purchase. The warranty period begins on the date of purchase. Keep the original sales receipt in a safe location as this document is required as proof of purchase.
- Any damage or defects already present at the time of purchase must be reported without delay after unpacking the product.
- Should the product show any fault in materials or manufacture within 3 years from the date of purchase, we will repair or replace it – at our choice – free of charge to you. The warranty period is not extended as a result of a claim being granted. This also applies to replaced and repaired parts.
- This warranty becomes void if the product has been damaged, used or maintained improperly.
- The warranty covers material or manufacturing defects. This warranty does not cover product parts subject to normal wear and tear, thus considered consumables (e.g. batteries, rechargeable batteries, tubes, cartridges), nor damage to fragile parts, e.g. switches or glass parts.

Warranty claim procedure

- To ensure quick processing of your claim, observe the following instructions:
- Make sure to have the original sales receipt and the item number (IAN 466153_2404) available as proof of purchase.
- You can find the item number on the rating plate, an engraving on the product, on the front page of the instruction manual (bottom left), or as a sticker on the rear or bottom of the product.
- If functional or other defects occur, contact the service department listed below either by telephone or by e-mail.
- Once the product has been recorded as defective you can return it free of charge to the service address that will be provided to you.
- Ensure to enclose the proof of purchase (sales receipt) and a short, written description outlining the details of the defect and when it occurred.

Service

- **Service Great Britain**

- **Tel.:** 0800 0569216
- **E-Mail:** owim@lidl.co.uk.
- OWIM GmbH & Co. KG
- Stiftsbergstraße 1
- 74167 Neckarsulm
- GERMANY
- **Model No.:** HG10728
- **Version:** 09/2024



- www.lidl-service.com.

Documents / Resources

 <p>SILVERCREST</p> <p>2-SLICE TOASTER STK 750 A2</p> <p>STK 750 A2</p> <p>IAN466153_2404</p>	<p>SILVERCREST HG10728 2 Slice Toaster [pdf] User Manual</p> <p>STK 750 A2, IAN466153_2404, HG10728 2 Slice Toaster, HG10728, 2 Slice Toaster, Slice Toaster, Toaster</p>
--	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.