

**SILVERCREST®  
STD  
870 A1  
Digital  
Toaster**



## SILVERCREST STD 870 A1 Digital Toaster Instruction Manual

[Home](#) » [SILVERCREST](#) » SILVERCREST STD 870 A1 Digital Toaster Instruction Manual 

### Contents

- 1 SILVERCREST STD 870 A1 Digital Toaster
- 2 Product Information
- 3 Product Usage Instructions
- 4 FAQ
- 5 List of pictograms used
- 6 Introduction
- 7 Intended use
- 8 Scope of delivery
- 9 Description of parts
- 10 Technical data
- 11 Safety instructions
- 12 Operation
- 13 Cleaning and storage
- 14 Before first use
- 15 Cleaning and care
- 16 Storage
- 17 Troubleshooting
- 18 Disposal
- 19 Warranty
- 20 Service
- 21 Documents / Resources
  - 21.1 References

**SILVERCREST®**



## Specifications

- **Product Name:** DIGITAL TOASTER STD 870 A1
- **Model:** IAN 483099\_2401
- **Power Consumption:** Variable based on settings
- **Input Voltage:** Refer to the manual for details
- **Power Consumption in Off Mode:** Refer to the manual for details
- **Protection Class:** Refer to the manual for details
- **Certification:** CE Marked

## Product Information

- The DIGITAL TOASTER STD 870 A1 is designed for making toast specifically. It is intended for use in dry indoor spaces only and is suitable for private household use.
- The product should not be used for commercial purposes to prevent damages caused by improper use.

## Scope of Delivery:

- Upon unpacking, ensure all parts are present and in good condition. Remove all packaging materials before using the product.

## Description of Parts:

- Refer to the illustrations in the manual to familiarize yourself with all the functions of the product.

## Safety Instructions:

- Before using the product, read and understand all safety information and instructions provided. Make sure to

include all documents when passing on the product to others.

- Non-compliance with operating instructions may void warranty claims and can lead to material damage or personal injury for which no liability is accepted.

### **Children and Persons with Disabilities**

- Children should not play with the product. Cleaning and maintenance should not be performed by children under 8 years old unless supervised. Keep the product and its cord out of reach of children under 8 years old.

## **Product Usage Instructions**

### **Intended Use**

- The DIGITAL TOASTER is specifically designed for making toast. Avoid using it for any other purpose.

### **Installation**

- Place the toaster in a dry indoor space with proper ventilation.
- Ensure it is placed on a stable surface away from water sources.

### **Power Connection**

- Refer to the manual for the correct input voltage requirements.
- Connect the toaster to a compatible power source.

### **Toasting Process**

- Insert the bread slices into the toaster slots. Select the desired toasting level or settings based on your preference. Start the toasting process by pressing the appropriate buttons.

### **Safety Precautions**

- Avoid touching hot surfaces during and after the toasting process. Always unplug the toaster when not in use.

### **Cleaning and Maintenance**

- Ensure the toaster is unplugged before cleaning. Use a damp cloth to clean the exterior surfaces. Regularly remove crumbs from the crumb tray for efficient operation.













## **FAQ**

- **Q: Can I use the toaster for purposes other than making toast?**
  - **A:** No, the toaster is specifically designed for making toast and should not be used for other purposes.
- **Q: What should I do if my toaster gets damaged?**

- **A:** In case of damage, stop using the toaster immediately and refer to the warranty claim procedure in the manual for assistance.

## List of pictograms used

### DIGITAL TOASTER

	<b>DANGER!</b> – Designating a hazard with high risk, which will result in death or severe injury if not avoided (e.g. risk of suffocation)		Alternating current/voltage
		<b>Hz</b>	Hertz (supply frequency)
		<b>W</b>	Watts
	<b>WARNING!</b> – Designating a hazard with moderate risk, which can result in death or severe injury if not avoided (e.g. risk of electric shock)		<b>INFO:</b> This symbol with the “Info” signal word offers additional useful information.
			Use the product in dry indoor spaces only.
	<b>CAUTION!</b> – Designating a hazard with low risk, which could result in minor or moderate injury if not avoided (e.g. risk of scalding)		Danger – risk of electric shock!
			Warning – hot surface!
	Symbol for protective earth		Food safe This product has no adverse effect on taste or smell.
	CE mark indicates conformity with relevant EU directives applicable for this product.		Safety information Instructions for use

## Introduction

- We congratulate you on the purchase of your new product. You have chosen a high-quality product. The instructions for use are part of the product.
- They contain important information concerning safety, use and disposal. Before using the product, please familiarise yourself with all of the safety information and instructions for use.
- Only use the product as described and for the specified applications. If you pass the product on to anyone else, please ensure that you also pass on all the documentation with it.

## Intended use




- This product is designed for making toast. Do not use the product for any other purpose.
- This product is only intended for private household use, not for commercial purposes.
- The manufacturer accepts no liability for damages caused by improper use.


## Scope of delivery

- After unpacking the product, check if the delivery is complete and if all parts are in good condition. Remove all packaging materials before use.
- 1 Digital toaster
- 1 Short manual

## Description of parts

Before reading, unfold the page containing the illustrations and familiarise yourself with all the functions of the product.


1. Toasting slots
2. Timer display
3. – (Button to decrease the browning level)
4. + (Button to increase the browning level)
5.  (Defrost button with indicator light)
6.  (Stop button with indicator light)
7.  (Reheat button with indicator light)
8. Bread roll warmer
9. Feet
10. Cord rewind
11. Cord clamp
12. Mains cord with mains plug
13. Crumb tray
14. Fold-out lever (for the bread roll warmer)
15. Browning level display
16. Lever

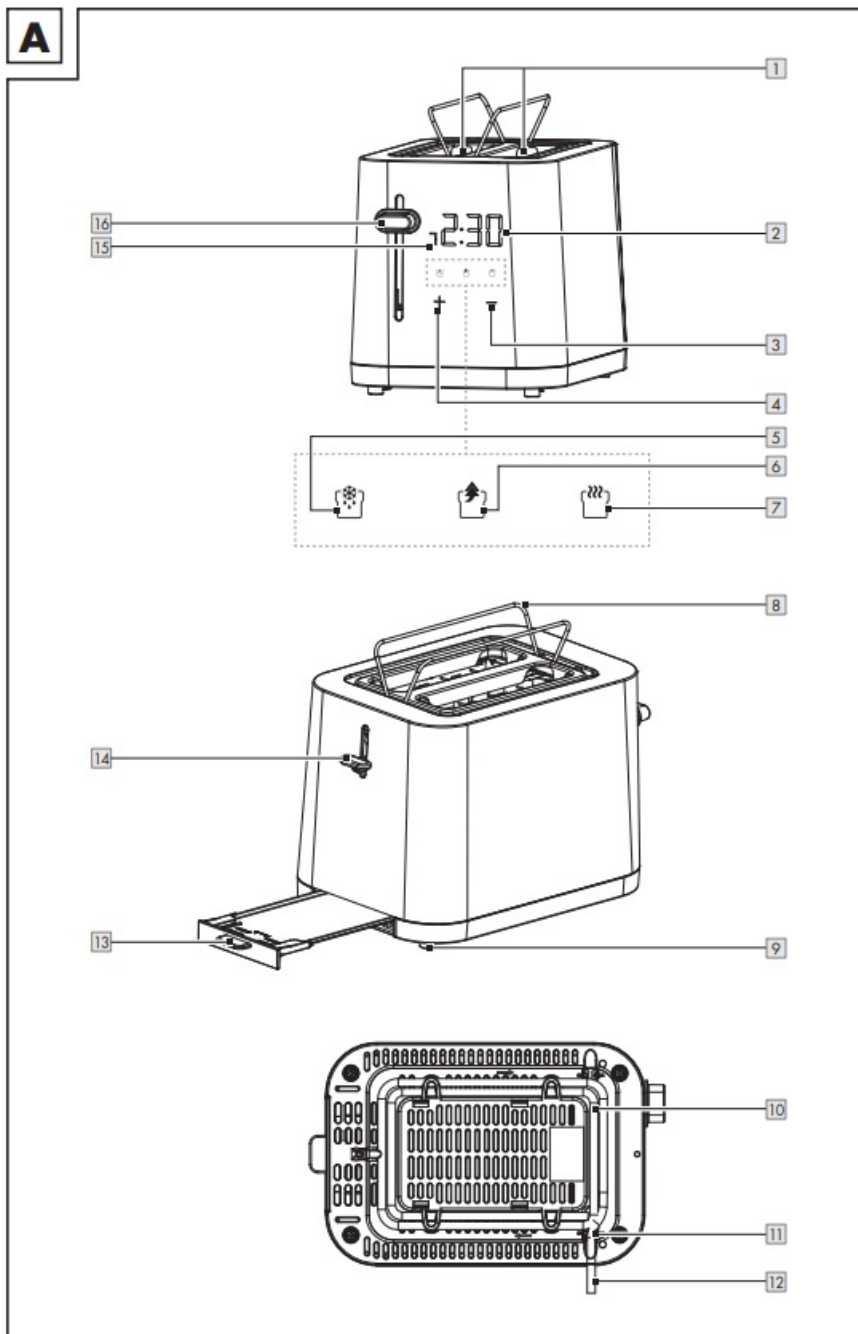


## Technical data


Input voltage:	220–240 V~, 50–60 Hz
Power consumption:	730–870 W
Power consumption in off mode:	0 W
Protection class:	I
Certification:	GS (TÜV Rheinland)

## Safety instructions






-  BEFORE USING THE PRODUCT, FAMILIARISE YOURSELF WITH ALL OF THE SAFETY INFORMATION AND INSTRUCTIONS FOR USE!
- WHEN PASSING THIS PRODUCT ON TO OTHERS, ALSO INCLUDE ALL THE DOCUMENTS!
- In the case of damage resulting from non-compliance with these operating instructions, the warranty claim becomes invalid! No liability is accepted for consequential damage!
- In the case of material damage or personal injury caused by incorrect handling or non-compliance with the safety instructions, no liability is accepted!
- Children and persons with disabilities

-  **WARNING!** RISK OF LOSS OF LIFE OR ACCIDENT TO INFANTS AND CHILDREN! Never leave children unsupervised with the packaging material.
- The packaging material represents a danger of suffocation.
- Children frequently underestimate the dangers. Always keep children away from the packaging material.
- This product can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the product in a safe way and understand the hazards involved.
- Children shall not play with the product.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the product and its cord out of reach of children less than 8 years old.

### Intended use

-  **WARNING!** Misuse may lead to injury. Use this product solely in accordance with these instructions. Do not attempt to modify the product in any way.

### Electrical safety

-  **WARNING!** Risk of electric shock! Never attempt to repair the product yourself. In case of malfunction, repairs are to be conducted by qualified personnel only.
-  **WARNING!** Risk of burns! During use the product gets hot. Do not touch the product while in use or immediately after use.
-  **WARNING!** Risk of burns! Do not use non-standard toast. Due to the smaller size or shape, there is a risk of touching hot parts when removing the toasted toast or bread.
-  **WARNING!** Risk of electric shock! Do not immerse the product in water or other liquids. Never hold the product under running water.
-  **WARNING!** Risk of electric shock! Never use a damaged product. Disconnect the product from the mains supply and contact your retailer if it is damaged.
- The product is not to be used if it has been dropped or if there are visible signs of damage.
- The bread may burn, therefore do not use the product near or below combustible material, such as curtains.

- The product is powered at all times while it is connected to the main supply.
- Before connecting the product to the mains supply, check that the voltage and current rating correspond with the mains supply details shown on the product's rating label.
- Regularly check the mains plug and the mains cord for damages. If the mains cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid a hazard.
- Protect the main cord against damage. Do not let it hang over sharp edges, do not squeeze or bend it. Keep the main cord away from hot surfaces and open flames.

## Operation

- The product must not be left unattended while it is connected to the main supply.
- Do not move the product while it is in operation.
- Do not place the product on hot plates (gas, electric, coal cooking range etc.). Operate the product on a level, stable, clean, heat-resistant and dry surface.
- Do not cover the product while it is in use or shortly after use when it is still hot.
- The use of extension cords is not recommended. If the use of an extension cord is necessary, it must be designed for a current flow of at least 10 A.
- Lay the mains cord and the extension cord in such a way that they may not be tripped over or otherwise damaged.
- The product is not intended to be operated through an external timer or a separate remote control system.

## Cleaning and storage



- **WARNING!** Risk of injury!
- Disconnect the product from the mains supply before cleaning work and when not in use.
- Do not store the hot product in a cupboard or the packaging. Do not pull the mains plug out of the mains socket by the mains cord.
- Protect the product, its mains cord and mains plug against dust, direct sunlight, dripping and splashing water.
- Store the product in a cool, dry place, protected from moisture and out of the reach of children. Protect the product against heat.
- Do not place the product close to open flames or heat sources such as stoves or heating appliances. Clean the product after each use (see "Cleaning and Care").

## Before first use

### NOTES:

- Possible production residues lead to the formation of odours during initial start-up. This is normal and does not indicate a malfunction of the product.
- Removing production residues: Operate the empty product at browning level 7 until the lever [16] moves upwards automatically. Ensure sufficient ventilation.
- Discard the first set of toasted bread slices.
  1. Remove the packaging material.



2. Clean the product (see “Cleaning and Care”).


1. Unwind the mains cord [12] from the cord and rewind [10] before use.
2. Connect the mains plug [12] to a suitable mains socket.

### Off mode

- The product enters off mode once you connect the mains plug [12] to a mains socket while the lever [16] remains in its initial position (up).
- The product remains in off mode until you press down the lever [16].
- When the toasting process is finished, the lever [16] moves upwards automatically. The product returns to off mode.

### Toasting bread

- **NOTES:** The toasting result depends, among other things, on the type, moisture, and freshness of the bread.
- Dry or white bread browns more quickly than fresh or dark bread.
- Browning level 7 causes a very strong browning.

- Thick bread slices may cause smoke to form. In this case, stop the toasting process: Press  [6].
- If you only want to toast a single slice of bread, use a lower browning level than for toasting 2 slices of bread.
- This product has a function to prevent bread from getting stuck in the toasting slots [1]. If the bread gets stuck and the lever [16] does not spring back, the power automatically disconnects after the preset toasting time.
- The lever [16] only engages when the main plug [12] is connected to a main socket.

1. Insert a slice of bread into each toasting slot [1].
  - Do not use bread slices that are too thick.
  - The bread must not be jammed in the toast slot.
2. Press down the lever [16] until it clicks into place.
  - The bread is lowered. The product switches on.
  - The timer display [2] starts counting down the toasting time. The browning level display [15] lights up.
3. Set the browning level: Press – [3] or + [4] to select one of the browning levels, from 1 to 7



1	=	very light toasting/light browning
7	=	very strong toasting/very strong browning

4. When the toasting process is finished, the bread is lifted up. The lever [16] moves upwards.
5. Remove the bread from the toasting slot [1].


### Toast frozen bread

**NOTE:** Frozen bread is gently defrosted by the product and then toasted. It is not necessary to change the browning level.

1. Press down the lever [16] until it clicks into place.

- Press  [5]. The indicator light above  lights up. The timer display [2] starts counting down the toasting time.

2. Set the desired browning level.



3. When the toasting process is finished, the bread is lifted. The lever [16] moves upwards. The indicator light above  [5] goes off.


4. Remove the bread from the toasting slot [1].

### Warming up bread

**NOTE:** Bread that has already been toasted can be reheated by the product.

1. Press down the lever [16] until it clicks into place.

- Press  [7]. The indicator light above  lights up. The timer display [2] starts counting down the toasting time.

2. When the toasting process is finished, the bread is lifted. The lever [16] moves upwards. The indicator light above  [7] goes off.

3. Remove the bread from the toasting slot [1].

### Baking bread rolls

- **NOTES:** The toasting result depends, among other things, on the type and freshness of the bread rolls.
- Toast the bread roll from both sides to ensure an even browning.

1. Press down the fold-out lever [14]. The bread roll warmer [8] folds out.

2. Place the rolls on the bread roll warmer [8].

3. Press down the lever [16] until it clicks into place.

- The product switches on. The timer display [2] starts counting down the toasting time.

4. Set the desired browning level. We recommend browning level 2.

5. When the toasting process of one side of the bread roll is finished, the lever [16] moves upwards.

6. Turn the rolls over.


7. Press down the lever [16] until it clicks into place.


The product switches on. The timer display [2] starts counting down the toasting time.

8. When the toasting process of the other side of the bread roll is finished, the lever [16] moves upwards.

9. **After the bread rolls are baked:** Push the fold-out lever [14] upwards. The bread roll warmer [8] folds in.

### Cancel toasting

1. When the product is toasting, defrosting or reheating bread, you can press  [6] early to stop operation.

2. Press  [6]. The lever [16] moves upwards.

## Cleaning and care



- **WARNING!** Risk of electric shock!
- Before cleaning: Always disconnect the product from the main supply.
- Do not immerse the product's electrical components in water or other liquids. Never hold the product under running water.
- **WARNING!** Risk of burns! Do not clean the product right after the operation. Let the product cool first.

Part	Cleaning method
D Housing	D Wipe down the housing with a slightly damp cloth. D Do not let any water or other liquids enter the product interior.

Part	Cleaning method
D Bread roll warmer 8	D Press down the fold-out lever 14. The bread roll warmer 8 folds out.  D Hold the product upside down and remove the crumbs from the recess of the bread roll warmer 8.  D Wipe the recess and the bread roll warmer 8 with a slightly moistened cloth.
D Crumb tray 13	D Pull out the crumb tray 13.  D Remove the crumbs. Wipe out the crumb tray [13 with a damp cloth.  D Reinsert the crumb tray 13.

## Storage



- **WARNING!** Risk of burns! Do not store the product right after operation. Let the product cool first.
- Clean the product before storage.

- Run the mains cord [12] around the cord rewind [10] and attach it to the cord clamp [11].
- Store the product in the original packaging when it is not in use.
- Store the product at a dry location out of the reach of children.

## Troubleshooting

Problem	Possible Cause/Solution
Bread too strongly browned.	Set a lower browning level.
Bread gets stuck in the product.	Disconnect the mains plug 12. Let the product cool. Use a wooden spatula to remove the bread from the toasting slot 1. Do not touch the heating elements.
Heavy smoke	The crumb tray 13 may be full. Disconnect the mains plug 12. Let the product cool. Clean the crumb tray .

## Disposal

- The packaging is made entirely of recyclable materials, which you may dispose of at local recycling facilities.



- Observe the marking of the packaging materials for waste separation, which are marked with abbreviations (a) and numbers
- (b) with the following meaning: 1–7: plastics/20–22: paper and fibreboard/80–98: composite materials.

## Product:



- Contact your local refuse disposal authority for more details on how to dispose of your worn-out product.



- To help protect the environment, please dispose of the product properly when it has reached the end of its useful life and not in the household waste.
- Information on collection points and their opening hours can be obtained from your local authority.

## Warranty

- The product has been manufactured to strict quality guidelines and meticulously examined before delivery.
- In the event of material or manufacturing defects, you have legal rights against the retailer of this product.
- Your legal rights are not limited in any way by our warranty detailed below.
- The warranty for this product is 3 years from the date of purchase. The warranty period begins on the date of purchase. Keep the original sales receipt in a safe location as this document is required as proof of purchase.
- Any damage or defects already present at the time of purchase must be reported without delay after unpacking the product.
- Should the product show any fault in materials or manufacture within 3 years from the date of purchase, we will repair or replace it – at our choice – free of charge to you.
- The warranty period is not extended as a result of a claim being granted. This also applies to replaced and

repaired parts.

- This warranty becomes void if the product has been damaged, used or maintained improperly.
- The warranty covers material or manufacturing defects.
- This warranty does not cover product parts subject to normal wear and tear, thus considered consumables (e.g. batteries, rechargeable batteries, tubes, cartridges), nor damage to fragile parts, e.g. switches or glass parts.

## Warranty claim procedure

**To ensure quick processing of your claim, observe the following instructions:**

- Make sure to have the original sales receipt and the item number (IAN 483099\_2401) available as proof of purchase.
- You can find the item number on the rating plate, an engraving on the product, on the front page of the instruction manual (bottom left), or as a sticker on the rear or bottom of the product.
- If functional or other defects occur, contact the service department listed below either by telephone or by e-mail.
- Once the product has been recorded as defective you can return it free of charge to the service address that will be provided to you.
- Ensure to enclose the proof of purchase (sales receipt) and a short, written description outlining the details of the defect and when it occurred.


## Service

- **Service Great Britain**
- **Tel.: 0800 0569216**
- **E-Mail: [owim@lidl.co.uk](mailto:owim@lidl.co.uk)**
- **OWIM GmbH & Co. KG**
- **Stiftsbergstraße 1**
- **74167 Neckarsulm**
- **GERMANY**
- **Model No.: HG11904**
- **Version: 08/2024**
- **[www.lidl-service.com](http://www.lidl-service.com)**



**PDF ONLINE**

Documents / Resources

 <b>SILVERCREST</b> DIGITAL TOASTER STD 870 A1 DIGITAL TOASTER DIGITAL TOASTER DIGITAL TOASTER IAN 483099_2401	<p><a href="#">SILVERCREST STD 870 A1 Digital Toaster</a> [pdf] Instruction Manual</p> <p>STD 870 A1, IAN483099_2401, STD 870 A1 Digital Toaster, STD 870 A1, Digital Toaster, Toaster</p>
---	--

References

- [User Manual](#)

Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.