



SILVERGEAR 1025 Arcade Game Portable Console Instruction Manual


[Home](#) » [SILVERGEAR](#) » SILVERGEAR 1025 Arcade Game Portable Console Instruction Manual 

Contents


- [1 SILVERGEAR 1025 Arcade Game Portable Console](#)
- [2 OVERVIEW](#)
- [3 Specifications](#)
- [4 Installing the batteries](#)
- [5 Battery cautions](#)
- [6 Trouble Shooting](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)



SILVERGEAR 1025 Arcade Game Portable Console

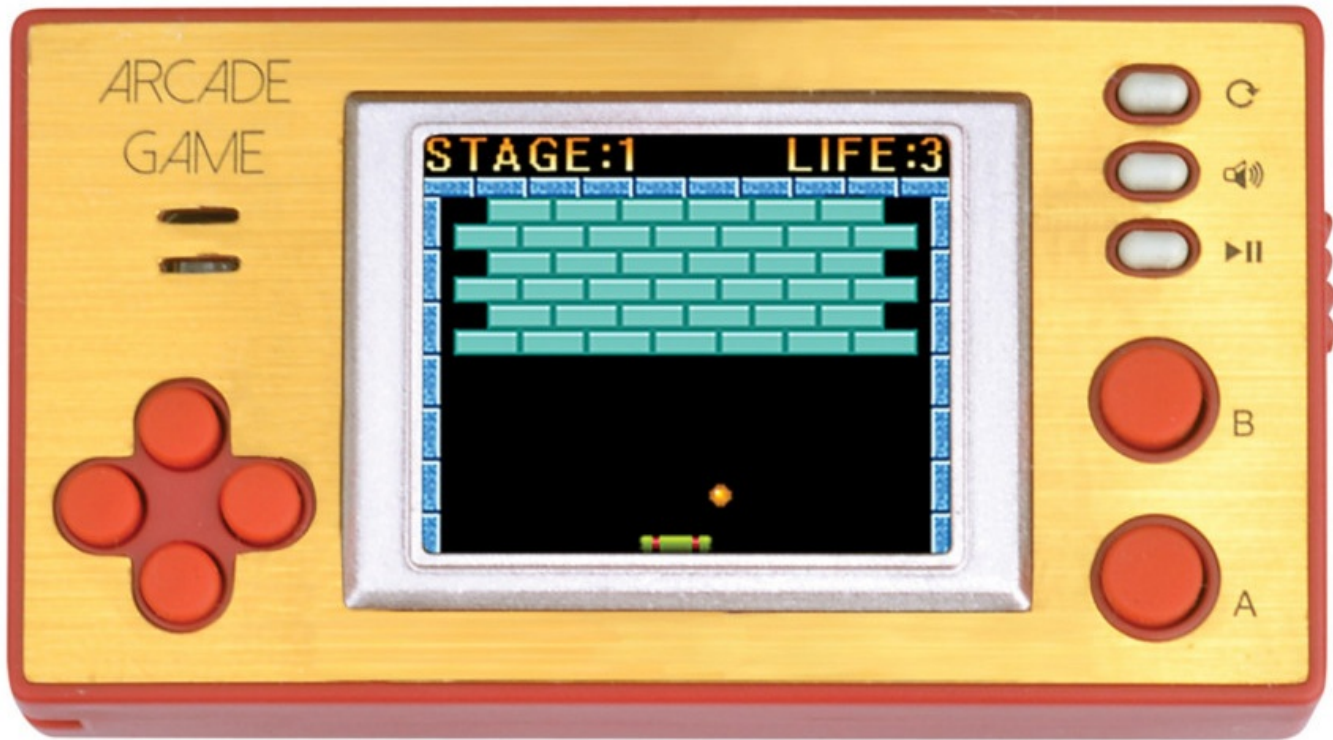

OVERVIEW

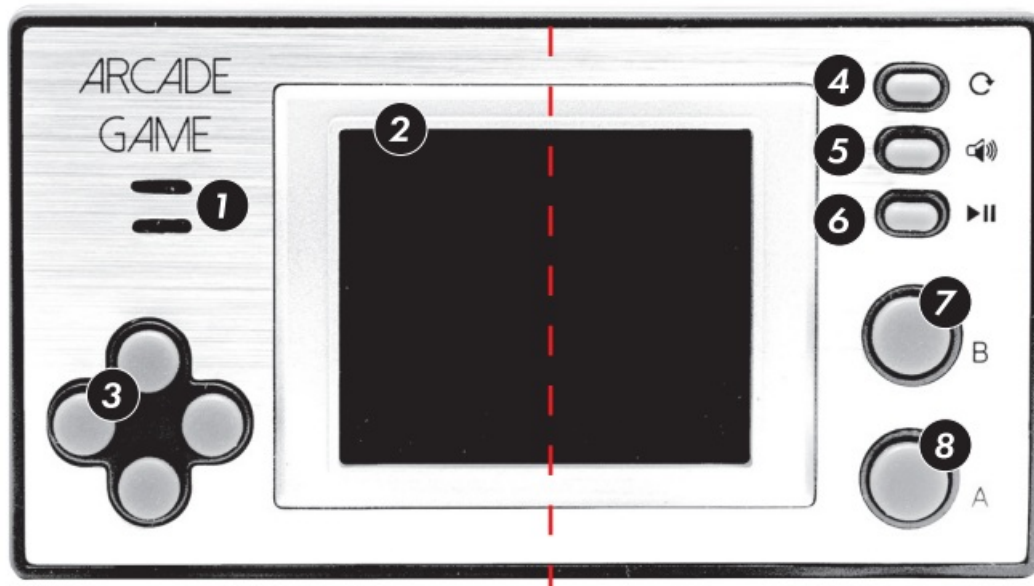

1. Speaker
2. LCD screen
3. Direction pad
4. Reset
5. Volume
6. Start
7. Button B
8. Button A

Specifications

Dimension	150x 80x 25 mm
Weight	45.5 gr
IDC	High resolution LTP5 1,8"
Power supply	3x AAA {not included}

Installing the batteries

The console requires a set of 3 AAA alkaline batteries. To insert the batteries, open the battery door and install the batteries with the positive (+) and negative (-) ends as shown in the battery compartment. Reinstall the "battery door".

Battery cautions

IMPORTANT: Only adults should replace batteries.

- Do not attempt to recharge non-rechargeable batteries.
- Insert batteries as marked and always follow the toy's and battery manufacturer's instructions.
- Use only the same or equivalent type of battery as recommended.
- Do not short-circuit the supply terminals.
- Do not mix old and new batteries.
- Do not mix different type of batteries, such as alkaline, standard (carbon-zinc), rechargeable (nickel-cadmium).
- Always remove exhausted or dead batteries from the toy.

Remove batteries from the product before extended storage.

Trouble Shooting

No picture on the LCD screen

1. Is the Game Console turned on?
2. Are the batteries properly installed?
3. Check if the batteries are flat or need replacing.

No game sound

Is the volume control too low, or off?

The picture on the LCD screen is too dark



Check if the batteries are flat and need replacing.

fringes appear on LCD screen during broadcast or the displayed picture is blinking or distorted

1. Check if the batteries are flat and need replacing.
2. Try pushing the reset button.

3. Switch the Game Console off and try again.

Documents / Resources

	<p>SILVERGEAR 1025 Arcade Game Portable Console [pdf] Instruction Manual 1025, Arcade Game Portable Console, 1025 Arcade Game Portable Console, 22309</p>
	<p>SILVERGEAR 1025 Arcade Game Portable Console [pdf] User Manual 1025, Arcade Game Portable Console, 1025 Arcade Game Portable Console</p>