



SILVERSTONE Argon V140 ARGB High Performance 140mm CPU Cooler Instruction Manual

[Home](#) » [SilverStone](#) » SILVERSTONE Argon V140 ARGB High Performance 140mm CPU Cooler Instruction Manual 

Contents

- [1 SILVERSTONE Argon V140 ARGB High Performance 140mm CPU Cooler](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Contents](#)
- [5 Fan installation](#)
- [6 Warranty Information](#)
- [7 Additional info & contacts](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)



SILVERSTONE

SILVERSTONE Argon V140 ARGB High Performance 140mm CPU Cooler



Product Information

The product is the Argon V140 ARGB, manufactured by SilverStone Technology Co., Ltd. It is a computer component designed for Intel and AMD processors. The product comes with a limited 1-year warranty in North America and Australia. For warranty information in other regions, customers are advised to contact their reseller or SilverStone authorized distributor. The product warranty covers defects or damages resulting from defective production, provided that the product is used in accordance with the instructions provided in the manual and without misuse, overuse, or other inappropriate actions. The warranty does not cover damages caused by natural disasters or if the product has been disassembled, modified, or fixed without authorization. The warranty mark/stickers should not be removed or broken. Loss or damages resulting from conditions not listed above are not covered under warranty. SilverStone Technology's maximum liability under warranty is limited to the current market value of the product.

Product Usage Instructions

1. Intel LGA 115x / 1200 Fan installation:

1. Confirm that you have the correct connector, pin definition, and direction of your pin header.
2. Ensure that the ARGB controller or motherboard has the same +5V pin definition as the ARV140-ARGB.
3. Connect the GND, D, and +5V pins of the mainboard ARGB header to the corresponding pins on the product.
4. Connect the mainboard CPU_FAN header to the product.

2. Intel LGA 1700 Fan installation:

1. Follow steps 1 and 2 mentioned above.
2. Connect the GND, D, and +5V pins of the mainboard ARGB header to the corresponding pins on the product.
3. Connect the mainboard CPU_FAN header to the product.

3. Intel LGA 2011 / 2066 Fan installation:

1. Follow steps 1 and 2 mentioned above.
2. Connect the GND, D, and +5V pins of the mainboard ARGB header to the corresponding pins on the

product.


3. Connect the mainboard CPU_FAN header to the product.

4. AMD Fan installation:


1. Confirm that you have the correct connector, pin definition, and direction of your pin header.
2. Ensure that the ARGB controller or motherboard has the same +5V pin definition as the ARV140-ARGB.
3. Connect the GND, D, and +5V pins of the mainboard ARGB header to the corresponding pins on the product.
4. Connect the AMD backplate included with the motherboard to the product.

Note: It is important to carefully follow the instructions and ensure proper pin connections for successful installation and usage of the product.

Contents

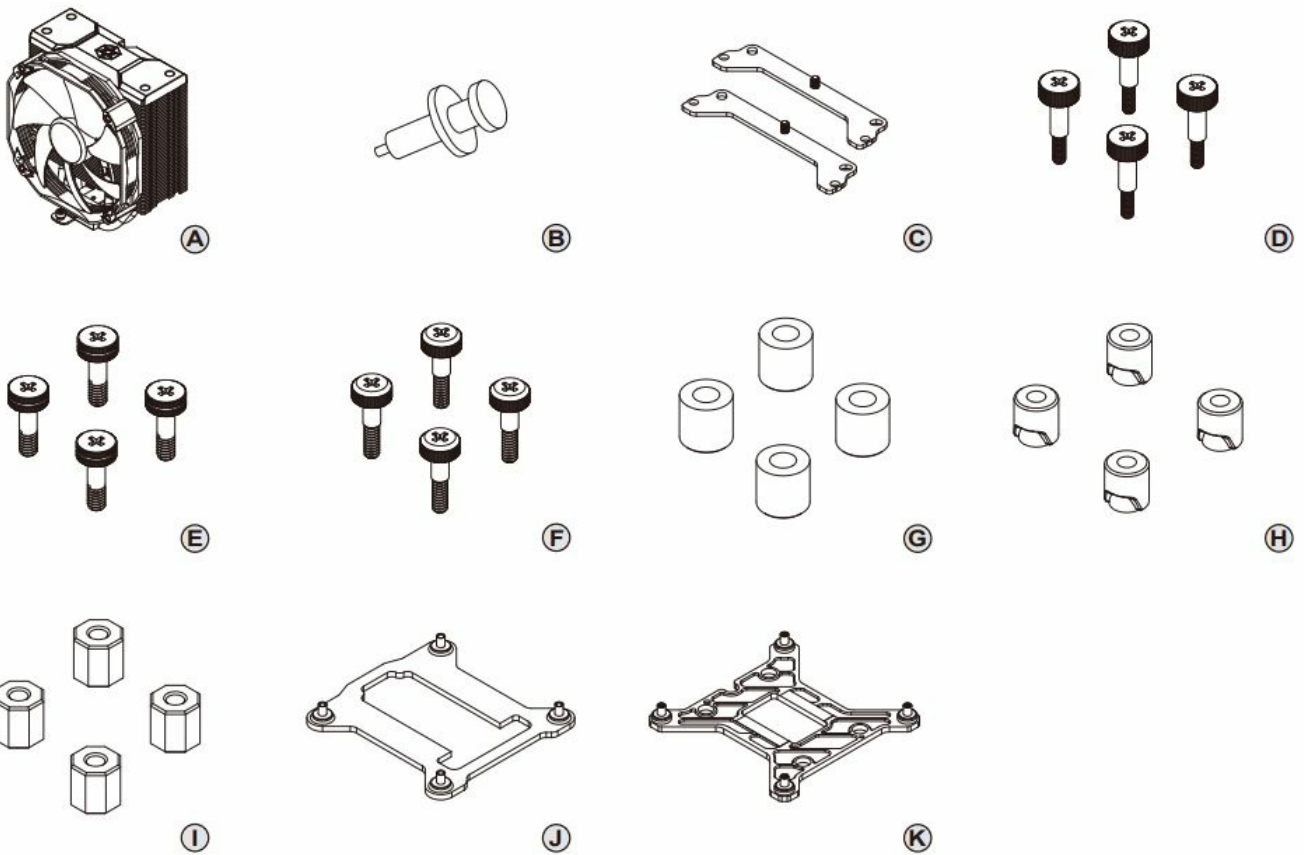


Fan installation

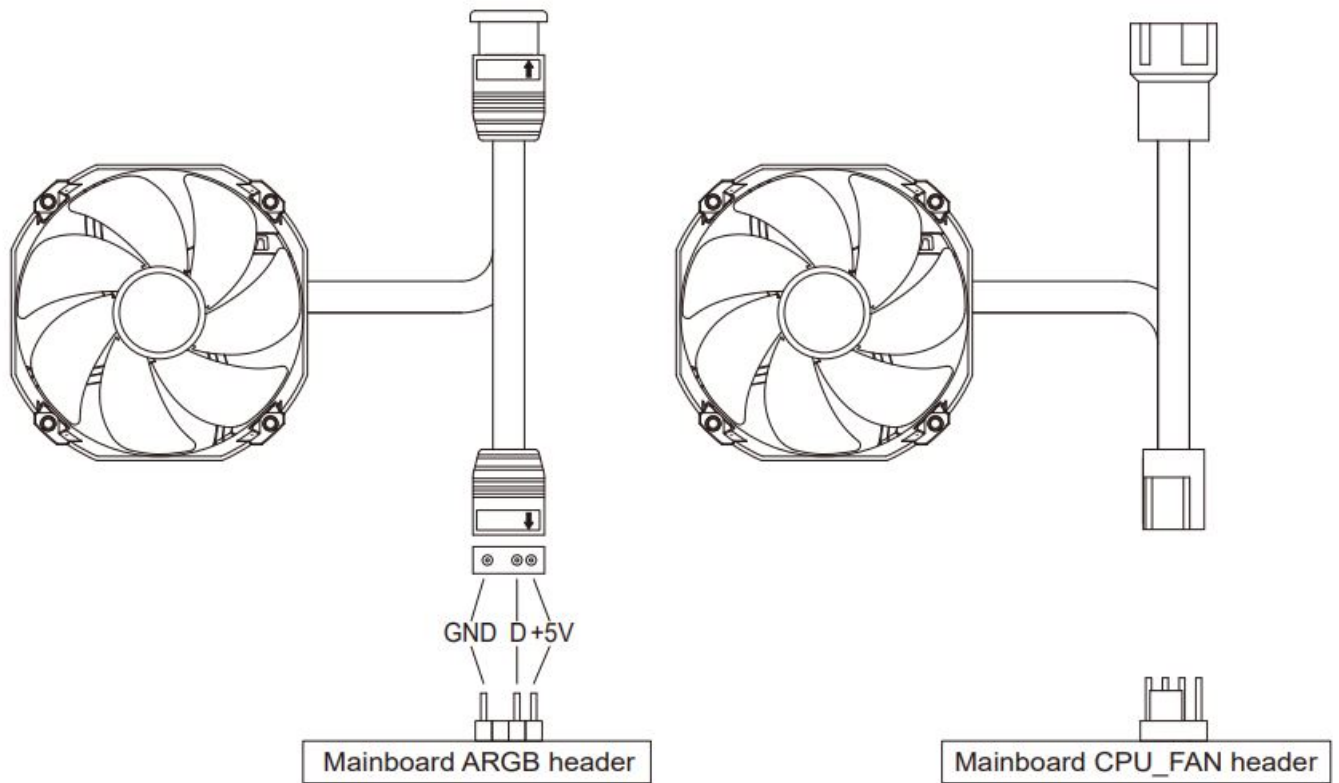


- Please confirm the connector, the definition and direction of your pin header when connecting cables.
- Ensure ARGB controller / motherboard has same +5V pin definition as ARV140-ARGB.


INTEL

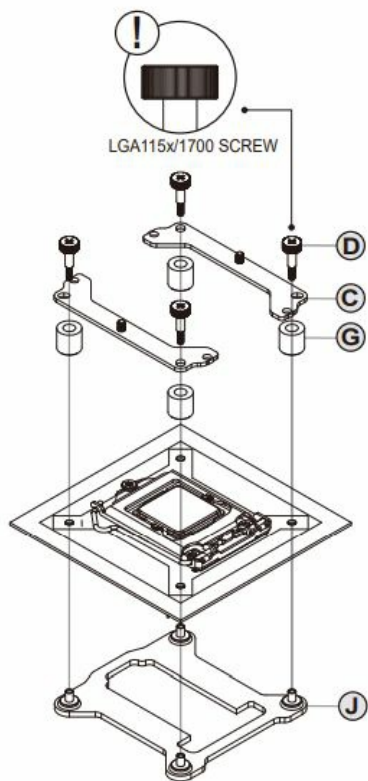

Intel LGA 115x / 1200

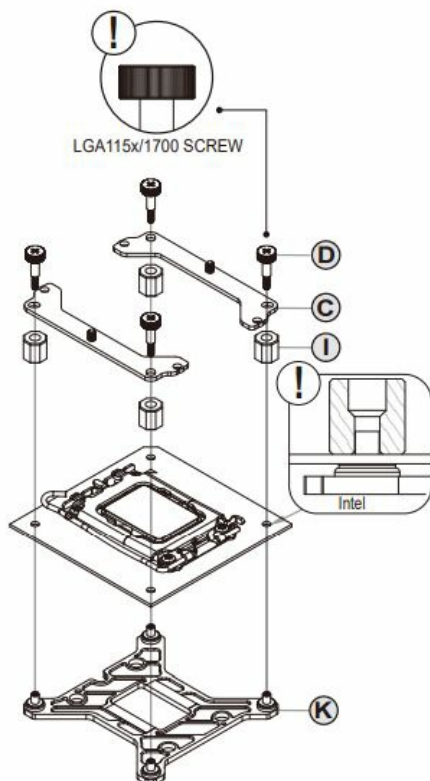


Intel LGA 1700

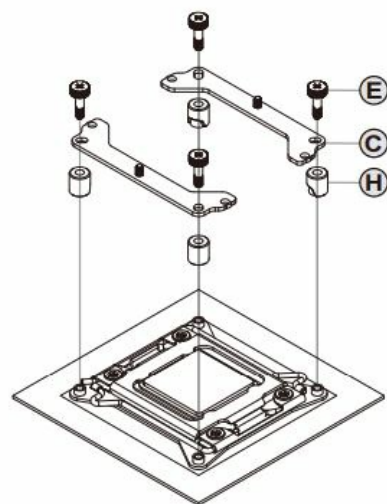


Intel LGA 2011 / 2066

AMD

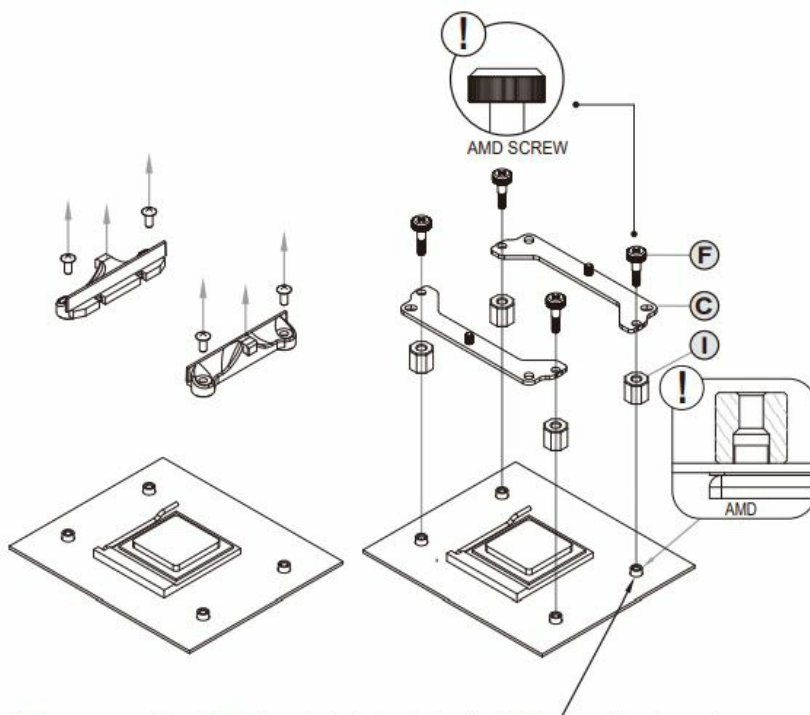

*Please use the AMD backplate included with the motherboard

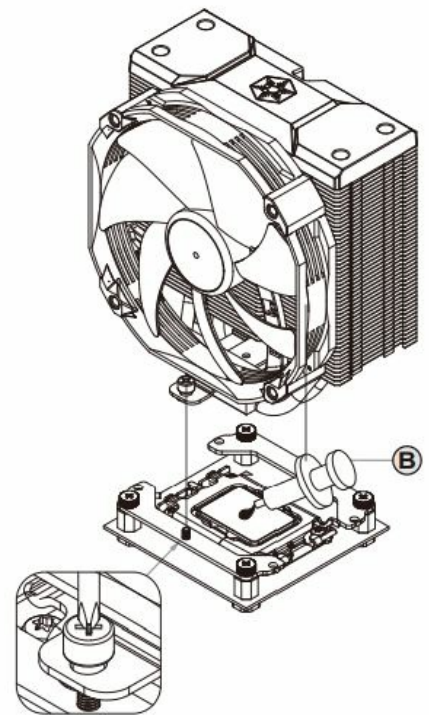

Warranty Information

This product has a limited 1 year warranty in North America and Australia. For information on warranty periods in other regions, please contact your reseller or SilverStone authorized distributor.

Warranty terms & conditions

- Product component defects or damages resulted from defective production is covered under warranty. Defects or damages with the following conditions will be fixed or replaced under SilverStone Technology's jurisdiction.
 - Usage in accordance with instructions provided in this manual, with no misuse, overuse, or other inappropriate actions.
 - Damage not caused by natural disaster (thunder, fire, earthquake, flood, salt, wind, insect, animals, etc...)
 - Product is not disassembled, modified, or fixed. Components not disassembled or replaced.
 - Warranty mark/stickers are not removed or broken. Loss or damages resulted from conditions other than ones listed above are not covered under warranty.
- Under warranty, SilverStone Technology's maximum liability is limited to the current market value for the product (depreciated value, excluding shipping, handling, and other fees). SilverStone Technology is not responsible for other damages or loss associated with the use of product.
- Under warranty, SilverStone Technology is obligated to repair or replace its defective products. Under no circumstances will SilverStone Technology be liable for damages in connection with the sale, purchase, or use including but not limited to loss of data, loss of business, loss of profits, loss of use of the product or incidental

or consequential damage whether or not foreseeable and whether or not based on breach of warranty, contract or negligence, even if SilverStone Technology has been advised of the possibility of such damages.

4. Warranty covers only the original purchaser through authorized SilverStone distributors and resellers and is not transferable to a second hand purchaser.
5. You must provide sales receipt or invoice with clear indication of purchase date to determine warranty eligibility.
6. If a problem develops during the warranty period, please contact your retailer/reseller/SilverStone authorized distributors or SilverStone <http://www.silverstonetek.com>.

Please note that:

1. You must provide proof of original purchase of the product by a dated itemized receipt;
2. You shall bear the cost of shipping (or otherwise transporting) the product to SilverStone authorized distributors. SilverStone authorized distributors will bear the cost of shipping (or otherwise transporting) the product back to you after completing the warranty service;
3. Before you send the product, you must be issued a Return Merchandise Authorization ("RMA") number from SilverStone. Updated warranty information will be posted on SilverStone's official website. Please visit <http://www.silverstonetek.com> for the latest updates.

Additional info & contacts

For North America (usasupport@silverstonetek.com)

SilverStone Technology in North America may repair or replace defective product with refurbished product that is not new but has been functionally tested.

Replacement product will be warranted for remainder of the warranty period or thirty days, whichever is longer. All products should be sent back to the place of purchase if it is within 30 days of purchase, after 30 days, customers need to initiate RMA procedure with SilverStone Technology in USA by first downloading the "USA RMA form for end-users" form from the below link and follow its instructions.

<http://silverstonetek.com/contactus.php>

For Australia only (support@silverstonetek.com)

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Please refer to above "Warranty terms & conditions" for further warranty details. SilverStone Technology Co., Ltd. 12F No. 168 Jiankang Rd., Zhonghe Dist., New Taipei City 235 Taiwan R.O.C. + 886-2-8228-1238 (standard international call charges apply)

For Europe (support.eu@silverstonetek.de)

For China (support@silverstonetek.com.cn)

For all other regions (support@silverstonetek.com)


This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

www.silverstonetek.com

Documents / Resources

	<p>SILVERSTONE Argon V140 ARGB High Performance 140mm CPU Cooler [pdf] Instruction Manual</p> <p>Argon V140 ARGB, Argon V140 ARGB High Performance 140mm CPU Cooler, High Performance 140mm CPU Cooler, Performance 140mm CPU Cooler, 140mm CPU Cooler, CPU Cooler, Cooler</p>
---	--

References

-  [SilverStone](#)
-  [SilverStone](#)