



# SIM2 TS522D-S1 Bluetooth Speaker Instruction Manual


[Home](#) » [SIM2](#) » SIM2 TS522D-S1 Bluetooth Speaker Instruction Manual 

## Contents

- 1 MUSIC PLAYBACK
- 2 CONNECT THE LAST PAIRED BLUETOOTH ENABLED DEVICE
- 3 RESETTING THE UNIT'S MEMORY
- 4 PLAYING A DEVICE CONNECTED TO THE AUX INPUT
- 5 SETTING THE UNIT
- 6 MENU AVAILABLE IN DAB MODE
- 7 MENU AVAILABLE IN FM MODE
- 8 MENU AVAILABLE IN ALL MODES
- 9 MANUAL
- 10 AUTO
- 11 TIME MODE
- 12 SNOOZE
- 13 SET EQ
- 14 RESET
- 15 FIRMWARE VERSION
- 16 USING THE ALARM
- 17 ENABLING OR DISABLING THE ALARM
- 18 SNOOZE OPTION AND ALARM SLEEP MODE
- 19 Documents / Resources
- 20 Related Posts

## MUSIC PLAYBACK

The device you wish to associate with TS522D+S must support AVRCP (Audio Video Remote Control Profile) in order to control playback through it. Refer to the user manual of your device. When the music is playing:

1. Button PLAY/PAUSE 
  - a. Press once to pause playback
  - b. Press again to resume playback
2. VOL – button

(from the main unit, rotate the VOL/STB knob counter-clockwise)

- a. Press once to decrease the volume by one step
- b. Press and hold to decrease the volume in a consistent manner

### 3. VOL + button

(from the main unit, rotate the VOL/STB knob counter-clockwise)

- a. Press once to increase the volume by one step
- b. Press and hold to increase the volume in a consistent manner after reaching the maximum level, the display will show the label VOL MAX)

### **CAUTION:**

listen to music at a moderate volume. Continuous exposure to high volume may damage your hearing.

## **CONNECT THE LAST PAIRED BLUETOOTH ENABLED DEVICE**

The following is a quick way to connect TS522D+S to the last paired device.

When the product is in standby mode, press the STANDBY button and enter the BT mode using the MODE button (if the unit is on, but in a different mode, press the MODE button until you see BT). Turn on the Bluetooth device to be associated. It will be connected automatically. The Bluetooth Mode LED will light when the connection is successful. If the product fails to find the last paired device, it will go into standby mode waiting for a connection. In this status, the previously paired devices may be connected to the unit.

## **RESETTING THE UNIT'S MEMORY**

The unit can store up to 8 different Bluetooth devices. To clear the memory manually you must be in the BT mode, in the pairing status (LED flashes quickly), press the PAIR button twice (with an interval of about one second between presses) until it plays a "beep" sound. At this point, the LED indicating the status of the Bluetooth switches off, and then it starts to flash again.

### **CAUTION:**

After erasing all memory, the unit will go immediately into pairing mode and you will need to follow the pairing and connection procedure of a new Bluetooth device.


Remember to delete the name of the radio also from the device you want to connect it to again, in order to completely reset the pairing between the two devices.

## **PLAYING A DEVICE CONNECTED TO THE AUX INPUT**

1. Connect the jack cable (not supplied) from the external device (such as an MP3 player) to the AUX IN
2. Use the MODE button on the remote control to access the AUX IN mode, or press the MODE knob on the main unit until the AUX IN source is displayed. The display will show the AUX IN label.
3. Use your device to control the playback, the volume level can be controlled either from the connected device or from the main unit. Use the MUTE button on the remote control to mute the sound, and then restart it by pressing the same button again.

## **SETTING THE UNIT**

Press the MENU button on the remote or press and hold the MENU/SELECT knob on the main unit to enter the menu of the various modes.

Press  on the remote, or rotate the MENU/SELECT knob on the main unit to select the desired menu item and press ENTER on the remote control or press the MENU/SELECT knob to enter the submenu or to save the settings. Press BACK to return to the previous level, or press MENU again to exit.

## MENU AVAILABLE IN DAB MODE

Press MENU to access the multiple functions of the DAB mode.

Use the buttons to browse the various menu items.


Press ENTER to enter the selected menu item.

**FULL SCAN:** allows performing a full scan of the DAB channels



**MANUAL TUNE:** allows to set the DAB frequency to be tuned



Press buttons  to adjust the frequency and press ENTER to confirm (e.g. 174.928 MHz)



The display will show the signal strength of the frequency set manually for the tuning.



The > symbol indicates the power of the signal; it means that the signal of that station is strong enough to allow the tuning of such a DAB station. The — symbol indicates the absence of signal.

Press MENU twice to return to the DAB mode, or press BACK three times to play the tuned DAB station.

## MENU AVAILABLE IN FM MODE

Press MENU to access the multiple functions of the FM mode.

Use the buttons  to browse the various menu items.

Press ENTER to enter the selected menu item.

### AUDIO

Allows you to set the listening to MONO or STEREO in FM mode.



## MENU AVAILABLE IN ALL MODES

Press MENU to access features common to all modes of TS522D+S.

Use the buttons  to browse the various menu items.


Press ENTER to enter the selected menu item.

### DATE/TIME

Allows you to set the date and time manually or through the signal received from the DAB stations.



## MANUAL

Press  on the remote control, turn the MENU/SELECT knob on the main unit, to set the time and date, press the ENTER button on the remote control or the MENU/SELECT knob on the main unit to confirm and save the entered information.



## AUTO

By selecting this option, the radio will automatically use the date and clock information gathered from the station.



## TIME MODE

Allows you to set the clock format to 12 or 24 hours.



## SNOOZE

Allows setting the time interval to repeat the alarm (snooze).

Press the buttons  on the remote or turn the MENU/SELECT knob on the main unit to adjust the time interval from 5 to 15 minutes with 1-minute routers.


Press the ENTER button on the remote or the MENU/SELECT knob on the main unit to save the chosen value.

To disable the Snooze function, press the button on the main unit.




## SET EQ

Allows setting the equalization of the radio.

Press  on the remote control or turn the MENU/SELECT knob on the main unit to select one of the stored equalizations presets CLASSIC, POP, FLAT, ROCK, JAZZ. Press the ENTER button on the remote or the MENU/SELECT knob on the main unit to confirm the chosen preset.

## RESET


Allows you to clear all settings and restore the factory configuration. Select the option YES and press the ENTER button on the remote control or the MENU/SELECT knob on the main unit to start the reset to factory settings or NO to cancel the operation.

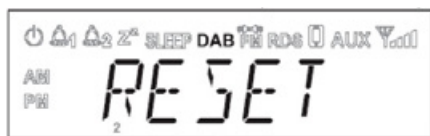

CAUTION: all the date, clock, alarm, equalizer presets, and radio stations settings will be lost.

## FIRMWARE VERSION

Allows viewing the firmware version installed in the unit.

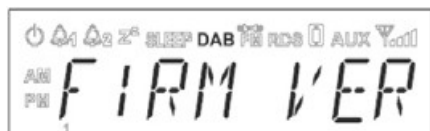

## USING THE ALARM

Setting the alarm

1. Turn the radio on, press 1 or 2 on the remote control to select alarm 1 or alarm 2. Icon 1 or icon 2 will flash on the display.


Press ENTER to enter the Alarm menu, press on the remote or turn the MENU/SELECT knob on the main unit to adjust the desired time for the alarm. Press ENTER or the MENU/SELECT knob to confirm your choice 1 and 2 moves to the next function, or press BACK to return to the previous menu item.

After setting of the alarm time, you can select the alarm source (DAB/FM/Buzzer).



The next option is the repetition frequency of the alarm that may have the following options:

Daily – Weekdays – Weekends – specific day.

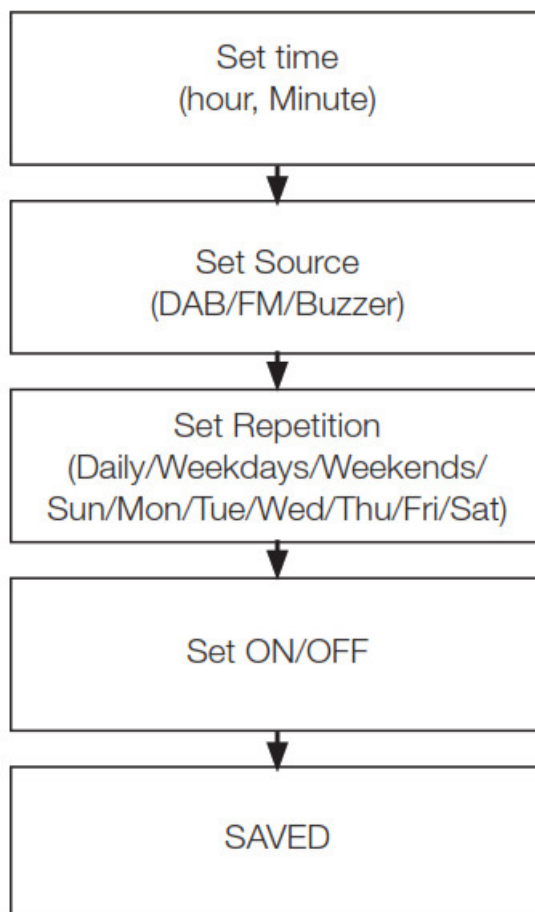When the alarm is set to ON and saved, the icon for alarms 1 and/or 2 will be shown on the display to indicate the active status.



## ENABLING OR DISABLING THE ALARM

In standby mode, press 1 or 2 on the remote control to enable or disable the alarm, or turn on the radio, press 1 or 2 to select alarm 1 or 2, on the remote control press the buttons to   select ON/OFF, and confirm with ENTER.


The icons are shown on the display to confirm that the alarm has been activated.

## SNOOZE OPTION AND ALARM SLEEP MODE

While the alarm is enabled, press SNOOZE on the remote control to repeat the alarm after a certain interval (according to the settings entered in the relevant menu – the default value is 5 minutes) or by pressing the VOL/STANDBY knob on the main unit.

When the SNOOZE mode is active, the display shows the Zz icon that identifies the active status of the operation. To stop the alarm, press any button on the remote control except for SNOOZE, or any knob on the main unit except for VOL/STANDBY.

## Documents / Resources

	<p><a href="#">SIM2 TS522D-S1 Bluetooth Speaker</a> [pdf] Instruction Manual TS522D-S1, TS522DS1, 2ARIC-TS522D-S1, 2ARICTS522DS1, TS522D-S1 Bluetooth Speaker, Bluetooth Speaker, Speaker</p>
---	---