



SimplyVAV STE-8001 Digital Wall Sensor User Guide

[Home](#) » [SimplyVAV](#) » SimplyVAV STE-8001 Digital Wall Sensor User Guide 

Contents

- [1 SimplyVAV STE-8001 Digital Wall Sensor](#)
- [2 To get started](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)

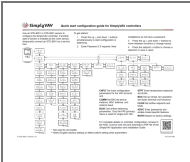
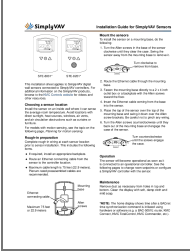


SimplyVAV STE-8001 Digital Wall Sensor

- CNFG The main configuration parameters for the VAV terminal unit.
- COMM Set BACnet device instance, MAC address, and network baud.
- BLNC Set airflow balancing parameters. Only the PRI (primary) menu is used for single duct
- VAVSTPT Enter temperature setpoints and limits.
- BOX Set up reheat, fan operation, and basic terminal unit functions.
- FLOW Set airflow setpoints and limits.
- ADVC Enter passwords and enable model specific features.
- RSTR Restore to factory settings

For complete details on controller configuration, browse to the KMC Controls website and download a PDF file of the SimplyVAV Application and Installation Guide. Not used for all models Select English (factory setting) or Metric before setting other parameters.

Documents / Resources

	SimplyVAV STE-8001 Digital Wall Sensor [pdf] User Guide STE-8001 Digital Wall Sensor, STE-8001, Digital Wall Sensor
	SimplyVAV STE-8001 Digital Wall Sensor [pdf] Installation Guide STE-8001, Digital Wall Sensor, STE-8001 Digital Wall Sensor

References

-  [KMC Controls | Building Automation and Control Solutions](#)