



# SingCube SINGCUBE01 Rechargeable Bluetooth Karaoke Machine User Manual

[Home](#) » [SingCube](#) » SingCube SINGCUBE01 Rechargeable Bluetooth Karaoke Machine User Manual 

## Contents

- [1 SingCube SINGCUBE01 Rechargeable Bluetooth Karaoke Machine](#)
- [2 Introduction](#)
- [3 IMPORTANT SAFETY INSTRUCTIONS](#)
- [4 INITIAL SETUP](#)
- [5 OPERATION](#)
- [6 VOLUME CONTROL](#)
- [7 TROUBLESHOOTING GUIDE](#)
- [8 OTHER BLUETOOTH PROBLEMS](#)
- [9 FAQs](#)
- [10 Related Posts](#)



**SingCube SINGCUBE01 Rechargeable Bluetooth Karaoke Machine**



## Introduction

Because of the built-in rechargeable battery, you may sing or start a karaoke party anywhere you go with this karaoke machine. Its portability, lightweight design, and handy carry handle make it the perfect karaoke machine for kids who want to perform. There is no end to your options when it comes to music. One of the two integrated karaoke mics can be used to sing along to your own favorite karaoke songs while the other is connected to your mobile device through Bluetooth, Aux, or a pre-loaded USB. If you want to hold a karaoke party, connect your smart TV as a Bluetooth speaker and start the celebration by projecting the lyrics from your preferred streaming service onto a large screen.

## WARNINGS

This product is designed primarily for indoor use. Do not expose to rain or other kinds of moisture as that could lead to irreparable damage and the risk of electric shock.

Do not open the Bluetooth Speaker casing under any circumstance. This could lead to damage or risk of electric shock.


## IMPORTANT SAFETY INSTRUCTIONS

1. Read instructions – All the safety and operating instructions should be read before the appliance is operated
2. Retain instructions – The safety and operating instructions should be retained for future reference.
3. Heed Warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow instructions – All operation and use instructions should be followed.
5. Water and Moisture – The appliance should not be used near water; for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, and the like.
6. Heat – The appliance should be situated away from heat sources such as radiators, stoves or other appliances (including amplifiers) that produce heat.
7. Power Sources – The appliance should be charged from a power supply only of the type described in the operating instructions or as marked on the appliance.
8. Cleaning – The appliance should be cleaned only with a lightly dampened cloth. Do not use solvents that will

damage the plastics finish.

9. Long Periods of Non-Use – The Bluetooth Speaker should be unplugged from the USB charging source when left unused for a long period of time.
10. Object and Liquid Entry – Care should be taken so that objects do not fall, and liquids are not spilled into the enclosure through openings.
11. Damage Requiring Service – The appliance should be serviced by qualified service personnel when:
  - The USB power connector has been damaged; or
  - Objects have fallen, or liquid has been spilled into the appliance; or
  - The appliance has been exposed to rain; or
  - The appliance does not appear to operate normally or exhibits a marked change in performance; or
  - The appliance has been dropped, or the enclosure damaged.
12. Servicing – The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

#### LOCATION OF CONTROLS (FRONT)

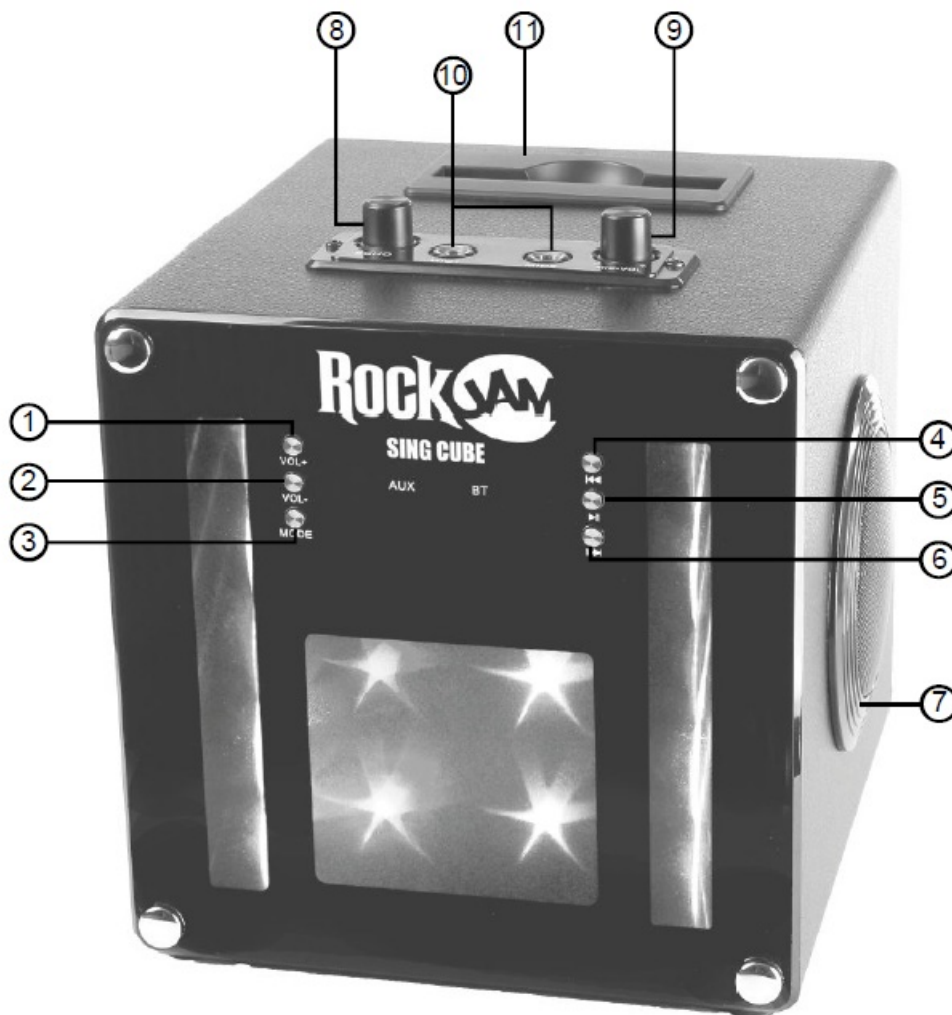

1	VOL+ Button	Press to increase the audio volume.
2	VOL- Button	Press to decrease the audio volume.
3	MODE Button	Press to select between Bluetooth and AUX input mode. Press and hold to switch the lightshow on or off.
4	PREVIOUS Track Button	Press to go back to the start of the track. Press twice to select the previous track. Works in Bluetooth mode only.
5	PLAY/PAUSE Button	Press to alternately pause and play the music. In AUX input mode the music is muted but not paused.
6	NEXT Track Button	Press to go to the start of the next track. Works in Bluetooth mode only.
7	Stereo Speakers	Stereo 3-inch full range drivers output your music at the best quality.
8	Echo control	Adjust the microphone echo control as required for best effect.
9	Mic volume control	Adjust the microphone volume as required.
10	Mic input sockets	Plug in the microphone or microphones supplied here.
11	Device cradle	Place your mobile device here so you can use it to stream karaoke videos and then sing along.

## LOCATION OF CONTROLS (REAR)

12	AUX Input	Connect the external audio device here with the cable supplied.
13	ON/OFF Switch	Use to switch the speaker On or Off. <b>NOTE: The speaker can be charged while off or in use.</b>
14	5V DC Charger Input	Connect the USB charge cable here and charge from a USB charger or computer USB port.
15	CHARGE Indicator LED	Lights up red during charging and goes off when fully charged.  <b>NOTE: The speaker can be left connected to the charger when off or in use; it will not overcharge.</b>

## INITIAL SETUP

### UNPACKING

Unpack the speaker carefully. We recommend that you save the box and packing materials in case you wish to store the speaker. Before setting up the unit, verify that the following accessories are present:

- 1 x USB power cable
- 1 x AUX input audio cable

- 2 x Microphone

## **CHARGING THE SINGCUBE**

Unwind the USB power cable to its full length; connect one end to the DC input jack on the rear of the speaker. Connect the other end to a USB power adapter or PC USB port. The charge indicator LED will light up red to indicate charging. Charge for at least 4 hours before first use. The charge indicator LED will go out when the speaker is fully charged.

## **OPERATION**

### **SWITCHING THE SINGCUBE ON/OFF**

Press the on/off switch at the rear of the speaker to switch on. A chime will be heard, and the Bluetooth indicator will light up blue to indicate that the speaker is searching for an available Bluetooth audio device. Press the on/off switch on the rear of the speaker to switch off.

### **BLUETOOTH OPERATION**

The SingCube is a high-quality Bluetooth speaker. Music can be played through the SingCube Speaker from a compatible Bluetooth device such as a mobile phone or tablet device.

Using your mobile phone or other Bluetooth enabled device, search for Bluetooth devices and select 'RJSC01' from the list of devices found. The Bluetooth device should then connect to the speaker and the status indicator will light continually in blue to show the successful connection.

### **SONG CONTROL**

- Press the PLAY/PAUSE button to alternately play and pause the song.
- Press the PREVIOUS track button to go back to the start of the track. Press twice to select the previous track.
- Press the NEXT track button to play the next track.

### **VOLUME CONTROL**

The output volume can be adjusted in two ways as follows;

- Adjust the volume on the Bluetooth device, mobile phone, tablet computer, iPad etc.
- Press the VOL- or VOL+ buttons on the speaker.

### **SWITCHING THE LIGHTSHOW ON/OFF**

Press and hold the MODE button to switch the lightshow on or off.

### **LISTENING TO YOUR IPHONE, IPOD, MP3 PLAYER ETC.**

You can listen to the sound of a connected external audio device such as an iPhone, iPod or MP3 player through your speaker. Connect one end of the 3.5 mm jack cable supplied to the AUX input socket located at the rear of the Bluetooth speaker, and the other end to your audio equipment (iPhone, iPod, MP3, PC, CD player, etc.). Press the MODE button to select the AUX input mode. The AUX indicator light will light up red to indicate AUX mode.

Operate the audio device as normal.

**NOTE:** Use the volume control and skip forward/backward controls of the connected audio device to control the song playback. Use the PLAY/PAUSE button on the speaker to mute and then unmute the music playback.

## **USING THE MICROPHONE**

You can sing along to any music playing from the speaker using the microphone or microphones included. Plug the microphone into the microphone sockets on the top of the speaker and slide the microphone power switch to the on position. Adjust the microphone volume and echo control as desired. If any howling sound occurs, then stand further away from the speaker or reduce the music or microphone volume until the howling stops.

**NOTE:** Do not tap or bang the microphone as this can cause damage to both the microphone and speaker. Be careful not to twist or strain the microphone cable and do not swing the microphone by the cable as this will cause irreparable damage.

## **TROUBLESHOOTING GUIDE**

If you encounter any issues while using the SingCube then please check the following before contacting the retailer or manufacturer for further help:

### **NO POWER**

- The power is not on; make sure the SingCube ON/OFF switch is set to On.
- The SingCube could be completely out of charge. Recharge the SingCube using a USB power supply and then try again.

### **NO LIGHTSHOW EFFECT**

- The Lightshow is probably just switched off. Press and hold the MODE button to turn on the lights.

### **NO SOUND – BLUETOOTH MODE**

- Make sure that you are not trying to use Bluetooth while the AUX in cable is connected.

### **NO SOUND – AUX INPUT MODE**

- Make sure the 3.5mm jack cable has been plugged in.
- Make sure the iPod/iPhone/MP3 player is connected properly and that a song is playing.
- Adjust the volume on the audio device.

### **NO SOUND FROM THE MICROPHONE**

- Make sure the microphone is firmly connected to the MIC socket.
- Make sure the ON/OFF switch on the microphone is set to the ON position.
- Make sure the MIC Volume control setting is not set too low.
- The Volume could be set to minimum; raise the volume.

## BLUETOOTH DEVICE PAIRING PROBLEMS

Mobile phone or Tablet etc. cannot be paired or connected with the SingCube

- You may not have not activated the Bluetooth function of your mobile device; refer to the Bluetooth device user guide.
- The SingCube is not in pairing mode; switch the SingCube off and then on to restart pairing.
- Another Bluetooth device may be connected; disconnect that device before trying to connect a new Bluetooth device.

## OTHER BLUETOOTH PROBLEMS

The music does not play on the SingCube after successfully connecting with Bluetooth

- Ensure your Bluetooth device can support the A2DP Bluetooth profile.
- The volume on the external Bluetooth device is set to low or muted; raise the volume of the Bluetooth device as required.
- The Bluetooth audio breaks up. Move the Bluetooth device closer to the SingCube or switch off the 'Wi-Fi' on the Bluetooth device as that can sometimes improve the audio playback quality.

## FINDING KARAOKE VIDEOS TO SING ALONG TO

'Karaoke videos' can be found easily by searching online using a search provider such as Google. YouTube is also a great source for Karaoke videos.

As a starter please scan the QR code below or Google search for 'rockjam karaoke channel YouTube'

[https://www.youtube.com/channel/UCrW\\_hEMEwmPmpVi78hGyRxw](https://www.youtube.com/channel/UCrW_hEMEwmPmpVi78hGyRxw)



Also, another good source of content. <https://www.youtube.com/user/TheKARAOKEChannel>

**DISCLAIMER:** PDT Ltd. is not responsible for any content on 'The KARAOKE Channel'

## FAQs

**Can music be played from an USB?**

No, this connects through 3.5mm aux or bluetooth.

**Can you add a second mike?**

Yes, you can add a second mic.

**Someone asked if a second mic could be added, and the answer came back yes, but how?**

A second mic can be added on the 5 watt model, not the 10 watt model.

**Does the 5w come with two microphones or just one?**

Two microphones.

**Does it come with song lyrics?**

No.

**I am new to this type of technology. Can my daughter use this with kindle fire? Is there an app or website you need to use?**

It can be used with any bluetooth device that has access to songs or internet. You can use any website for media that you wish.

**The Bluetooth is not showing up on the pairing list. It won't reset by turning off, and mode button does nothing. How do I pair?**

I'm having the same issue with the one I bought for my daughter . But it is working with the aux chord.

**In the very beginning of your ad it says it comes with two mic's then later in the ad it says one. Which is it?**

One mic. I purchased an additional one.

**Can you play a Karaoke CD on this?**

It doesn't take CDs it does have an Aux cord and a Bluetooth option.

**Does this have separate volume controls for mic?**

Yes.

**can it just play music from the cube or do I need a phone, tablet, or kindle to connect and play music?**

You will need a phone.

**Purchased this for Christmas present. It will no longer charge and smells burnt inside Looking for a replacement unit.**

I have not been able to use it all either, gave as gift and has never worked.

**It clearly states that it comes with two mics, but reviews says it only comes with one. Well which is it???**

It clearly states it features two wired microphones under "Features".

**Is there an app for the music? Does it automatically display the words to your device?**

No. Just any music player you use will work. And no it Durant show words.

**Adult use?**

We have been using this for family get togethers. It is great.