



singing machine SML385UZZ Karaoke Player with Bluetooth User Guide

[Home](#) » [Singing Machine](#) » singing machine SML385UZZ Karaoke Player with Bluetooth User Guide 

singing machine SML385UZZ Karaoke Player with Bluetooth User Guide



Contents

1 Operation

1.1 Using the LINE IN Jack

2 Where to Download MP3+G Files

3 FAQ

4 Troubleshooting Guide

5 Specifications

6 Documents / Resources

 
6.1 References

7 Related Posts

Operation

Using the LINE IN Jack

1. Connect the unit as described previously. Press the ON/OFF button to turn the unit on.

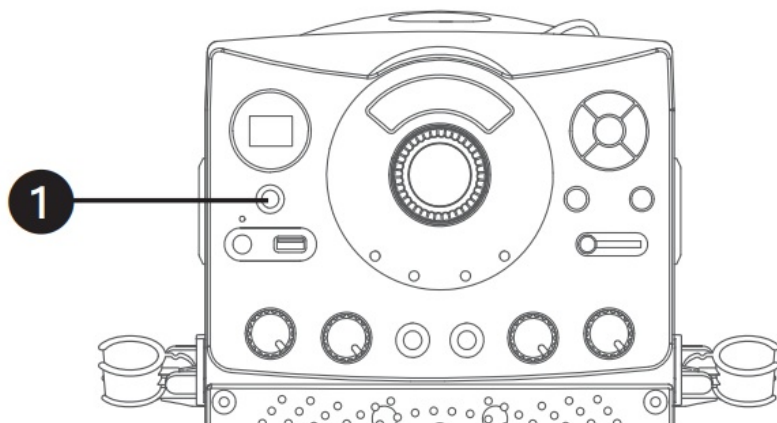


2. Connect the external unit to the LINE IN


Jack on the back of this unit. Connecting an external unit will allow the audio to be played through your Singing Machine. LINE IN function is automatically selected once the audio cable is plugged in.

Notes:


- It is highly recommended to set the volume on the auxiliary unit to 1/3 or lower to avoid distortion.
- Skipping files/tracks is not possible on this unit when using an external device.

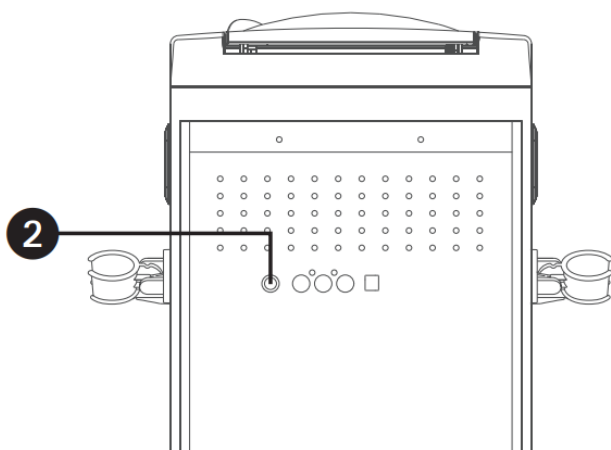


3. Adjust the volume using the MASTER VOLUME control on this unit or your external device's volume control.

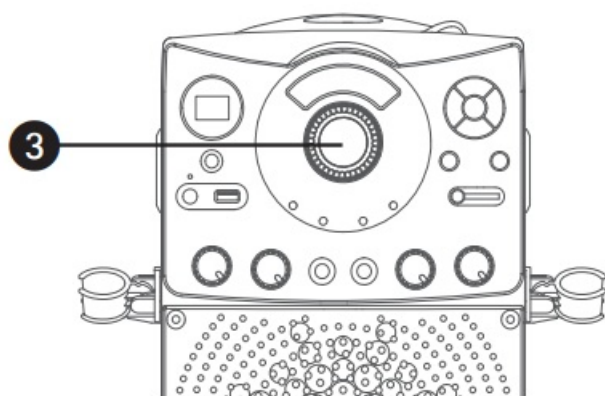


4. Connect microphone(s) and slide the ON/OFF switch on the microphone to the ON position.

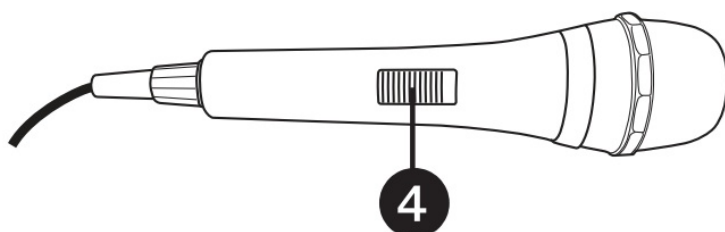

5. Adjust the MIC VOLUME control as desired. Increasing this control will increase the volume of both microphones.

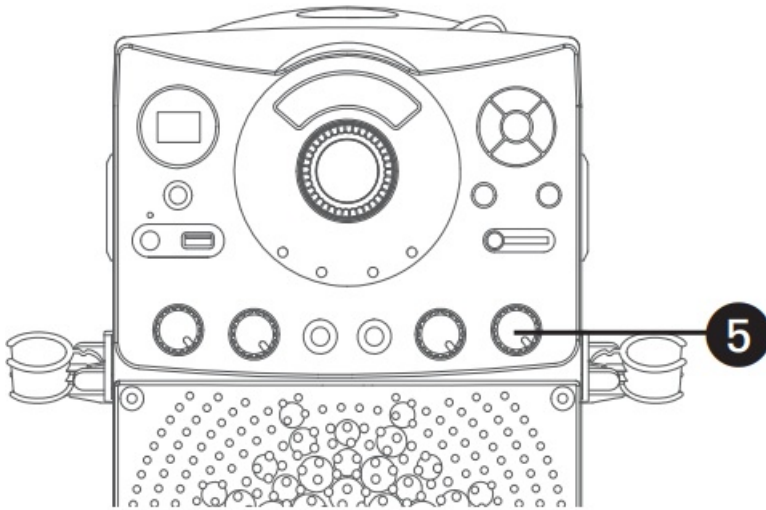

6. Rotate the ECHO control to add an echo effect to your voice. Rotate towards MAX to increase the echo effect.
7. Adjust the balance between the speakers using the BALANCE control.
8. Press the ON/OFF button to turn the unit off.

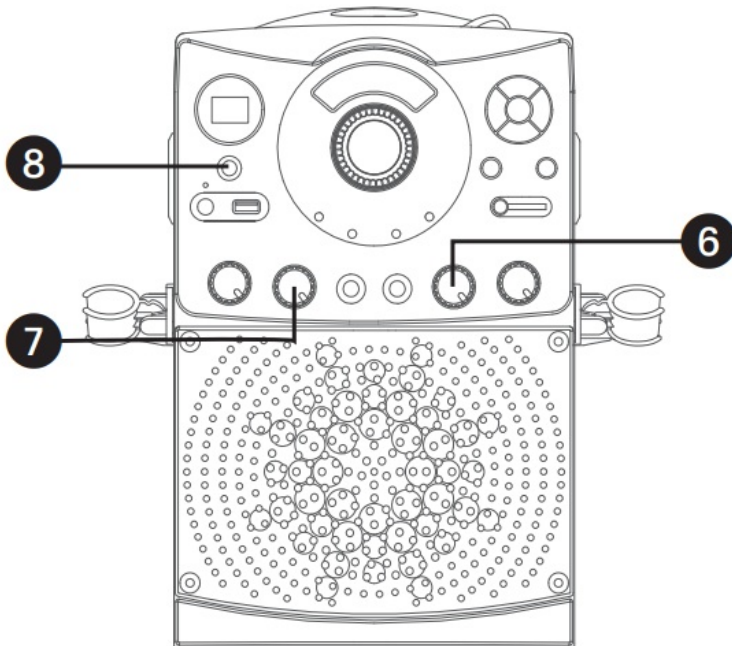

Where to Download MP3+G Files

Helpful Hints:

The .mp3 and .cdg files are delivered for download in a single, compressed MP3+G.zip file. The MP3+G file cannot be played as a .zip file on a USB flash drive. To play karaoke songs using a USB flash drive, the MP3+G .zip file must be unzipped as follows:

- Connect a USB flash drive to your computer.
- Download the MP3+G file from your Digital Locker and save the .zip* file to a folder on your computer.
- Double click the .zip file to open the .zip (you will see the .mp3 and .cdg files).
- Drag and drop the .mp3 and .cdg files to the USB flash drive.
- Remove (eject) the USB flash drive from your computer.

Turn on the Singing Machine and connect the USB flash drive.

FAQ

Where can I get additional help with the file formats?

Visit <http://singingmachine.com/smcmusic/> to get additional resources about the right type of FILE FORMAT for your system.


To purchase and download karaoke music, please visit <http://store.singingmachine.com> to access over 13,000+ of your favorite karaoke songs. You will need a USB flash drive (not included) to transfer the downloads to this unit.

Follow these easy steps:

1. Go to <http://store.singingmachine.com> using your internet browser, and then register.
2. Select and purchase your favorite karaoke music from the Singing Machine Download Store.
3. Download your selected purchase(s) from the Singing Machine Digital Locker to your USB flash drive.
4. Insert the USB flash drive as shown on page E12 and enjoy!


Using a Bluetooth Device

1. To control your Bluetooth device from this unit, press the PLAY/PAUSE ►|| button to start playback. Press the PLAY/PAUSE ►|| button during playback to pause the song.
2. Adjust the volume to a comfortable level using the MASTER VOLUME control on this unit as well as the volume

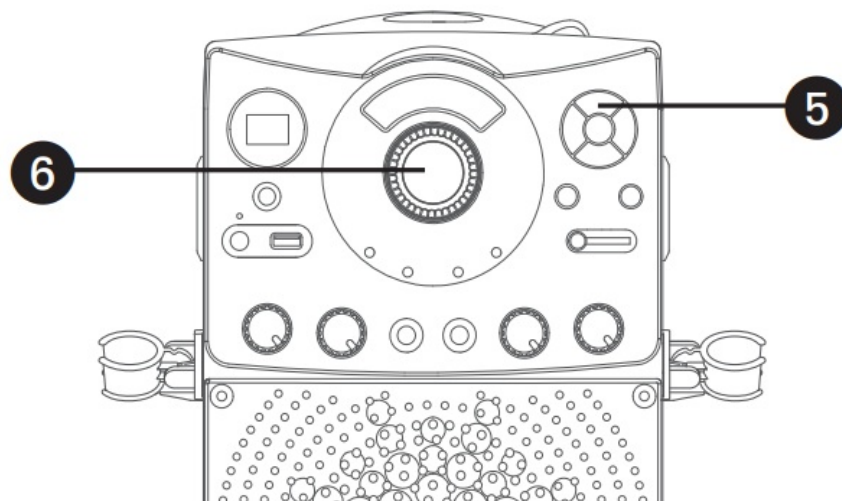 


on your Bluetooth device.

 
3. Connect microphone(s) and slide the ON/OFF switch on the microphone to the ON position.

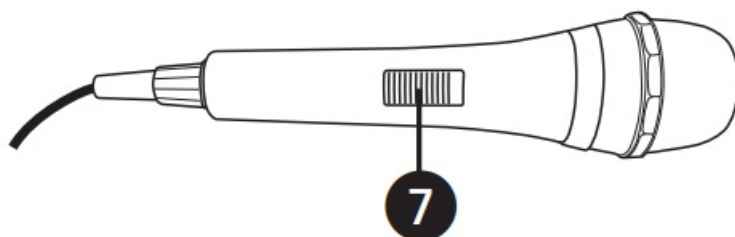

 4. Adjust the MIC VOLUME control as desired. Increasing this control will increase the volume of both microphones.
5. Rotate the ECHO control to add an echo effect to your voice. Rotate towards MAX to increase the echo effect

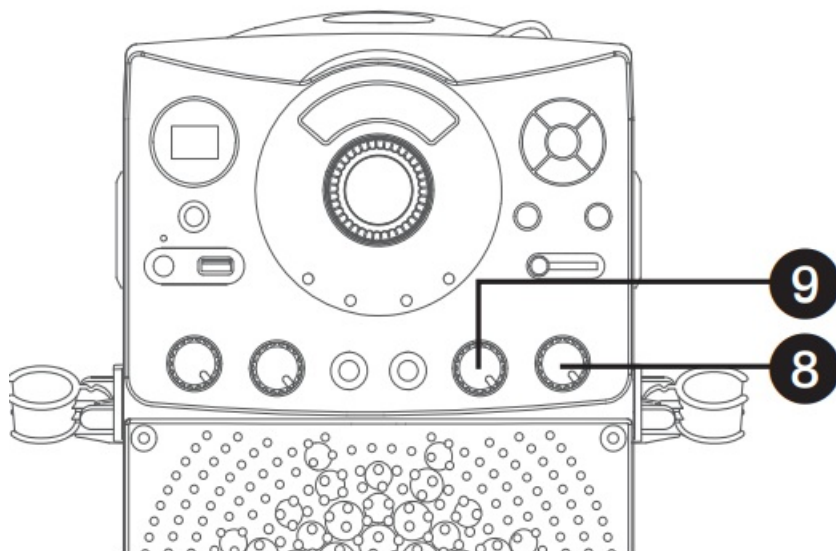


 6. Adjust the balance between the speakers using the BALANCE control
7. SKIP: Advance or go back one track by pressing the SKIP ◀◀/SKIP ▶▶ buttons.
8. RECORD YOUR SINGING: To record your singing as well as the music, press the RECORD button. Recording will begin and the record indicator will light solid. When done recording, press the RECORD button again; the record indicator will turn off.

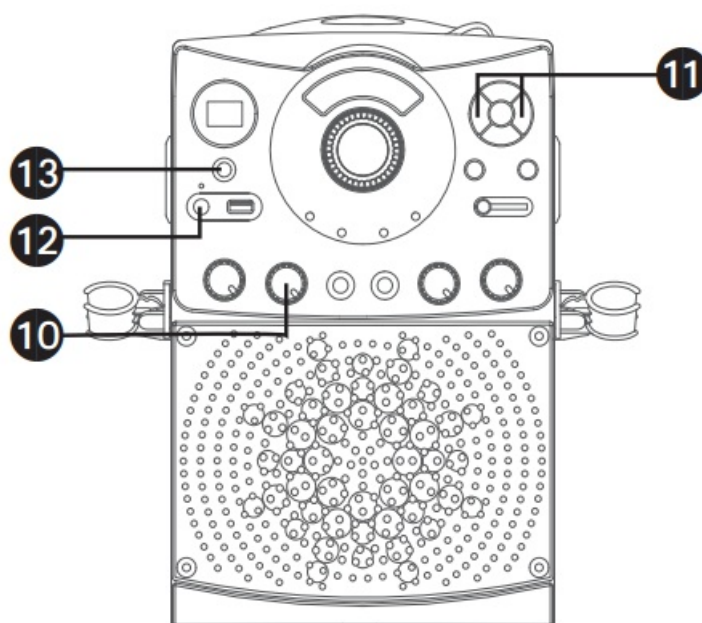

9. Press the ON/OFF button to turn the unit off.

 Note: Your downloaded songs can also be burned to a blank CDR/CDRW.

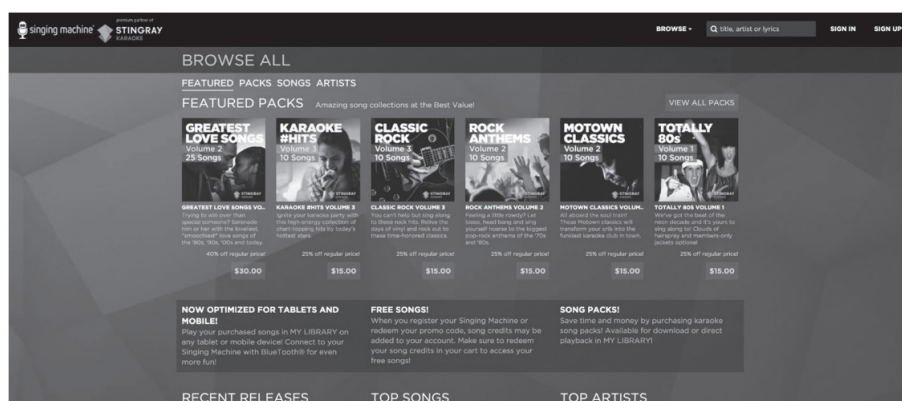

Troubleshooting Guide

Should this unit exhibit a problem, check the following before seeking service:

No Power

- Power is not on; press the ON/OFF button to turn power on.
- Confirm the AC adapter is connected securely to the back of the unit.
- Connect the unit to a different outlet

No Sound – General

- MASTER VOLUME is set to minimum; raise volume.
- Correct Function was not selected; select using the CDG/USB/BT button.
- If using an external device, raise the volume.
- Check if the LINE IN jack is still connected by a cable.

No Sound – If connected to a TV

- Volume on the TV is muted or too low.
- Correct source (usually AV) was not selected on the TV's menu.

Lyrics do not appear on the TV screen

- If connected to a TV, Video plug is not connected properly; see page E5.
- If connected to a TV, select the correct source on the TV (usually AV).
- The file/track being played is not a track recording with lyrics. These are the only files that allow you to view the lyrics on the TV screen.
- Nothing will appear on the TV screen when using Line In or Bluetooth.

File(s) on USB Jack not playing

- The file is corrupted; replace the file.
- The file is not in a format this unit will play.
- The connected USB device is not supported by the product.

No sound from the microphone

- Make sure the microphone is firmly connected to the MIC 1 or MIC 2 jack.
- Make sure the ON/OFF switch on the Mic is set to the ON position.
- Make sure the mic's volume is not set too low.
- MASTER VOLUME is set to minimum; raise volume.
- Adjust the ECHO control past the mid point on the Singing Machine.

The Bluetooth device cannot be paired or connected with the unit

- You have not activated the Bluetooth function of your device; see page E16 or refer to the Bluetooth device user's manual.
- The system is not in pairing mode; press the STOP/PAIR button to restart pairing.

The Music is not available on the unit after successfully connecting the Bluetooth

- Ensure your Bluetooth device can support the A2DP Bluetooth profile.
- The volume on the external Bluetooth device is set to low or muted; raise as desired.

Specifications

AUDIO

- **OUTPUT POWER (MAXIMUM):** 3.5 Watts (RMS)
- **OUTPUT IMPEDANCE :** 3 Ohms

CD PLAYER SECTION

- **FREQUENCY RESPONSE :** 100Hz – 20kHz
- **SIGNAL-TO-NOISE RATIO :** 50dB
- **NUMBER OF PROGRAMS:** 20 Step Random Access Programming
- **SAMPLING SYSTEM:** 8 Times Over Sampling


BLUETOOTH


- **Bluetooth Version:** V .0
- **Working Distance:** Up to 30 feet/10 meters measured in open space

USB

- **Format:** FAT32
- **Maximum Compatibility:** 32GB
- **AUX IN SECTION:** 3.5 mm Stereo Headphone Jack
- **MICROPHONE:** 74db 600 Ohm Impedance with 6.3 mm Dynamic Microphone
- **POWER SECTION:** DC 5.8V 1.5A
- **POWER CONSUMPTION:** 8.7 W
- **DIMENSIONS (HxWxD):** 13.4 x 10.4 x 9.3 inches / 34.1 x 26.5 x 23.5 cm
- **WEIGHT:** 5.4 lbs / 2.4 kgs

Specifications are subject to change without notice.

 **Bluetooth®** The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks and logos by The Singing Machine Company, Inc. is under license. Other trademarks and trade names are those of their respective owners.

<div><p>Operation</p><p>Using a Remote Control (Continued)</p><p>5 Press the POWER button to turn the unit on.</p><p>6 Press the STOP button to stop the unit.</p><p>7 Press the PAUSE button to pause the unit.</p><p>8 Press the REPEAT button to repeat the unit.</p><p>9 Press the SKIP button to skip the unit.</p><p>10 Press the PREV button to go to the previous track.</p><p>11 Press the NEXT button to go to the next track.</p><p>12 Press the STOP button to stop the unit.</p><p>13 Press the POWER button to turn the unit off.</p></div>	<p>singing machine SML385UZZ Karaoke Player with Bluetooth [pdf] User Guide</p> <p>SML385UZZ, 2AAXO-SML385UZZ, 2AAXOSML385UZZ, SML385UZZ Karaoke Player with Bluetooth, SML385UZZ, Karaoke Player with Bluetooth</p>
---	--

References

-  [Stingray Karaoke](#)