


singing machine SMM548 Microphone with Bluetooth and Speaker Instruction Manual

Home » Singing Machine » singing machine SMM548 Microphone with Bluetooth and Speaker Instruction Manual



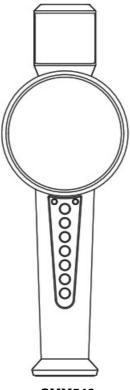

SMM548
INSTRUCTION MANUAL MANUAL DE INSTRUCCIONES MODE D'EMPLOI
The Singing Machine Company, Inc.
4060 E Jurupa Street, Unit B Ontario, CA 91761-1413 USA


Contents

- 1 Included What's in the box
- 2 Important Safety

Information

- 3 Specifications
- 4 Troubleshooting Guide
- 5 Before you get started
- **6 Operation**
- 7 Warnings
- 8 Documents / Resources
- 9 Related Posts

Included What's in the box

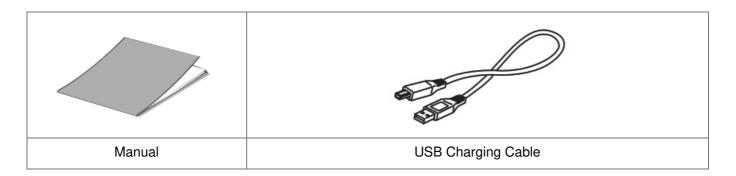

The Responsible Party

Company Name: The Singing Machine Co., Inc.

Address: 6301 NW 5th Way, Suite 2900, Fort Lauderdale, FL33309, USA

Telephone: 954 -596-1000

Copyright © 2020 All Rights Reserved.

Important Safety Information

- 1. Read these Instructions.
- 2. Keep these Instructions.
- 3. Heed all Warnings.
- 4. Follow all Instructions.
- 5. Do not use this apparatus near water.
- 6. Clean only with a dry cloth.
- 7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 8. Only use attachments/accessories specified by the manufacturer.
- 9. Unplug this apparatus during lightning storms or when unused for long periods of time.
- 10. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 11. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Do not place objects filled with water, such as a vase, on the apparatus.
- 12. **CAUTION:** To reduce the risk of fire or explosion, do not expose batteries to excessive heat such as sunshine,

fire or other heat sources.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Specifications are subject to change without notice. Please retain the instructions for further reference, as they contain important information.

Bluetooth® The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks and logos by The Singing Machine Company, Inc. is under license. Other trademarks and trade names are those of their respective owners.

Specifications

AUDIO SECTION

Troubleshooting Guide

Should this unit exhibit a problem, check the following before seeking service:

No Power

- If the power is not on; press and hold the button to turn the power on.
- · Confirm that the unit is charged.

No Sound - General

- Volume is set to a minimum; raise the volume of your Bluetooth music device by its volume control.
 No sound from the microphone
- The microphone volume is set to a minimum; raise the microphone volume by pressing VOL + button up. Bluetooth reception failure
- Put the external Bluetooth device close to the unit.
- Pair the unit with the Bluetooth Device as per the procedures stated in this manual.

Before you get started

EXIT "TRY ME" MODE

Press and hold the / button 2 seconds or charge the unit to exit the "TRY ME" mode.

CHARGING THE UNIT


1. Insert the included USB charging cable into the unit's micro USB port 1.

- 2. Plug the other end of the cable into a computer's USB port or other USB charging device (not included). We recommend charging the unit 4 hours to ensure it is fully charged.
- 3. The speaker will light in red and slowly flash while the unit is charging. The light will turn off once the unit is fully charged.

NOTE: Please charge the unit when you see the light on the speaker flashing red.

CONNECTING HEADPHONES

For private listening or to monitor singing, use headphones (not included). Insert headphones into the Headphones jack 2.

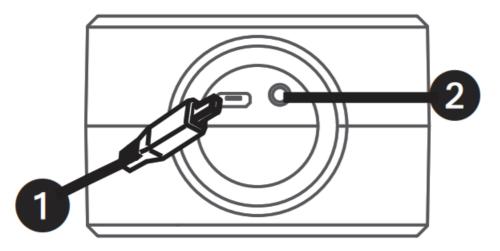


Energy Saving Mode (Auto Power System-APS)

The unit will automatically switch off after 30 minutes in the following situations:

- 1. There is no singing into the microphone;
- 2. The Bluetooth music has been stopped.

The unit can be switched on again by pressing and holding the button. APS is for energy-saving purposes.

Operation

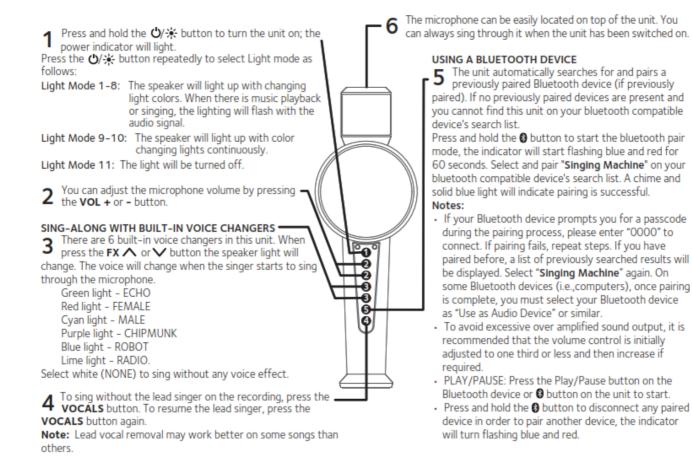

Warnings

DRIPPING WARNING: This product shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the product.

Warnings:



Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. To parents recommending that the adaptor be periodically examined for conditions that may result in the risk of fire, electric shock, or injury to persons and that, in an event of such conditions, the adaptor should not be used until properly repaired.

FCC WARNING: This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

PRINTED IN CHINA

Documents / Resources



singing machine SMM548 Microphone with Bluetooth and Speaker [pdf] Instruction Manual SMM548 Microphone with Bluetooth and Speaker, SMM548, Microphone with Bluetooth and Speaker, Bluetooth and Speaker, Bluetooth, Speaker, Microphone

Manuals+,