



SINOX SXBT3500 Table Bluetooth Speaker User Manual

[Home](#) » [SINOX](#) » SINOX SXBT3500 Table Bluetooth Speaker User Manual 

Contents

- [1 SINOX SXBT3500 Table Bluetooth Speaker](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 What is in the box](#)
- [5 Assemble Steps](#)
- [6 Specifications](#)
- [7 Function](#)
- [8 Operation](#)
- [9 Power ON / OFF](#)
- [10 AUX Auto Switch](#)
- [11 Bluetooth Connection and Play](#)
- [12 Volume Control](#)
- [13 USB Charging](#)
- [14 Wireless Charging](#)
- [15 Automatic Power Off](#)
- [16 Documents / Resources](#)



SINOX SXBT3500 Table Bluetooth Speaker



Product Information

The SXBT3500/SXBT3501/SXBT3502 Table Bluetooth Speaker is a 2.1 channel speaker with Bluetooth version BT 4.2. It features a maximum output power of 65W (15W*2 + 35W) and a frequency range of 45Hz-18KHz. The speaker is equipped with drive units consisting of a 6.5" subwoofer and two 4" mid-range drivers, providing a powerful and immersive audio experience. It also has a wireless charging function with a power output of 5W (5V1A) and a USB input for charging devices at 5V2.4A. The speaker comes with an AC adapter for power supply and supports TWS (True Wireless Stereo) functionality for connecting multiple speakers.

Product Usage Instructions

1. Open the gift box and place the speaker on a flat surface with the base facing upwards.
2. Take one wooden leg and insert it into a screw hole.
3. Rotate the wooden leg clockwise until it is tightly fastened.
4. Repeat steps 2 and 3 for the remaining 3 wooden legs.
5. Turn the speaker right side up after the wooden legs are assembled.
6. To switch to AUX mode, insert the AUX cable into the AUX socket at the rear panel of the speaker. The speaker will automatically switch to AUX mode, indicated by the green LED light turning on. The Bluetooth mode will be switched off. To switch back to Bluetooth mode, remove the AUX cable.
7. To connect via Bluetooth, turn on the speaker and wait for the voice prompt indicating Bluetooth mode is active. Use your device to search for available Bluetooth devices and select the SXBT3500/SXBT3501/SXBT3502 speaker to pair.
8. The speaker also supports TWS functionality for connecting multiple speakers. Refer to the manual for detailed instructions on setting up TWS.

9. Use the volume control to adjust the audio level. The EQ switch allows you to select different EQ modes: Movie, Pop, Rock, or Normal.
10. For wireless charging, place a compatible device on the speaker's charging pad. Ensure that the device is aligned properly for optimal charging.



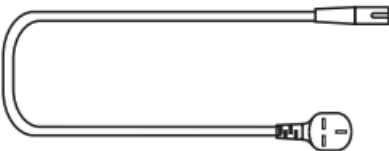
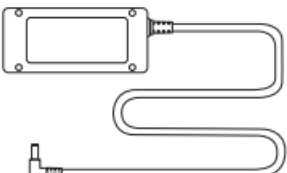


Please refer to the manual for additional information and safety instructions. Keep the manual for future reference.

Thank you for purchasing SXBT3500/SXBT3501/SXBT3502 Table Bluetooth Speaker, in order to make the best use of this product and to use it safely, please read the manual carefully before use and keep it for future reference.

Warning

1. The maximum bear weight of this product is 15Kgs, the consumers couldn't put any item more than 15Kgs on this product, otherwise, the consumers will bear the damage to this product by themselves.
2. This product couldn't be used as seat, no matter adult, or children, couldn't sit on this product, otherwise, the consumers will have to bear by themselves the damage to this product, and the damage to your health.
3. Please use the original A/C adapter for charging, if not, it may cause the speaker to be charged slowly or cannot be charged at all. In extreme cases, A/C adapter will be burned out or other accident occurred !

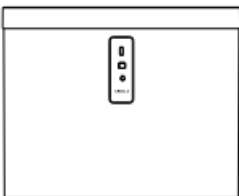What is in the box


<p>1</p>  <p>Main Body Qty 1</p>	<p>2</p>  <p>Legs Qty 4</p>
<p>A</p>  <p>Power Cable Qty</p>	<p>B</p>  <p>AC Power Adapter Qty 1</p>
<p>C</p>  <p>EVA Pad Spare Parts(if required) Qty 4</p>	<p>D</p>  <p>3.5mm Aux Cable Qty 1</p>

Assemble Steps

1. Open the gift box, place the speaker on a flat surface with base

(showing the screw holes) upwards.

 2. Take one wood legs and insert it into a screw hole.
3. Rotate wooden leg clockwise until tightly fastened.
4. Repeat Step 2 for remaining 3 wooden legs.
5. Repeat Step 3 for remaining 3 wooden legs.
6. Turn the speaker right side up after the wooden legs are assembled.

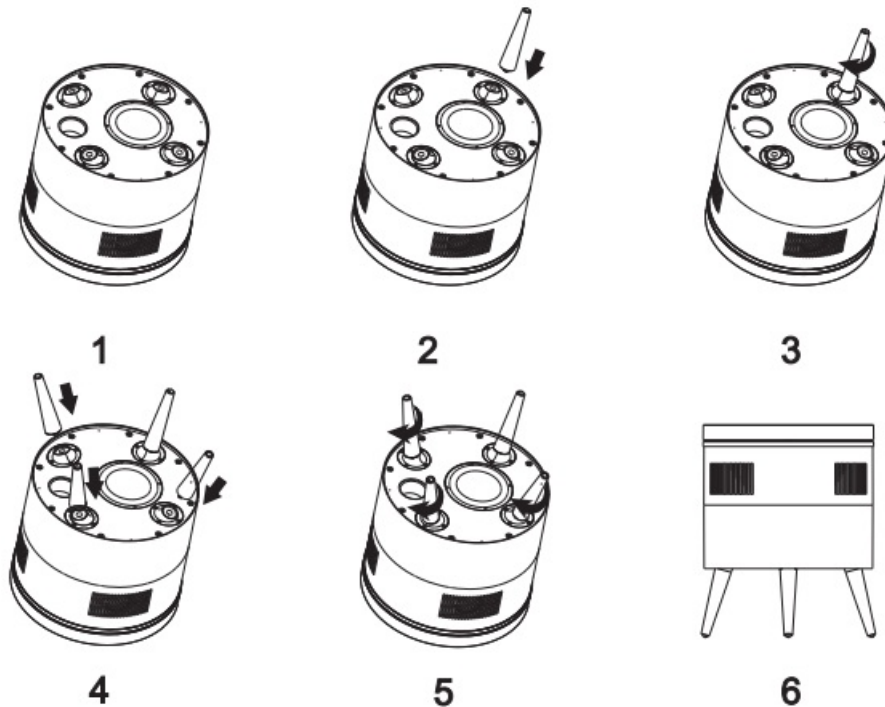

Specifications

- 2.1 CH Bluetooth Table Speaker
- Bluetooth version: BT 4.2
- Drive units: 6.5" 4Ω 40W x 1, 2.75" 8Ω 15W x 2, ϕ 31mm 6Ω10W x 2
- RMS: 65W (15W*2 + 35W)
- Bluetooth frequency: 2.402-2.480GHz
- Frequency range: 45Hz-18KHz
- S/N: ≥ 75 dB
- Separation ratio: ≥ 55 dB
- Working voltage: DC 18V 3.5A
- USB input: 5V2.4A
- Wireless Charging: 5W (5V1A)
- Power Supply: AC adapter
- Input: AC 100-240V~50/60Hz 1.5A

 
Function

- Bluetooth
- Aux In
- USB charger function


- TWS (true wireless stereo)
- Wireless charger function
- EQ (Movie /Pop/Rock/Normal)

Operation

Operation of the keys and the back side panel

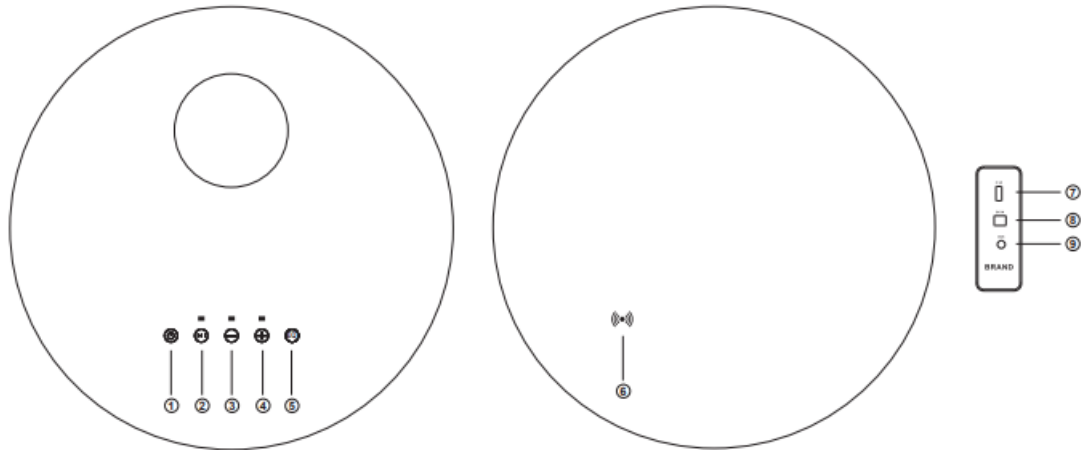

 1. Power ON / OFF / TWS
2. Play / Pause
3. Volume –
4. Volume +
5. EQ (POP, ROCK, MOVIE)
6. Wireless charger symbol
7. USB Charging Port: (5V2.4A)
8. DC IN (power socket)
9. AUX-in

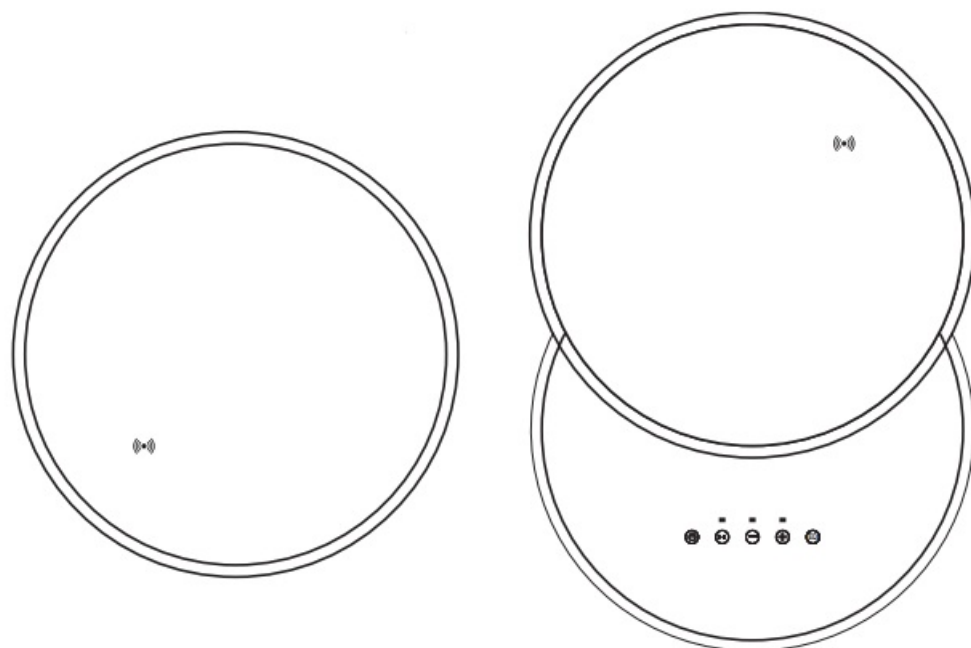


The top panel can be revolved clockwise or counterclockwise with 350°.

Power ON / OFF

1. Connect the AC adapter with the speaker's DC socket (please make sure you use the original AC adapter comes with the speaker), you can hear the voice of "Power On" from speaker prompt, the speaker will auto-start and enter Bluetooth mode as default, and sound "Bluetooth, waiting for connection", then smart phone and other devices can be paired with speaker. Warning: Please use the original A/C adapter for charging, if not, it may cause the charger to be charged slowly or cannot be charged not at all. In extreme cases, A/C adapter will be burned out or other accident occurred!
2. Long press [POWER] button, the speaker will be turned on, you will hear the voice of "Power On" from speaker prompt, and it will enter Bluetooth mode with voice of "Bluetooth, waiting for connection".
3. Long press [POWER] button, the speaker will be turned off, you can hear the voice of "Power Off" from the speaker prompt.

 AUX Auto Switch

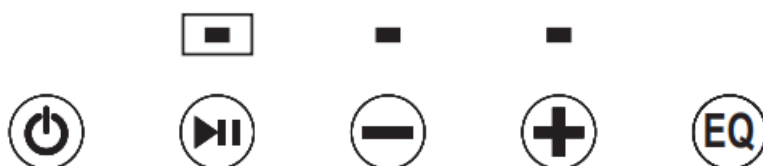


Insert the AUX cable into the AUX socket at the rear panel of the speaker, the speaker will switch to AUX mode automatically, the green LED light will be on.

The Bluetooth mode will be switched off directly.

After taking out the AUX cable, the Bluetooth mode will be switched on automatically, then you can hear the voice of "Bluetooth, waiting for connection" or "Bluetooth".


Bluetooth Connection and Play

 Bluetooth Connection and Play (LED indicator: the left LED light)

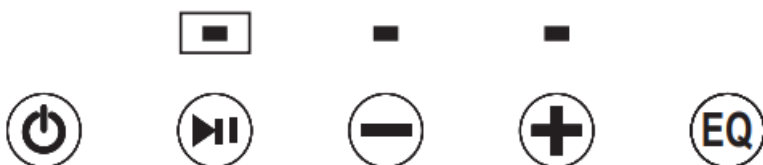

1. When the speaker is in Bluetooth mode, it will automatically switch to pairing state, the blue LED light will flash quickly, the Bluetooth device name is "SXBT3500"/"SXBT3501"/"SXBT3502".
2. The speaker will pair with smart phone via Bluetooth, the speaker will sound "Bluetooth is connected" after pairing, the blue LED light will be always on.
If failed, the blue LED light will flash quickly.
3. When playing music after connecting with smart phone via Bluetooth, the speaker will pause if shortly press Play/Pause, it will play after shortly press Play/Pause again.
4. When this speaker is connected with smart phone, long press the button Play/Pause, the speaker will switch off the connection with the pairing mobile phone; You can hear the voice of "Bluetooth Disconnected, waiting for connection", another smart phone can connect "SXBT3500"/"SXBT3501"/"SXBT3502" via Bluetooth.

 EQ Switch (LED indicator: the left Middle light)

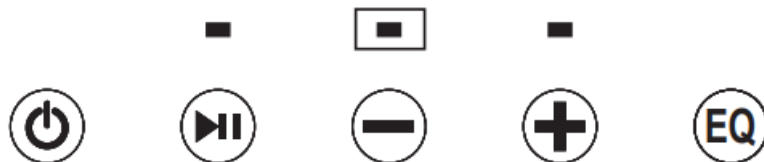

When the speaker is powered on, the speaker will enter normal mode as default, the LED light will not be illuminated. The speaker will enter POP mode if shortly press EQ, the RED LED light will be illuminated and with sound of "POP"; The speaker will enter Rock mode if shortly press again, the GREEN LED light will be illuminated and with sound of "ROCK"; The speaker will enter Movie mode if shortly press again, the LED light will be green and red at the same time, and with sound of "Movie". The speaker will enter normal mode by pressing one more time, and with sound of "Normal"

Voice Reminding

1. POWER ON: Connect the power supply (voice prompt when the speaker turns on).
2. Bluetooth: Bluetooth mode.
3. POWER OFF: Shut off the power supply (voice prompt when the speaker turns off).
4. Waiting for connection: Paring (enter Bluetooth mode, and back to Bluetooth mode).
5. Bluetooth is connected: pairing successfully, back to Bluetooth Mode successfully.
6. Bluetooth Disconnected, wait for connection: switch off the connection with the paired mobile phone (long press Play/Pause to disconnect Bluetooth).
7. Maximum volume.

Volume Control

1. Press + button to increase the volume, the white LED flash (30 levels in total, 15 levels by default when speaker turn on), you can hear the voice prompt "Maximum volume" when volume is max.
2. Press - button to decrease the volume, the white LED is sparkle (30 levels in total, 15 levels by default when speakers turn on)

USB Charging

When the speaker is powered on, the USB port (2.4A) can charge iPhone and other Android mobile phone at the same time, when the speaker is turned off, the USB port cannot charge any external devices.

Remark: The USB charger port (DC 5V2.4A) can charge iPhone and other Android mobile phones even under power off status if the A/C adapter is connected with power.

Wireless Charging

1. If you have a smart phone with inductive charging, you can charge it by placing it onto the inductive symbol for wireless charging.
2. The symbol is located on the top of the speaker table.
3. Make sure the smart phone is within the charging area, if there is charging connection, you will hear a short acoustic signal or a charging symbol will be appeared in your phone. You can remove your smart phone from the charging area at any time to end the charging process.

TWS Function (LED indicator: the right LED light)



1. Turn on the first and second speaker, double click POWER/TWS on one of two speakers, the speakers will enter team pairing mode, you will hear an acoustic signal, the orange LED is quickly sparkle at the same time. After the team pairing, the orange LED of main speaker will always light, the LED of sub-speaker will slowly sparkle of satellite.
2. When speakers are team paired successfully, shortly press POWER/TWS one time, the speakers will switch off the team pairing.
3. When speakers are team paired successfully under Bluetooth mode, the two speakers can still be work as paired speakers with inserting the AUX cable into the AUX socket on the back panel of main speaker, but the two speakers will be failed if insert Aux cable into the Aux socket on the back panel of sub-speaker.

Remark: While the speakers are set into TWS mode, the EQ function of both speakers can be adjusted by pressing one of their EQ button.

Automatic Power Off

After power on the speaker, if no Bluetooth connection, no LINE IN signal, or disconnect the Bluetooth after 10 minutes, the speaker will be powered off automatically, the speaker will sound "POWER OFF"

www.sinox-europe.com

Documents / Resources



[SINOX SXBT3500 Table Bluetooth Speaker](#) [pdf] User Manual
SXBT3500, SXBT3501, SXBT3502, SXBT3500 Table Bluetooth Speaker, Table Bluetooth Speaker, Bluetooth Speaker, Speaker