



Siretta SNYPER-LTE+ Graphyte Network Signal Analyzer User Guide

[Home](#) » [Siretta](#) » Siretta SNYPER-LTE+ Graphyte Network Signal Analyzer User Guide 



**SNYPER-LTE+/Spectrum
(EU/USA)
Quick start guide+**



Contents

- 1 SNYPER-LTE+/Spectrum Case Contents
- 2 FIRST STEP BEFORE LISE
- 3 SURVEY
- 4 SAVED RESULTS
- 5 SETUP
- 6 ABOUT
- 7 PC CONNECT
- 8 Documents / Resources
 - 8.1 References
- 9 Related Posts

SNYPER-LTE+/Spectrum Case Contents

1. SNYPER-LTE+ or SNYPER-LTE+ Spectrum
2. PSU with 4 Adapter Heads
3. 0.5M USB Cable
4. USB Car Charger
5. Omni-directional Antennas – General Purpose (Blue) and 2600MHz (Silver/Grey)
6. LiveSCAN Directional Antenna (Spectrum model only)
7. 1.5M Extension Cable for LiveSCAN Antenna (Spectrum model only)

FIRST STEP BEFORE LISE

↳ BATTERY CHARGE

Charge the unit for 4-6 hours or until the red charge light is extinguished.

↳ SET TIME

1. Power up the SNYPER 



2. Select 'Setup' from the 'Main Menu'
3. Select 'Set Time'
4. Use the keypad arrows to set the date/time

Use the  **BACK** key to exit

SOFTWARE UPDATE

Go to <https://www.siretta.com/snyper-plus> to check for the latest software.

 Your SNYPER is now ready to use

SURVEY

NEW SURVEY OPTIONS

1. Select Full, LTE, UMTS, or GSM*
2. Press **OK** to start survey
3. Leave the device to complete the survey

*The SNYPER-LTE+ (USA) does not survey the GSM band.

POST SURVEY OPTION 1

1. Select 'Show Results'
2. Press **OK** to start LiveSCAN (Spectrum only)

Use  **BACK** key to exit

POST SURVEY OPTION 2

1. Select 'Show Summary'

Use  **BACK** key to exit

POST SURVEY OPTION 3

1. Select 'Save Results'

This is only necessary if AutoSave is off

Use  **BACK** key to exit

SAVED RESULTS

STORED SURVEY

1. Select results file you wish to view
2. Select 'Show Results', 'Show Summary' or 'Export Results'

Use  **BACK** key to exit

SETUP

↳ Language: ENG/DEU/FRA/ITA/SPA
Display: Screen brightness and text colors
Auto-off: Auto switch off and dimming
Documents: File types and AutoSave
Sound: On/Off
System: Mode and region of operation
Set Time: Set date and time
Reset Menu: Return to default settings
Use  **BACK** key to exit

ABOUT

Key reference parameters about the device
Use key to exit

PC CONNECT

↳ PC CONNECT

1. Connect USB cable between device and PC
 2. Select ON to enable USB connection, begin results download
 3. Copy files required to PC
 4. Select OFF to disable the connection
- Use  **BACK** key to exit

You can then view results files on your PC

For more detailed information, please visit our website:

www.siretta.com

+44 (0)118 976 9000

Siretta Ltd, Basingstoke Road, Spencers Wood, Reading, Berkshire, RG7 1PW, UK

Documents / Resources

	Siretta SNYPER-LTE+ Graphyte Network Signal Analyzer [pdf] User Guide SNYPER-LTE, SNYPER-LTE Spectrum, SNYPER-LTE Graphyte Network Signal Analyzer, SNYPER-LTE Graphyte, Network Signal Analyzer
	Siretta SNYPER [pdf] User Guide SNYPER

References

- [▲ Siretta - Cellular Modems, Routers, Signal Analysers, Antennas, Cables](#)
- [▲ Software Library - Siretta - Enabling Industrial IoT - Software Updates](#)
- [▲ Software Library - Siretta Limited - Software Updates](#)

