

SIRHC LABS 2015-2017 Mustang GT 5.0L Cortex EBC Instructions

Home » SIRHC LABS » SIRHC LABS 2015-2017 Mustang GT 5.0L Cortex EBC Instructions





CORTEX EBC 2015-2017 Mustang GT 5.0L Specific Instructions Rev 1.0.0


Contents

- 1 2015-2017 Mustang GT 5.0L Cortex
- **2 VEHICLE CONFIGURATION SETTINGS**
- **3 GEAR DETECTION**
- **4 SPEED DETECTION**
- **5 Documents / Resources**
- **6 Related Posts**

2015-2017 Mustang GT 5.0L Cortex EBC

WIRING

The 2015-2017 Mustang GT PCM is in the passenger side of the engine bay next to the fuse box. The PCM has two connectors. Power, RPM, vehicle speed, and throttle position signals can be accessed at these connectors.

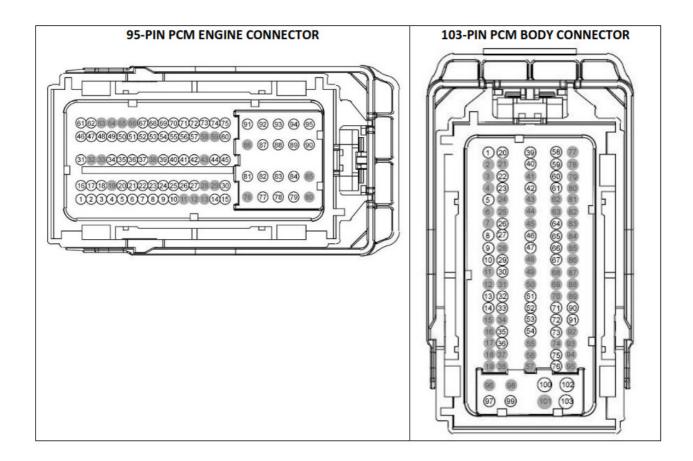

The Cortex EBC wiring harness can be connected to the PCM connectors as outlined in the following table (B = Body Connector, E = Engine Connector). RPM and vehicle speed signals are required for boost by gear applications.

CORTEX EBC TO PCM CONNECTIONS


| CORTEX SIGNAL | CORTEX WIR E COLOR | PCM SIGNAL | PCM PIN | PCM WIRE COLO |
|-----------------|-----------------------|-------------------------------------|---------|-----------------|
| +12V Power | Red | Switched PCM Power | B-97 | Blue |
| Ground | Black (x2) | Connect to Chassis Near EBC | N/A | N/A |
| Engine Speed | Pink | Intake Cam Position Sensor (CMP 21) | E-42 | Yellow / Blue |
| Vehicle Speed | Green | Output Shaft Speed | E-26 | Yellow / Orange |
| General-Purpose | Orange | Throttle Position 1 | E-10 | Brown |

VEHICLE CONFIGURATION SETTINGS

RPM DETECTION:


• Mode: RPM

Pulses Per Cycle: 7Rotations Per Cycle: 2

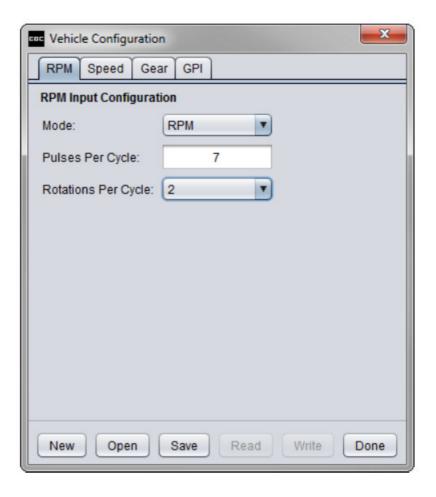


GEAR DETECTION

• Follow the steps in the Setup – Gear Detection section of the Help utility to determine the correct EVS ratio settings for gear detection.

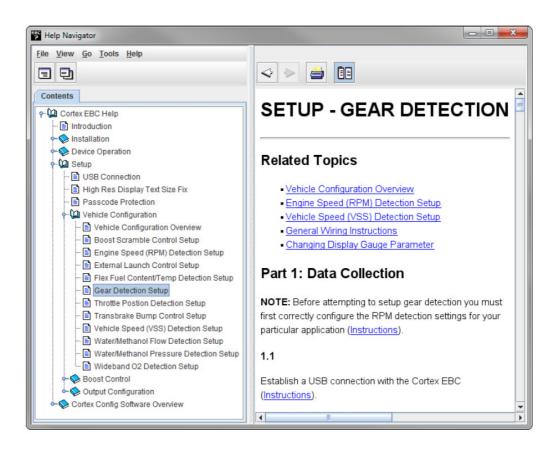


SPEED DETECTION

- Follow the steps in the Setup Vehicle Speed Detection section of the Help utility to determine the correct Pulses Per Mile setting.
- NOTE: Gear detection setup should be performed before calibrating the Pulses Per Mile setting.

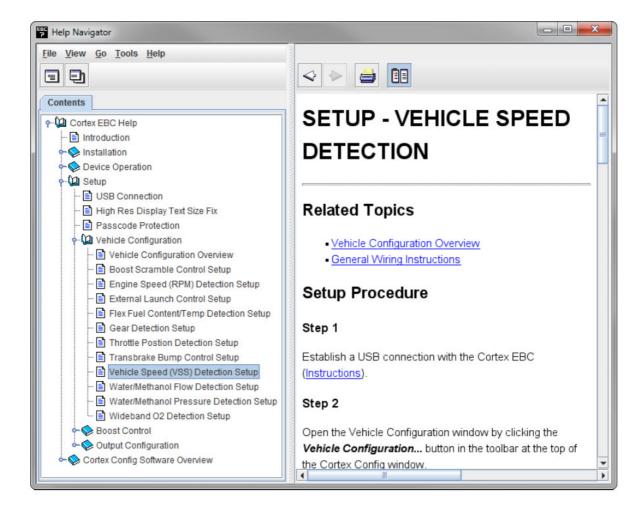


THROTTLE POSITION DETECTION

• Follow the steps in the Setup – Throttle Position Detection section of the Help utility to determine the correct Closed TPS Voltage and Open TPS Voltage settings.

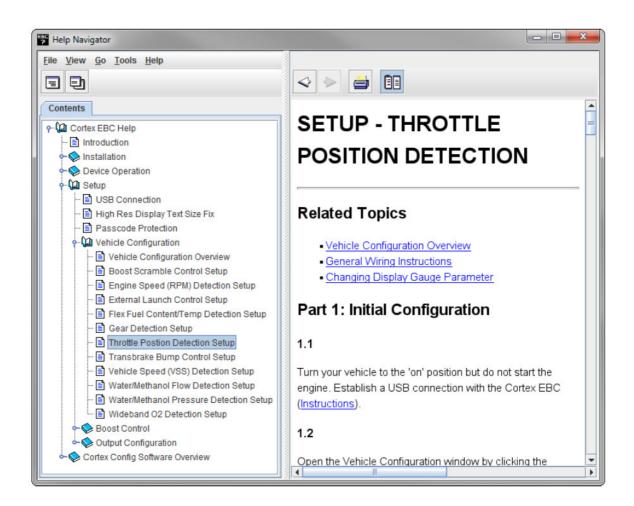



Documents / Resources

 

SIRHC LABS 2015-2017 Mustang GT 5.0L Cortex EBC [pdf] Instructions 2015-2017 Mustang GT 5.0L Cortex EBC, 2015-2017, Mustang GT 5.0L Cortex EBC, Cortex EBC, EBC

Manuals+,