

SJCAM C110 Action Camera User Manual

Home » SJCAM » SJCAM C110 Action Camera User Manual

Contents

- 1 SJCAM C110 Action Camera
- **2 Product Overview**
- **3 Accessories**
- **4 Product Specifications**
- **5 Button Description**
- **6 Start Using**
- **7 Operation Introduction**
- **8 CONTACT**
- 9 Documents / Resources
 - 9.1 References



SJCAM C110 Action Camera



User Guide

Before using the camera for the first time, please read the user manual carefully.


Safety guidelines

- 1. Do not place this product near objects with strong magnetic fields, such as magnets or motors. Also, avoid placing this product near objects that can emit strong radio waves to avoid product malfunctions caused by strong magnetic fields and radio waves.
- 2. Please choose a legitimate brand of micro SD card.
- 3. Do not place the micro SD card near objects with strong magnetic fields to avoid data loss.
- 4. If the product overheats, smokes or has an odor during the charging process, please immediately unplug the charging device and stop charging to avoid a fire.
- 5. When charging, please place the product out of reach of children to avoid accidents such as electric shock.
- 6. Please place the product in a cool, dry, and dust-free place. Do not expose the product to high temperatures or direct sunlight.
- 7. This product is a high-precision device, please do not fall or collide.

Please choose a formal recycling point to recycle this product or battery, and do not dispose of it in the trash. To prevent camera damage, please do not disassemble it without authorization!


If there are any malfunctions or other issues, please contact customer service for consultation.

Product Overview

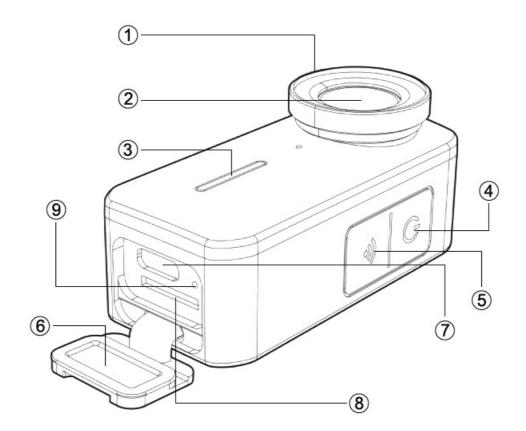

- 1. Lens Cover
- 2. Lens
- 3. Indicator Light
- 4. On/Off Button
- 5. WiFi Button
- 6. Silicone Plug
- 7. Type-C
- 8. micro SD Slot
- 9. Reset Hole

Accessories

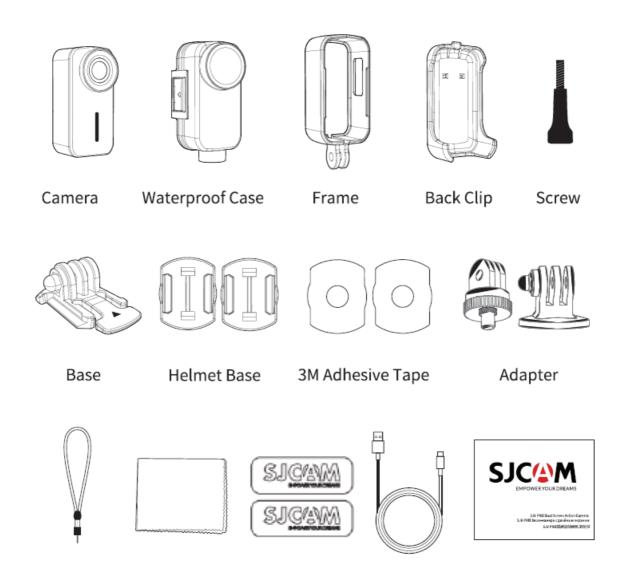

Hanging Rope Wiping Cloth Stickers USB Cable User Manual

Product Specifications

Len angle: 160°Battery: 850mAhWiFi: 2.4GHz

Encoding format: H.264 / H.265Light frequency: 50Hz/60Hz

Video format: MP4Image format: JPG

• Video resolution: 4K 30fps

. 2.7K 60fps,

• 1080P 120fps/60fps/30fps,

720P 120fps/60fps/30fps

• Image size: 20M (5888.3312) 16M (4608.3456)

• 14M (4160.3200) 12M (4640.2608)

• IOM (4320.2432) 8M (3264.2448)

SM (3200*1808) 3M (2s50*1440)

o 2M (1920.1088)

• USB interface: TYPE-C

Power input: 5Y1A

• Storage: micro SD card, supports up to 128G

Working temperature: -10°C-45°C
Product size: 64.6.30.2'26.3 MM

• Weight: 47g

Recording time: 70 minutes (4K/30FPS, with WiFi off)

· Charging time: approximately 1.5 hours

• Operating system: windows78X/OS version 10.8 or higher

Button Description

- 1. Power button: Press and hold for about 3-5 seconds to turn on/off; Short press to take photos/videos.
- 2. WiFi button: Short press to turn on WiFi when the camera is turned on.

Indicator Light Description

- Work indicator light: The blue light remains on when the camera is turned on.
- Charging indicator light: The red light remains on during charging and goes off when fully charged.
- Low battery indicator light: The red light flashes rapidly and is accompanied by a continuous beep sound.
- WiFi indicator light: When the blue-green light flashes, it indicates pairing status, and when it stays on, it indicates a successful connection.


(Camera name: CIIO_XXXXXXXXXXX; password: 12345678)

- Recording status: When the app is connected, the green light remains on during recording.
- Photo-taking status: When the APP is connected, the green light is always on when taking photos.

Start Using

micro SD card installation


- As shown in Figure 1, open the USB silicone plug and insert the micro SD card into the card slot in the direction indicated by the icon on the device.
- If you want to remove the micro SD card, you can use your fingernail to press the micro SD card as shown in Figure 2.

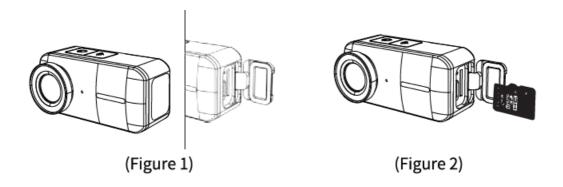

Charging

As shown in Figure 1, open the USB silicone plug and use the standard USB cable inside the package to connect the camera Type-C interface and charger (user-provided 5V charger). When charging, the LED red light is always


on, but it goes off when fully charged.

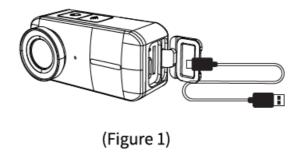

Operation Introduction


Power button

• Long press for 5 seconds: turn on/off Short press: Confirm/Short press to take photos in photo mode/Short press to start or end recording in video mode.

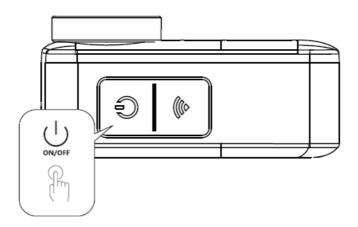

Wifi button

• When the APP is connected/paired with the terminal device, short-pressing the WiFi button will cause the indicator light to flash blue and green. When the blue light remains on, it indicates a successful connection/pairing.

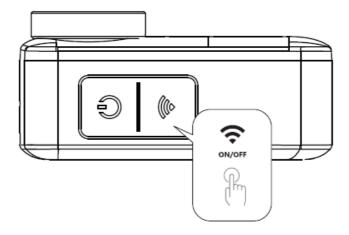

App download

• Go to the App Store or Google Play on your phone and search for "SJCAM Zone" to download and install the app, or scan the QR code below to download the app.





APP connection

• (As shown in Figure 1) Open the "SJCAM Zone" app, (as shown in Figure 2) click "Connect Camera", and select "Manual Connection".






(Figure 1)

(Figure 2)

- Find CII0 _9803cxxxxxxxx in your phone's WiFi settings, enter password: 12345678; Connect to WiFi.
- Return to the "SJ CAM Zone" app and click on "Connect Camera" on the app.
- At this time, you can preview the footage being taken in real-time, remotely record, take photos, replay/download/delete/share files, and set camera functions.

Video


• (As shown in Figure 1) Enter the app, select video mode, short-press the red recording button to start recording, and short-press again to stop; After setting the mode, short press the power button to record the

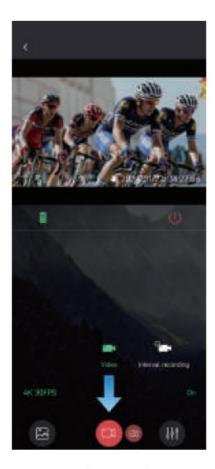

(Figure 1)

Photo

• Enter the app, select photo mode, and short press the red photo button to take photos (after setting the mode, short press the power button to take photos).

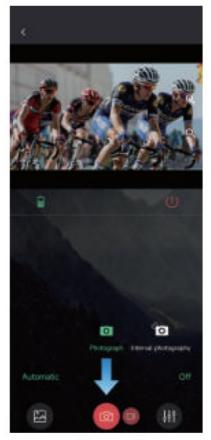


(Figure 1)

- **Note:** 1. After setting the camera mode, the device will have a memory function when turned off and then turned on, which will remember the mode before turning off.
- After connecting the camera to the app, select the mode: click on the settings icon in the bottom right corner of
 the screen to enter the video and photo settings interface. Swipe the screen up and down to select the menu
 that needs to be set.


Playback mode

After connecting the camera to the app, click on the playback icon in the bottom left corner of the screen to enter playback mode. Select the video/ photo that needs to be played back, and press the confirm button to browse.

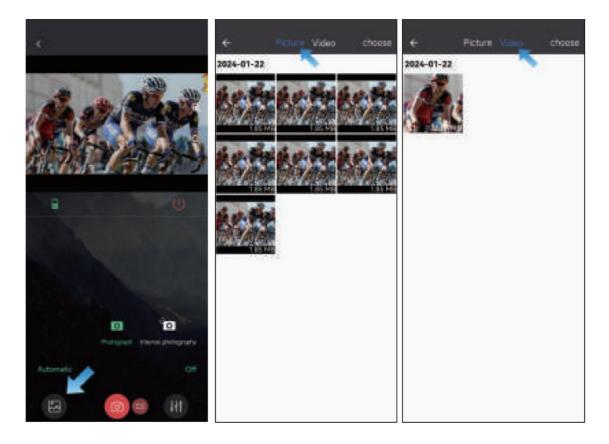

Car mode

1. Swipe the interface in the app, click on car mode, and when entering car mode, if you need to install the camera upside down, you need to turn on the image rotation function in the system settings.

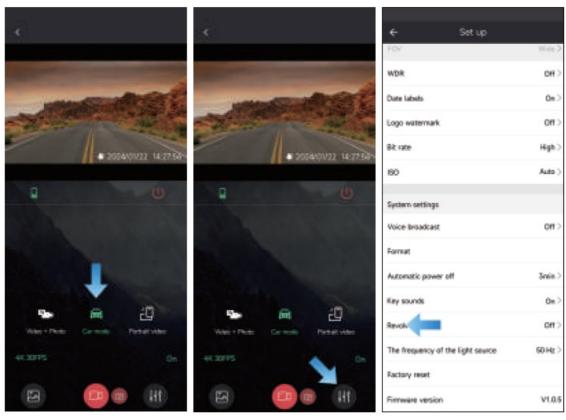

2. After connecting the car power adapter, start the car and the camera will automatically start recording (red light always on, blue light flashing). After disconnecting the power, the recording will automatically stop after about 10 s econds (red and blue lights off).

• Click on the icon in the bottom right corner of the app preview interface to set photo and video parameters.



Video Settings


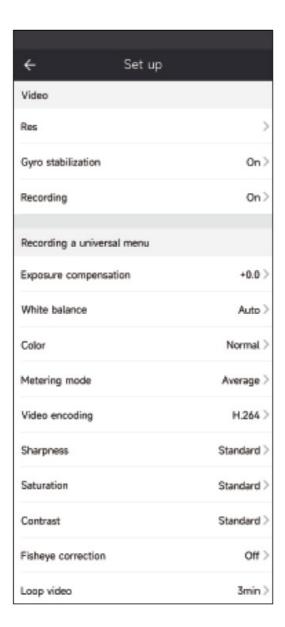


Photo Settings

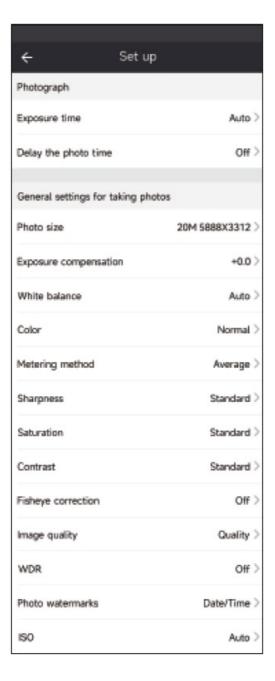

The product features may change with product upgrades or updates, please refer to the actual product specifications.

- If you have any after-sales service needs, please contact SJCAM customer technical support email: support@sjcam.com
- Welcome to the SJCAM official website: www.sjcam.com
- Manufacturer: Shenzhen Zhencheng Technology Co., Ltd.

CONTACT

- Shenzhen ZhenCheng Technology Co., Ltd.
- 3/F Building C, NO.2 Road 1, Shangxue IndustrialArea
- Bantian, Longgang District, Shenzhen, China
- Technical Support Email: support@sjcam.com
- Official website (EZX15): www.sjcam.com
- · Made in China

Documents / Resources



SJCAM C110 Action Camera [pdf] User Manual C110 Action Camera, C110, Action Camera, Camera

C110 Action Common Use Pyrosogcran nonanceurines series avail series Hanual del usuario de la Camera Benutani C110 Action Camera Benutani C110 MEM

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.