



# SJCAM SJ10X UHD IPS Touch Display Action Camera User Guide

[Home](#) » [SJCAM](#) » SJCAM SJ10X UHD IPS Touch Display Action Camera User Guide 

## Contents

- [1 SJCAM SJ10X UHD IPS Touch Display Action Camera](#)
- [2 MOUNTING ON A HELMET](#)
- [3 SCREEN SETTINGS](#)
- [4 Remote pairing](#)
- [5 INSERTING A USB-CABLE](#)
- [6 Inserting a MicroSD card](#)
- [7 REPLACING THE BATTERY](#)
- [8 BASIC OPERATION](#)
- [9 USER MANUAL](#)
- [10 Documents / Resources](#)
- [11 Related Posts](#)

 


**SJCAM SJ10X UHD IPS Touch Display Action Camera**



## MOUNTING ON A HELMET

Use the special curved -mount found in the box.  
You may mount the camera onto any surface that is not porous.

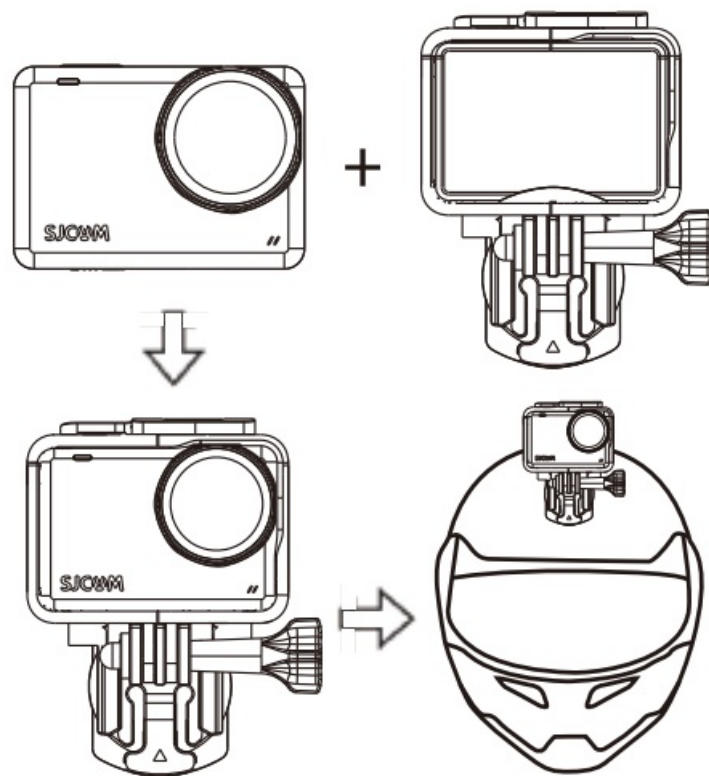

## THE MODES SCREENS



### Video

Mode for recording videos



### VideoLapse

Timelapse photographs stitched on-camera to output a video file



### Slow Motion

For recording video in slow motion



### Photo

Still photograph mode



### PhotoLapse

A series of still photos for creating timelapse



### Burst Mode

Fast multiple succession of snapshots



### Video/photo

Videolapse- Timelapse takes photos and stitches them together



### Car Mode

Automatically begins recording once the engine is started

## SCREEN SETTINGS



## CURRENT MENU OPTION

Depending on what mode you are in, the menu options will vary. All the options for the particular mode will appear by scrolling down for other items. You can switch to Text-Mode Menu by going to General Settings, then select "Classic" in the user interface options.

## Scroll up for more options



## DOWNLOAD APP



Download the App



 
iOS



Android


## CONNECT TO SCAM APP

1. Enable Wiff on the camera by swiping down on the Main Screen, then tap Wifi.
2. Start the SJCAM Zone APP on your phone and register or log into it.
3. On your phone, go to Wif settings and connect to the camera's WiFi (password: 12345678).
4. Return to the App and press the "Connect to Camera" button.

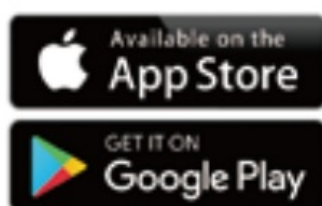


## Remote pairing

 1. Power on camera, slide the screen down and click the remote control to start pairing.

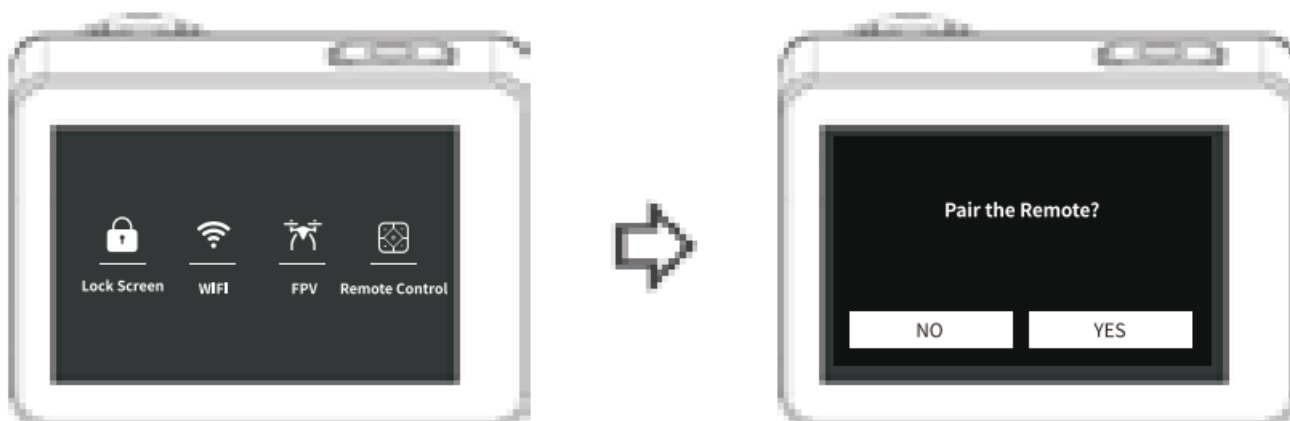


 2. According to the operating instructions (click two buttons at the same time), you can pair the remote control with the camera.

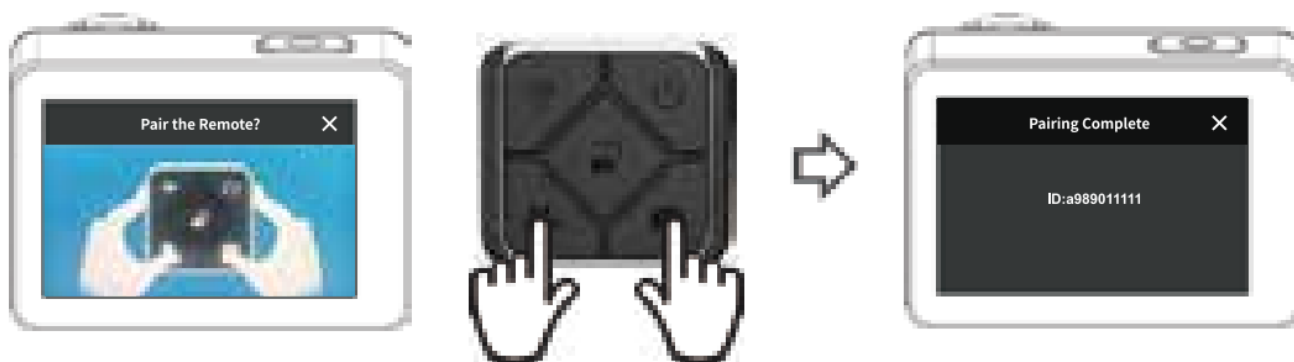


## INSERTING A USB-CABLE

 1. Gently press the clip on the left side of the camera and push it down

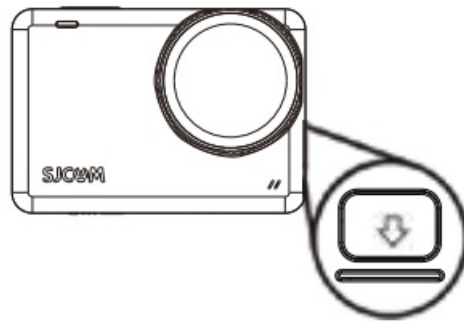


 2. Insert USB-C cable and connect to charger or computer, etc.

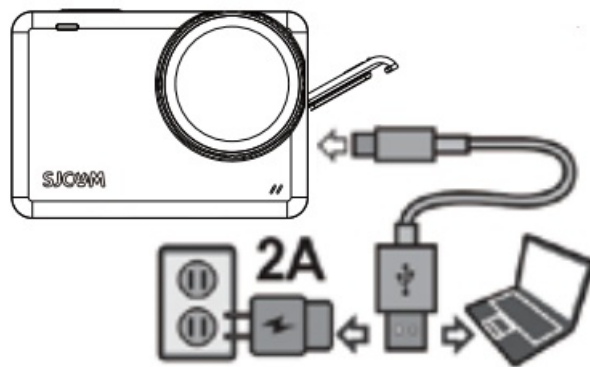


### Inserting a MicroSD card

 
1. Gently press the clip on the left side of the camera and push it down

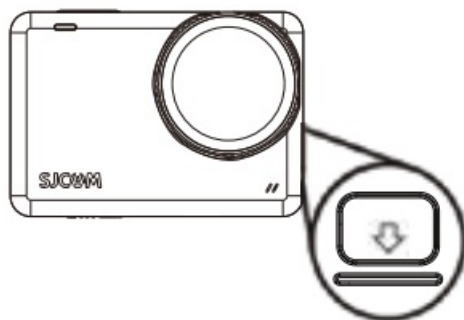

 2. Push the clip on the left side of the camera

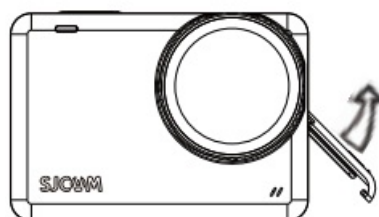

 3. Insert memory card

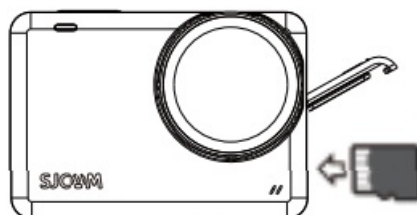


Minimum card requirements.




## REPLACING THE BATTERY

 
1. Gently press the clip at the bottom of the camera and push it toward the side

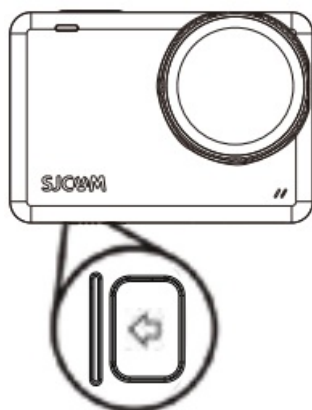

 2. Open the bottom cover

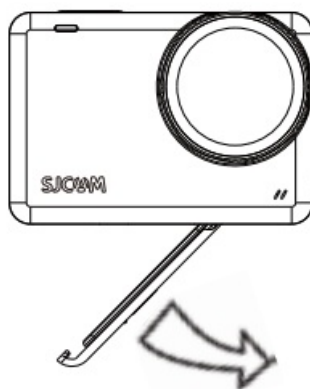

 3. Replace the battery

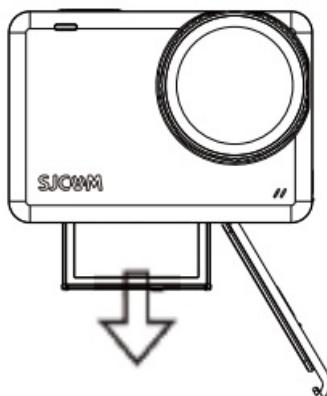

## BASIC OPERATION

1. Hold down the shutter to turn camera on.



2. Release when logo shows.



3. Choose desired mode on touchscreen.



4. Press the shutter to take photos, or to start and stop video recording.



## USER MANUAL

We know you're excited to use your new SJ10 water-resistance series Action Camera, please take time to read this Quick Start Guide before doing anything with it. There's plenty you can do, so you need to familiarize yourself with the features now to get the most out of it.

1. This is a high-precision product. Do not drop.
2. Do not expose the unit to strong magnetic fields, such as electric motors, magnets and machinery that use strong radio waves.
3. Never leave the unit in high-temperature areas. Electronics and optics can be damaged under prolonged exposure to heat.
4. Although this model is waterproof without needing an additional housing, it is important to check that all seals are intact and all doors are properly closed before submerging the camera in water.
5. Always store extra batteries in a compartment away from any sharp metals and moisture.
6. Avoid extended periods of battery charging. Keep it away from children and pets while charging to avoid



accidents.


Do not dispose the camera or its battery in the garbage bin, find the nearest recycling facility for it.

**Download the detailed**

version of this manual by going to [SUPPORT.SJCAM.COM](https://support.sjcam.com) or scan the QR code.



**Documents / Resources**

	<a href="#">SJCAM SJ10X UHD IPS Touch Display Action Camera</a> [pdf] User Guide SJ10X UHD IPS Touch Display Action Camera, SJ10X, UHD IPS Touch Display Action Camera , Touch Display Action Camera, Display Action Camera, Action Camera, Camera
---	--