



SJCODE D50 Smart Wi-Fi Doorbell Camera User Manual

[Home](#) » [SJCODE](#) » SJCODE D50 Smart Wi-Fi Doorbell Camera User Manual 

SJCODE

D50 Smart Wi-Fi
Doorbell Camera

 


Scan the code to view the user manual
User Manual 1.0 – D50 Outlet

Contents

- 1 Features
- 2 Indicator light
- 3 Recharge your doorbell
- 4 Create an account in the Zoroiix app
- 5 How to reset your doorbell camera
- 6 How to install your doorbell camera
- 7 Set up your wireless chime
- 8 Frequently asked questions
- 9 Contact us
- 10 FCC Statement
- 11 Documents / Resources
 - 11.1 References


Features

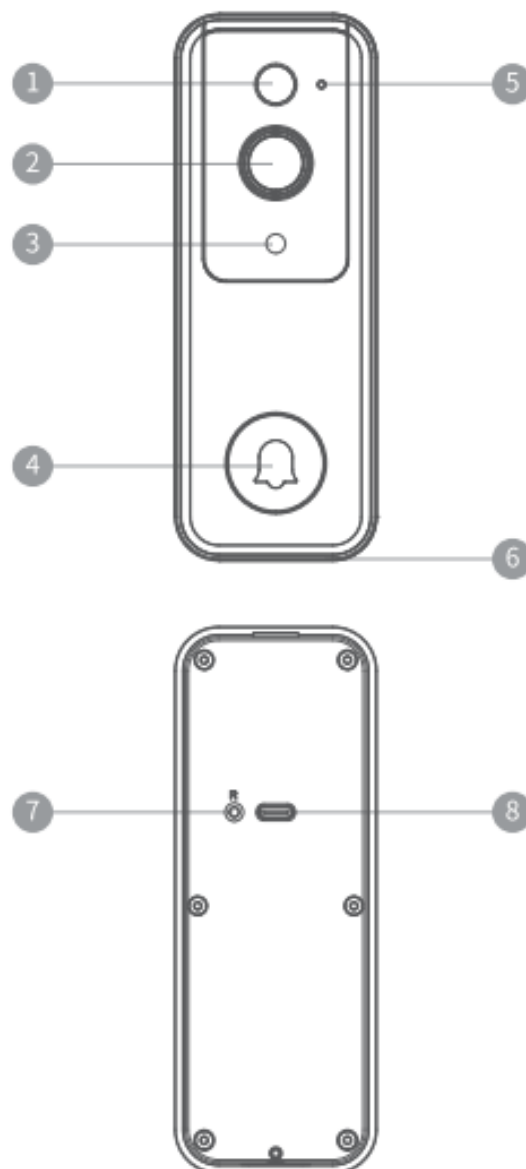

- 1. Motion Sensor
- 2. Wide-angle Lens
- 3. Indicator Light

4. Doorbell Button
5. Microphone
6. Speaker
7. Reset Button
8. Type-C Charging Port (for Battery Charging)

 Indicator light

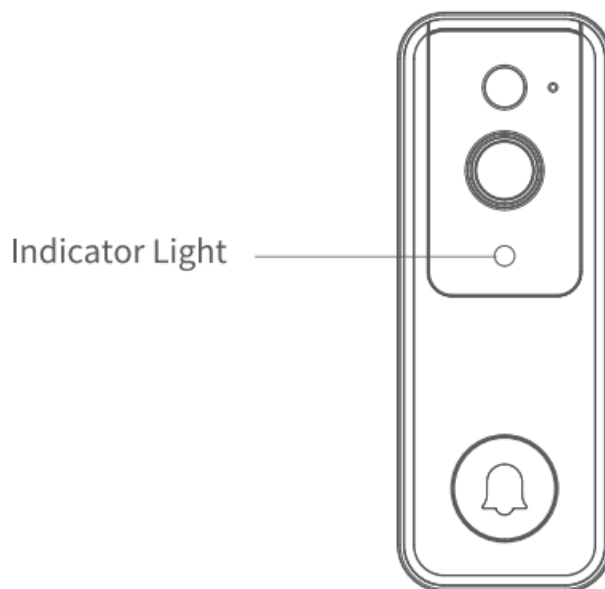

Flashing White

The device is disconnected from Wi-Fi. It will attempt to reconnect automatically. If it fails, please reset the device and pair it again in the app.

Flashing White

Low battery. Please recharge the device.

Flashing White

The device is recording.

Solid White

The device is charging.

 
White Light Turns OFF

When the device is fully charged.

Recharge your doorbell

Recharge Your Doorbell Before First

Use the provided Type-C cable to charge your doorbell. It takes approximately 10 hours to fully charge, depending on the power source. Please note that you should use a power source of at least 5V/1A.

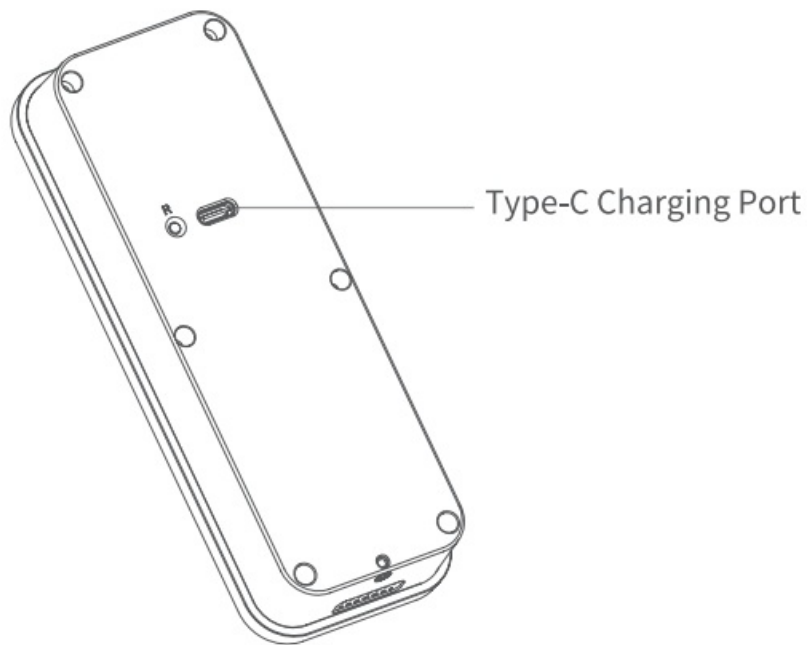

A solid White light indicates that the doorbell is charging. When the doorbell is fully charged, the White light will turn off.

Create an account in the Zoroiix app

1. Scan the QR code provided or search for Zoroiix in the Apple App Store or Google Play. Then download and install the app.

 


zoroiix



ANDROID/IOS

2. Open the Zoroiix app on your cellphone and tap Sign up.
3. Enter your email address, set a password, and tap Sign up.

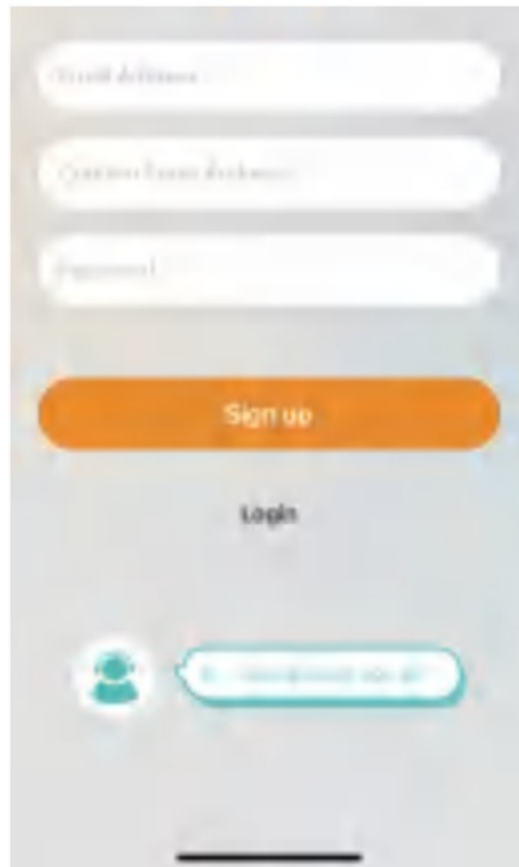


4. After activating your account with the email link, log in to the app using your email and password.

We have sent an email to xxx@xxx.com.

Open your email and tap the link to verify.

If you don't see the email, check your spam, or tap "Resend email" below.

 5. Re-open the Zoroix app, enter your email address and password, and tap Log in.

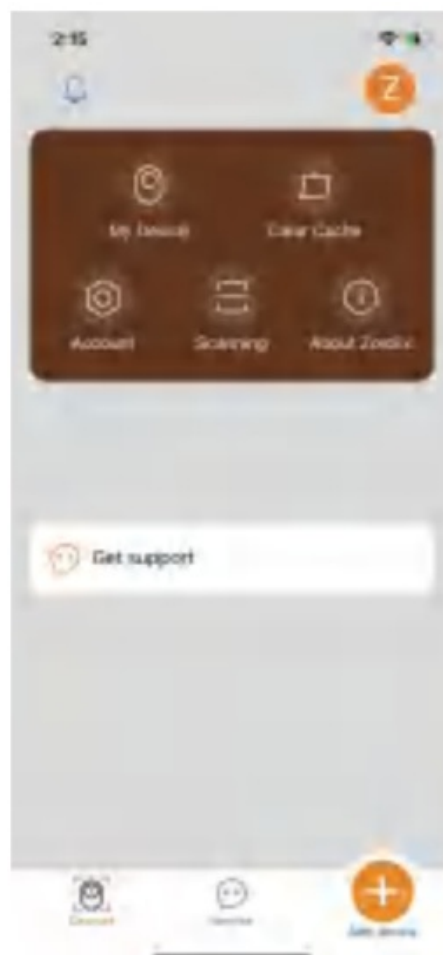

Set up your doorbell in the app

 
1. Open the app and sign in to your account
2. To add your camera, tap the Add device icon (+).
3. Choose Video Doorbell and then select the D50 model.



4. Press and hold the doorbell button until the White light starts flashing. You will hear Entering pairing mode.
5. The device supports only the 2.4GHz Wi-Fi network.
6. Navigate to your cellphone's Wi-Fi settings, connect to a 2.4GHz Wi-Fi network, and tap "Yes." (Note: 5GHz Wi-Fi is not supported).
7. For Connection Setup: Select your 2.4GHz Wi-Fi network name, input the password.
8. Tap Confirm.
9. Use the device's camera to scan the QR code on your phone.
10. Once you hear Device registration successful, you are all set.

How to reset your doorbell camera


Press R (Reset) button on the back of the doorbell camera.

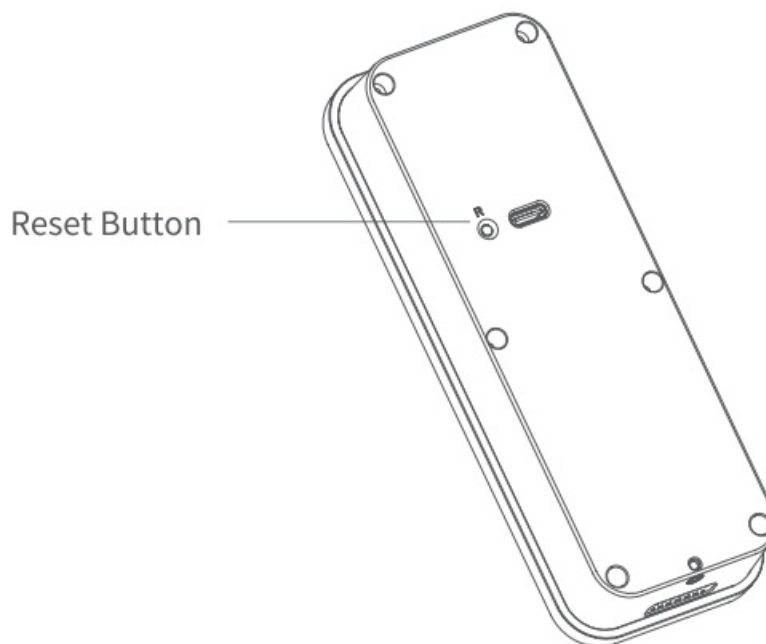

How to install your doorbell camera


Prepare for mounting

 Mark the drill holes and use a bit to drill into your wall. Insert the anchors and secure your back plate with the provided mounting screws.

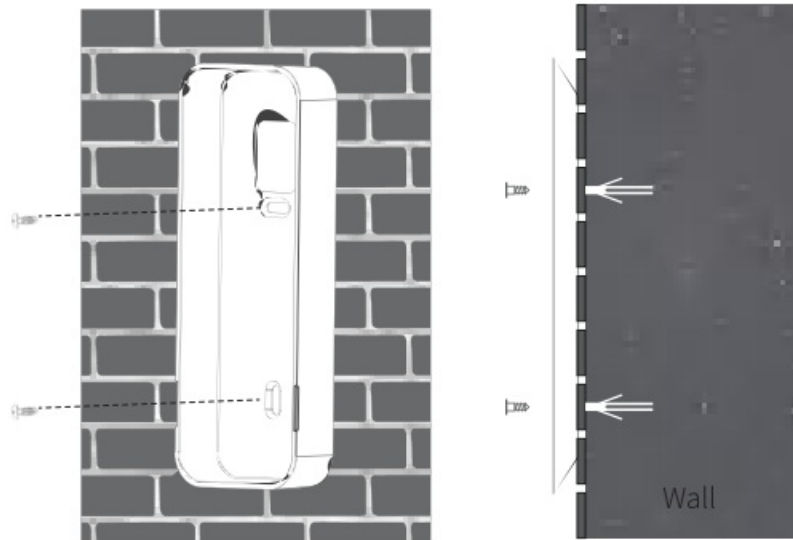

Reattach the doorbell

 
Position the doorbell back on by slotting it in at the bottom and clicking it into Position.

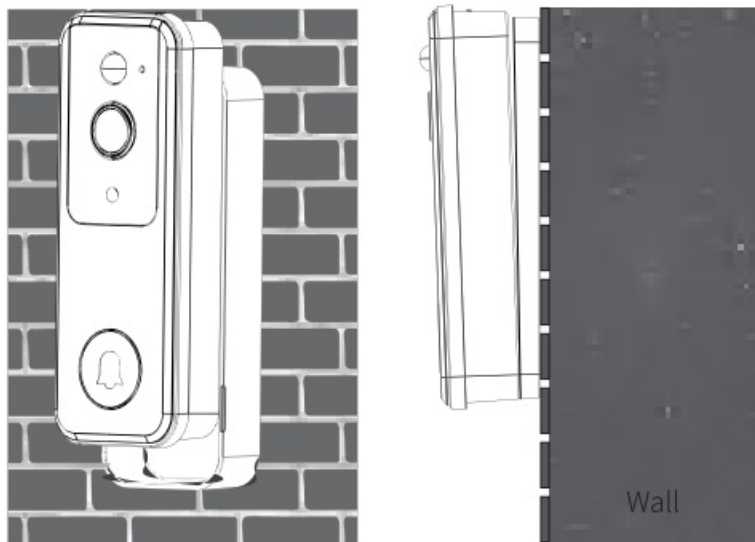

Set up your wireless chime

Connect the doorbell camera to the wireless chime and receive an instant alert in your home when someone rings the doorbell. The chime plugs into any USB port, allowing you to locate it anywhere in your home.

 Wireless Chime

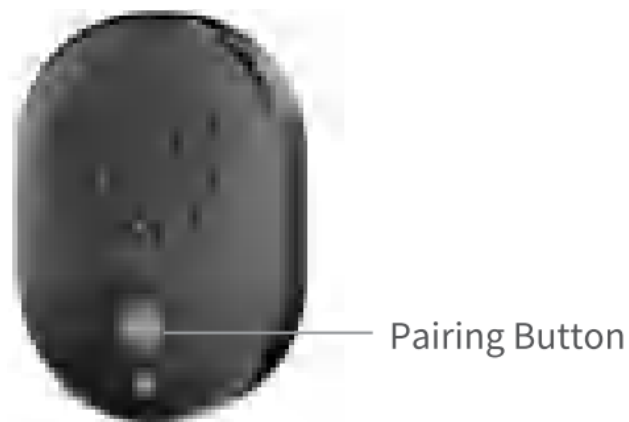


1. Plug the chime into an outlet and press the pairing button.

Before beginning the setup process, ensure that your video doorbell is connected to your phone. Then, plug the chime into an outlet and press the pairing button.



2. Setup your wireless chime

 Press the doorbell button to pair it with the chime.

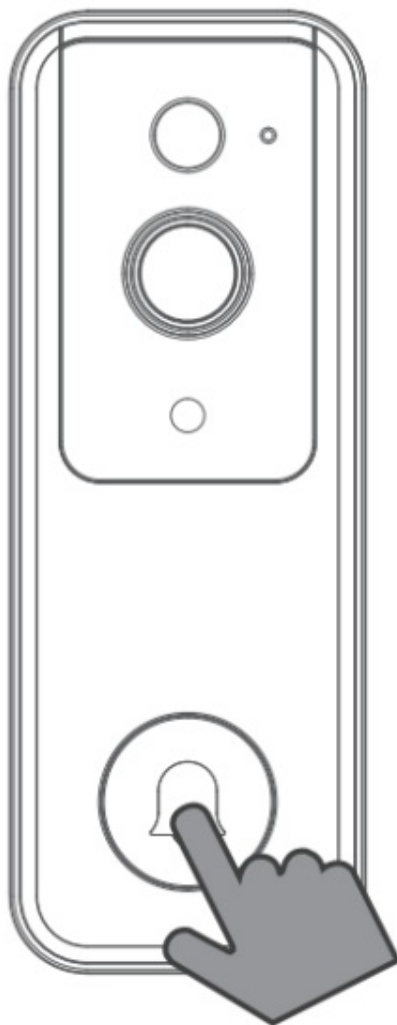

3. Press the doorbell button.

Press the doorbell button again to verify that the chime and doorbell are working, properly.



Please note that the volume of the chime is not adjustable.

Frequently asked questions

1. How can I share the device with family members?

Open the app and tap on Settings. From there, you can share the device via QRcode or email, and even transfer ownership of the device. The new user must first download the app and create their own account.

2. Why can't change the settings?

Only the owner account can change settings, delete videos, and share the device. Shared accounts do not have these options.

3. How many users can view the device at the same time?

The owner account can share the device with up to 8 other accounts. Up to 3 users may view the video feed at once, but only the owner can use the intercom.

4. Is 5GHz Wi-Fi supported?

No, the camera only works with 2.4GHz Wi-Fi. Please separate two Wi-Fi bands by giving the 2.4 GHz and 5 GHz networks each a unique separate SSID (network name). Then connect your device to the 2.4GHz Wi-Fi.

5. Why is my Wi-Fi signal weak?

Your camera may be too far from your wireless router, or there may be obstructions reducing signal strength. You might want to reposition your router or get a signal extender/repeater.

6. Why is the camera offline?

The camera being offline means it is disconnected. There could be a few reasons for this: 1) If the camera has run out of power, you will need to recharge it. 2) The Wi-Fi signal is weak, causing disconnection. Please improve your Wi-Fi signal and reconnect the device. 3) If the Wi-Fi is unstable, the device might go offline or experience interruptions frequently. You can try restarting the router and reconnecting the Wi-Fi to see if it helps. A good Wi-Fi connection is essential since the device is outside the house.

7. How can I adjust the human detection accuracy?

Open the app and tap on Settings. Then tap on Motion Settings. Here, you can select the desired human detection accuracy from three options: low, medium, and high. We recommend choosing medium. The high setting provides the strictest detection level, meaning the device will be triggered only when it is entirely certain that the moving object is a human. However, this stringent setting might cause the device to overlook a human figure, resulting in a missed notification.

- High Accuracy - The device will record videos less frequently, ensuring maximum battery life.
- Medium Accuracy - Medium battery life.
- Low Accuracy - The device will record videos more frequently, leading to the shortest battery life.

If the areas you're monitoring experience excessive or repetitive motions, like children playing in the yard, you may receive numerous alerts, which can rapidly deplete the battery of devices. The human detection accuracy settings are designed to help you receive the notifications you want while preserving battery life.

 
8. How can I enable notifications on my phone?

Contact us

If you require further assistance, feel free to reach out to our support team. Use the ZoroiiX app's support feature. Please include your product's model and the retailer's name.
Thank you.



Select the corresponding product item and start receiving professional technical support.

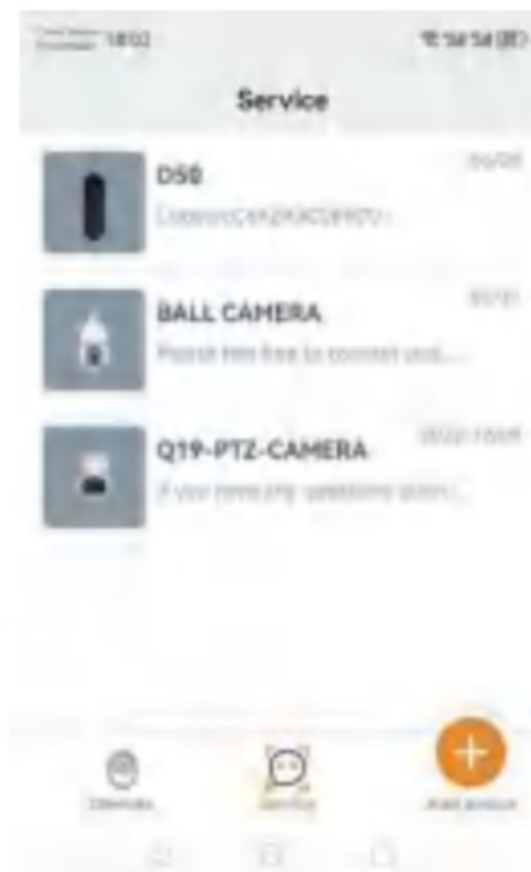

4>FCC Statement

This device complies with Part 15 of the FCC Rules.Operation is subject to the following two conditions:

1. This device may not cause harmful erference.
 2. This device must accept any interference receivedincluding nterference that may cause undesired operation.
- ol>

Caution: Any changes ormodifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device under Part 15 of the FCC Rules These limits are designed to protect reasonably against harmful interferenceina residential installation. This equipment generates uses and can radiate radio frequency energy andfnotinstalled and used by the instructions, may cause harmful interference to radio communications. However,there is no guarantee thatinterference willnotoccur in a particular installation. Suppose this quipment does cause hamful interference to radio or television reception,which can be determined by turning the equipment offand on.In that case,the user is encouraged o try to correct the interference by one or more of the followingmeasures:

1. Reorient or relocate the receiving antenna.
 2. Increase the separation between the equipment and receiver.
- i>Connect the equipment to an outlet on a circuit different from the receivers.
3. Consult the dealer or an experienced radio/TV technician for help.

Radio Frequency Exposure Statement

The device has been evaluated to meet general RF exposure requirements. The device can be used in fixed/mobile exposure condition. The min separation distance is 20cm.

SJCODE

3>Documents / Resources

	<p>SJCODE D50 Smart Wi-Fi Doorbell Camera [pdf] User Manual</p> <p>2BD3N-D50, 2BD3ND50, D50 Smart Wi-Fi Doorbell Camera, D50, Smart Wi-Fi Doorbell Ca mera, Wi-Fi Doorbell Camera, Doorbell Camera, Camera</p>
--	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.