


SJE CP3R Variable Frequency Drive User Manual

[Home](#) » [SJE](#) » SJE CP3R Variable Frequency Drive User Manual 

Contents

- 1 User Manual
 - 1.1 SJE CP3R Variable Frequency Drive
- 2 Display and Keypad
- 3 OFF/AUTO Operation
- 4 Parameter List
- 5 Faults, Alarms and Warning Codes
- 6 Terminal Connections
- 7 Related Posts

User Manual

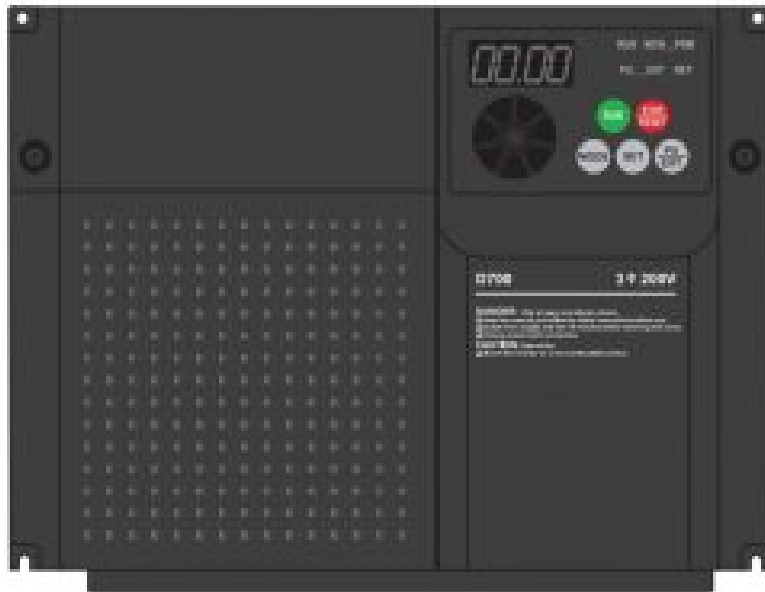



SJE CP3R Variable Frequency Drive

CP3R Quick Start Manual for Constant Pressure Applications.


This CP3R Drive has been factory pre-programmed for your specific pressure control application.

All relevant parameters have been configured to match the provided pump data and system pressure requirements. Should you need to make minor adjustments, please consult the parameter table enclosed in this document. Consult the factory for assistance.

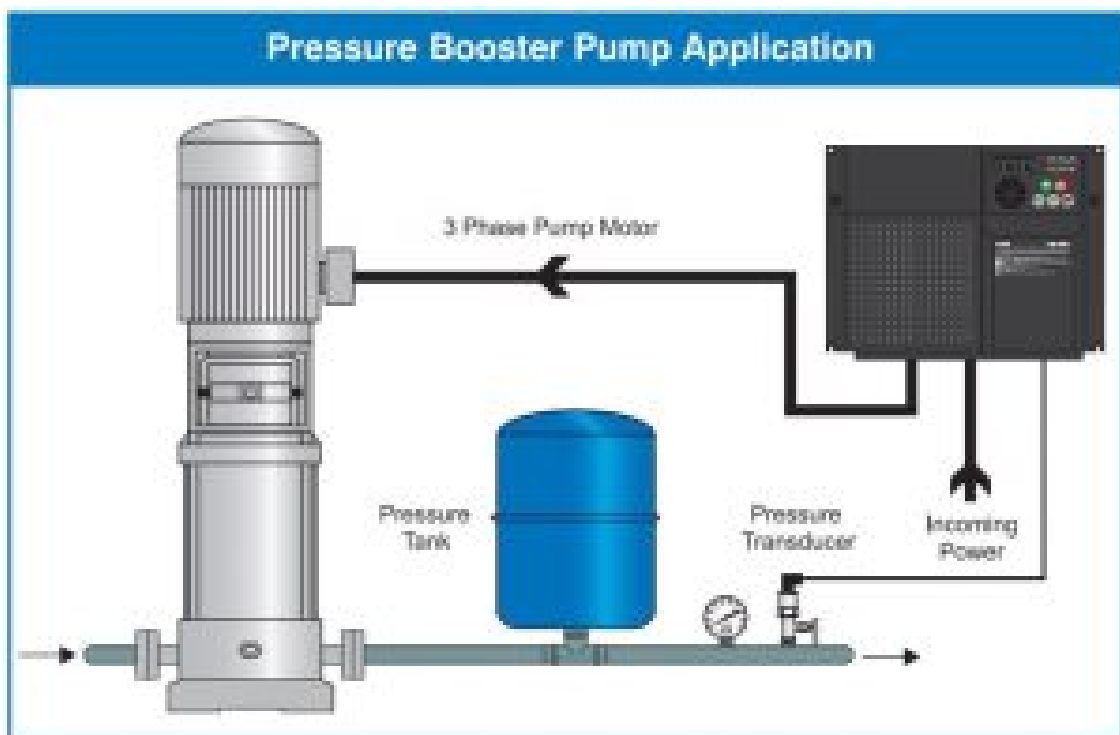

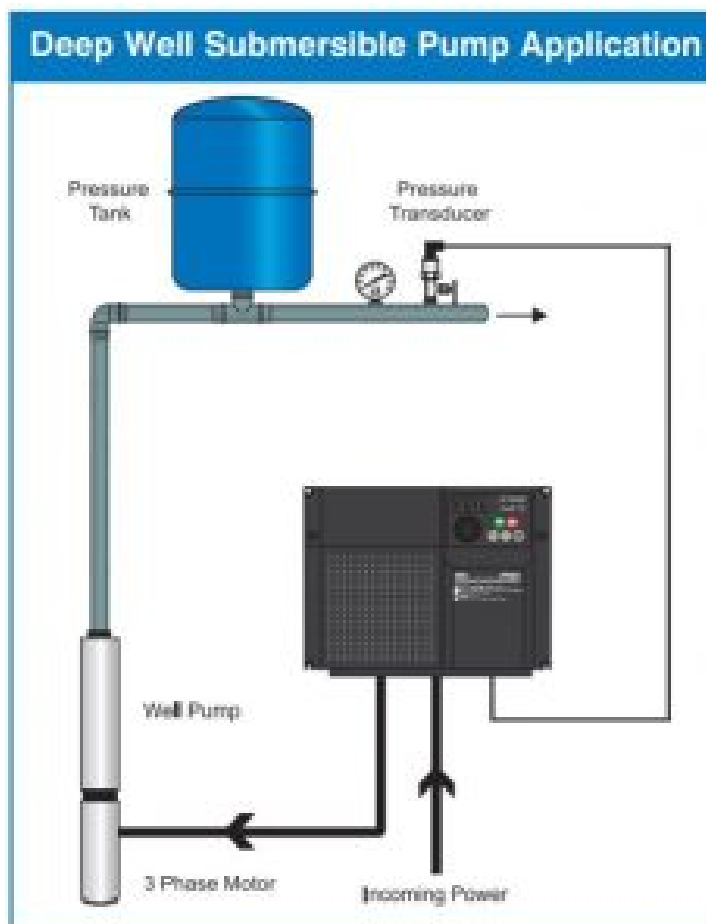


Display and Keypad

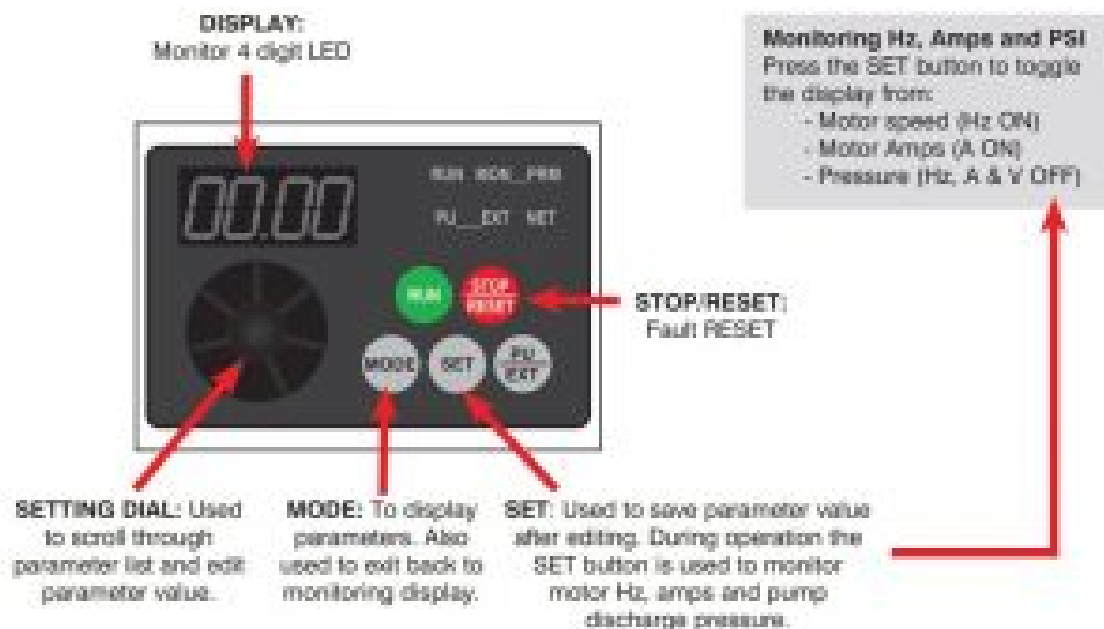

PARAMETERS	DESCRIPTION
P. 1	Maximum Frequency
P. 2	Minimum Frequency
P. 7	Accel time
P. 8	Decel time
P. 9	Electronic Thermal Overload
P. 83	Motor Voltage
P. 129	PID proportional band
P. 130	PID integral time
P. 133	PID Pressure set point
P. 575	Sleep timer
P. 576	Sleep frequency
P. 577	Start pressure (differential)

Example: Changing the Set Pressure

 1. Press **MODE** to choose the parameter setting mode.




2. Turn the **SETTING DIAL** until P.133 (Pr. 1) appears.




3. Press **SET** to read the current pressure set point value. "50.00" (initial value) appears.



4. Turn the **SETTING DIAL** to change it to the pressure set point value "55.00".

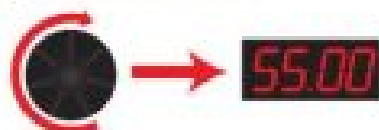

 5. Press **SET** to save. **Flash --- Parameter setting complete!**



- Turn SETTING DIAL to read another parameter
- Press SET to show the setting again.
- Press SET twice to show the next parameter.
- Press MODE twice to return the monitor to frequency monitor.


OFF/AUTO Operation

OFF position

The pump will not run

AUTO position

The pump will not run if the pressure is above the set pressure. The pump will run if the pressure drops below the Set Pressure less the Start Pressure. Example if set the set pressure is 40PSI (P.133=40 PSI), and the Start Pressure is 5PSI (P.577=1005). The pump will start when the pressure drops below 35PSI (see example below)

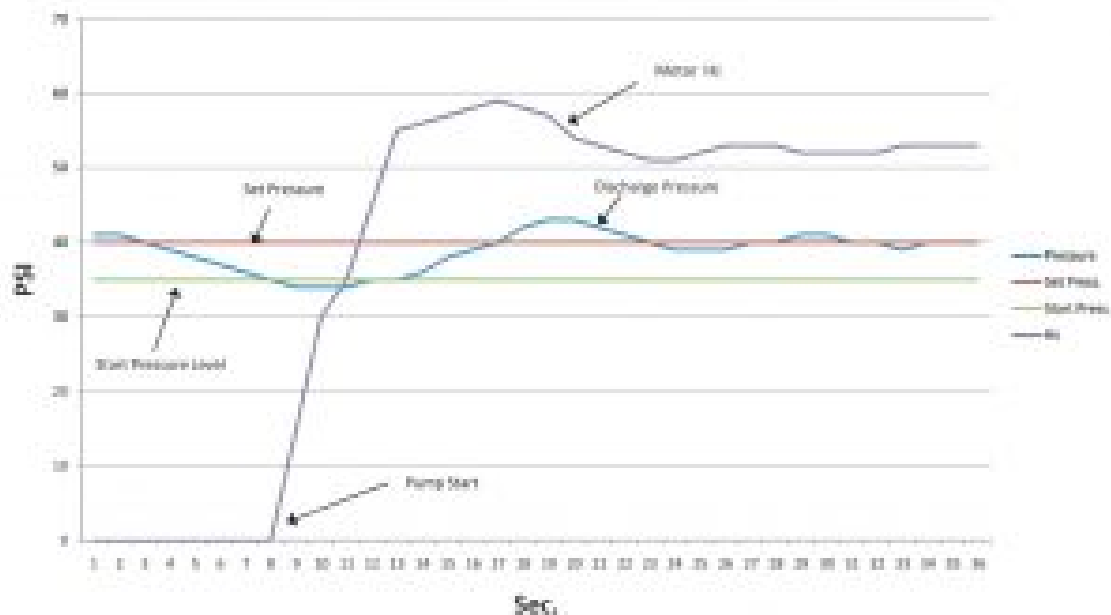

High Pressure Shutdown

A normally closed pressure switch is highly recommended to be wired to the “High Pressure Shutdown” terminals in the CP3R panel. The pressure switch should be sized so that the normally closed contacts will open when the system pressure exceeds approximately 10-15 psi above the system setpoint pressure. The high pressure shutdown is intended to shut the CP3R panel down in the event of a transducer malfunction. Upon a drop in pressure, the CP3R panel will return to normal operation. A pressure relief valve is also highly recommended.

Parameter List

PARAMETERS	DESCRIPTION	RANGE	DEFAULT	TYPICAL
P. 1	Maximum frequency	0 to 120Hz	60.00Hz	60.00Hz
P. 2	Minimum frequency	0 to 120Hz	30.00Hz	30.0Hz
P. 7	Accel time	0 to 3600s	2.0	2.0
P. 8	Decel time	0 to 3600s	2.0	2.0
P. 9	Electronic Thermal Overload	0 to 500A	–	Match Pump FLA
P. 83	Motor Voltage	0 to 1000V	230.0	Match Pump Volt.
P. 129	PID proportional band	0.1 to 1000%, 9999	100%	100%
P. 130	PID integral time	0.1 to 3600s, 9999	1.0	1.0
P. 133	PID Pressure set point	0 to 100%, 9999	60.00	60.00
P. 575	Sleep timer	0 to 3600s, 9999	10.0	10.0
P. 576	Sleep Frequency	0 to 400Hz	35.00Hz	35.00Hz
P. 577	Start Pressure (differential)	000 to 1100%	100%	100%

Maximum frequency: (P.1)

The pump will not be allowed run above this frequency. It must be set at 60Hz for most applications.

Minimum frequency: (P.2)

The pump will not be allowed run below this frequency. It must be set at 30Hz for submersible well pumps.

Acceleration/Deceleration time: (P.7, P.8)

P.7 Acceleration rate in seconds

P.8 Deceleration rate in seconds

Applicable to the Acceleration/Deceleration rate from 0Hz to 60Hz. Typically for submersible motors/pumps, the Accel/

Decel time should be set to 2 seconds.

Electronic thermal O/L relay: (P.9)

The electronic overload will trip the VFD and protect the motor from damage in the event an overload condition.

Set this value to match the motor nameplate Full Load Amps. For submersible well pumps, set to the motor Max. Amps (Service Factor Amps).

Motor Voltage: (P.83)

P.83 Voltage rating of pump motor.

PID: (P.133, P.129, P130)

P.133 is the Pressure Set Point (target pressure to be maintained at pump discharge). It cannot exceed the range of the pressure transducer (typically 0-100PSI).

P.129 is the Proportional Band. For advanced users only.

This parameter is used for adjusting the frequency output control reaction to pressure changes. Decrease for larger (faster) corrections. Default is 100%. Decrease if large pressure overshoots on start up occurs.

P.130 is the Integral Time. For advanced users only.

This parameter is used for adjusting the frequency output control reaction to pressure changes. Decrease for larger (faster) corrections. Default is 1 sec. Decrease for faster response, increase if quick unstable oscillations occur.

Sleep Mode: (P.575, P.576, P577)

P.575 is the Sleep Timer. This timer starts when the VFD output frequency drops below the Sleep Frequency (P.575). The pump will go to sleep (pump stopped) when this timer is done (typically 10Sec).


P.576 is the Sleep Frequency. The Sleep Timer (P.575) starts the VFD output frequency drops below this

frequency (typically 35Hz).

P.577 is the Start Pressure (Differential). The pump will start if the pressure drops below the Set Pressure less the Start Pressure. Example: If set the Set Pressure is 40PSI (P.133=40 PSI), and the Start Pressure is 5PSI (P.577=1005, the pump will start when the pressure drops below 35PSI (see example on page 3.) Typically set to 1005 (5PSI).

Notes:

If the system cycles on and off too frequently try the following: increase the Sleep Timer (P.575), or lower the Sleep Frequency (P.576) or increase the Start Pressure (P.577). A combination of change in all three parameters may be necessary. If the pump does not go to sleep when there is no water demand (no flow), the Sleep Frequency (P.576) must be increased.

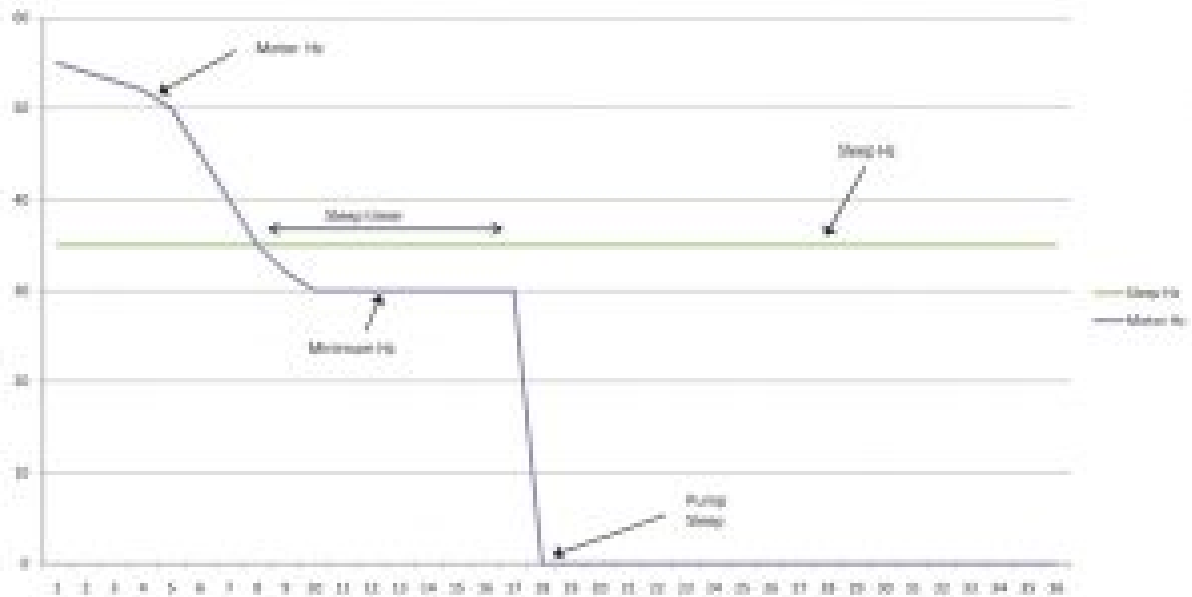

Faults, Alarms and Warning Codes

FAULTS	
E.OC1	Overcurrent trip during acceleration
E.OC2	Overcurrent trip during constant speed
E.OC3	Overcurrent trip during deceleration
E.OV1	Regenerative overvoltage
E.OV2	Regenerative overvoltage
E.OV3	Regenerative overvoltage trip
E.THT	Inverter overload trip
E.THM	Motor overload trip
E.FIN	Fin overheat
E.BE	Brake transistor alarm
E.ILF	Input phase loss
E.OLT	Stall prevention
E.GF	Output side earth (ground)
E.LF	Output phase loss
E.OHT	External thermal relay trip
E.PTC	PTC thermistor operation


E.PE	Parameter storage device
E.PUE	PU disconnection
E.RET	Retry count excess
E. 5	CPU Fault
E. 6	CPU Fault
E. 7	CPU Fault
E.CPU	CPU Fault
E.CTE	CPU Fault
E.CDO	Output current detection
E.IOH	Inrush current limit circuit
E.AIE	Analog input fault
E.SAF	Safety circuit fault

ALARMS	
FN	Fan alarm
E---	Faults history
HOLD	Operation panel lock
Er1 to 4	Parameter write error
Err.	Error
WARNINGS	
OL	Stall prevention overcurrent
oL	Stall prevention overvoltage
RB	Regenerative brake prealarm
TH	Electronic thermal relay function prealarm
PS	PU stop
MT	Maintenance signal output
UV	Undervoltage
SA	Safety Stop


IMPORTANT:

Faults can be reset by pressing the STOP/RESET button on the VFD. The selector switch must be in the “OFF” position to reset fault. Please contact your distributor if you are not able to reset a fault.

Terminal Connections

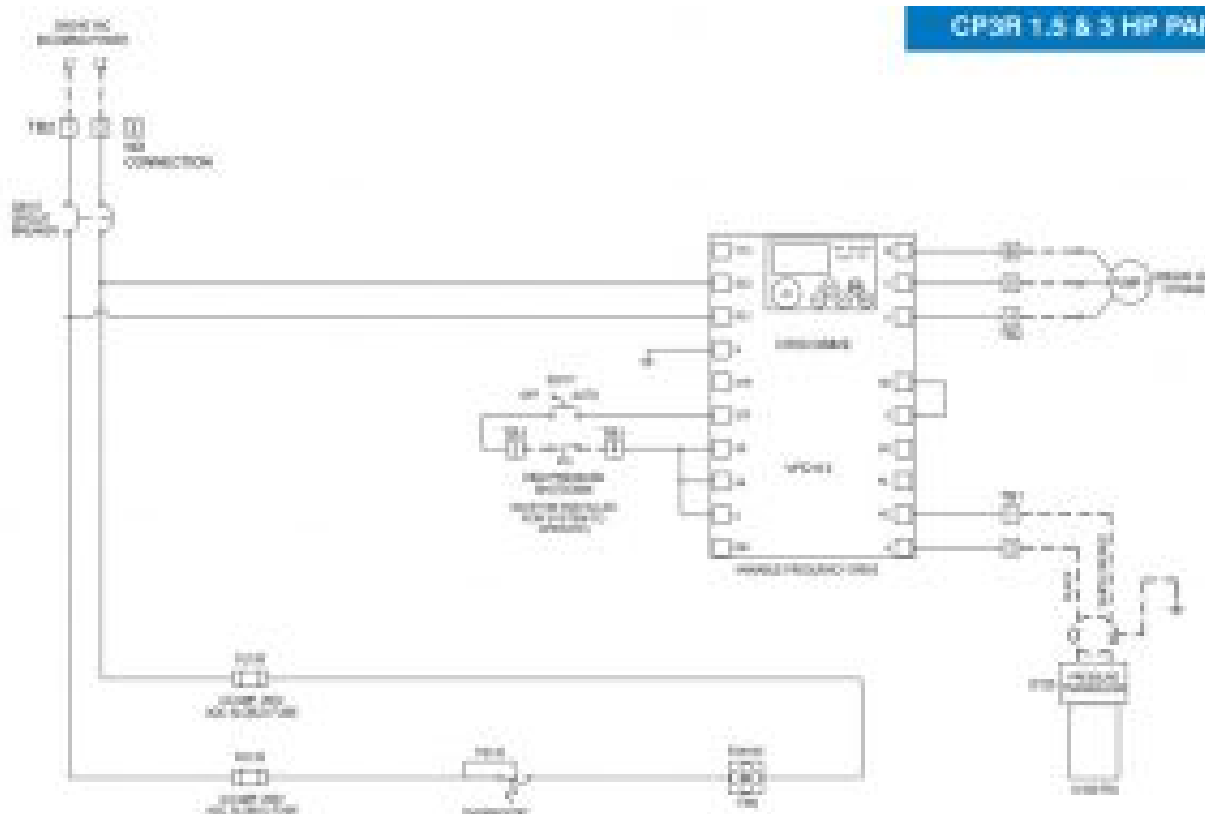

CPDR 5 HP PANEL

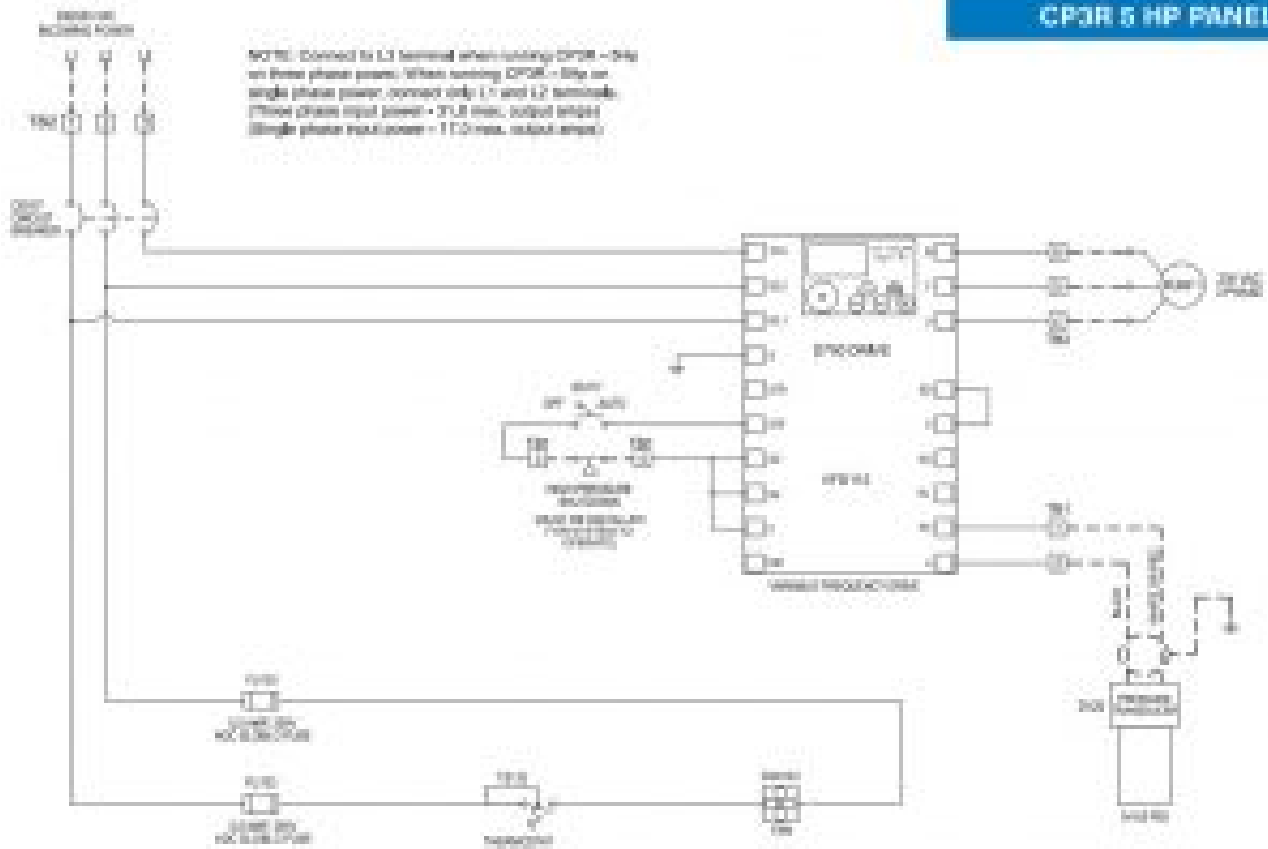

NOTES:

[illegible]



Technical support: +1-800-746-6287

techsupport@sjeinc.com

www.sjerhombus.com

Technical Support Hours: Monday-Friday, 7 A.M. to 6 P.M. Central Time

PN 1030953F 10/20 © 2013 SJE, Inc. All Rights Reserved. SJE RHOMBUS is a trademark of SJE, Inc.

Read More About This Manual & Download PDF:

SJE CP3R Variable Frequency Drive User Manual – [Optimized PDF](#)

SJE CP3R Variable Frequency Drive User Manual – [Original PDF](#)

Questions about your Manual? Post in the comments!