

SKILL ATTACK Volleyball Pitching Machine Instruction Manual

Home » SKILL ATTACK » SKILL ATTACK Volleyball Pitching Machine Instruction Manual

Contents

- 1 SKILL ATTACK Volleyball Pitching Machine
- 2 Package contents
- 3 Overview
- 4 Getting started
- **5 General Settings**
- 6 Al Mode Settings
- 7 Manual Mode Settings
- 8 Specifications
- 9 Important Safety, Compliance and Warranty Information
- 10 FCC Statement
- 11 FunTech Innovation's Limited Hardware
- 12 Safety Instruction
- 13 Documents / Resources
 - 13.1 References
- **14 Related Posts**



SKILL ATTACK Volleyball Pitching Machine




Visit FTI webstie to download multi-language quick start guide https://funtechinnovation.com/downloads/



Innex cube is the world's smallest 4K 360° Conference Camera with built-in AI algorithms capable of tracking multiple people simultaneously. Creating the most immersive conference experience from the table center, Innex Cube captures video and audio from a close distance, at the eye-level from a natural frontward angle. A patented real-time stitching algorithm technology stitches four high resolution sensors together to produce an ultra-clear and undistorted video. With built-in on screen display menu and a handy remote control, Innex Cube is truly plug and play and mobile.

Meet the future, all within the size of your hand.

Package contents

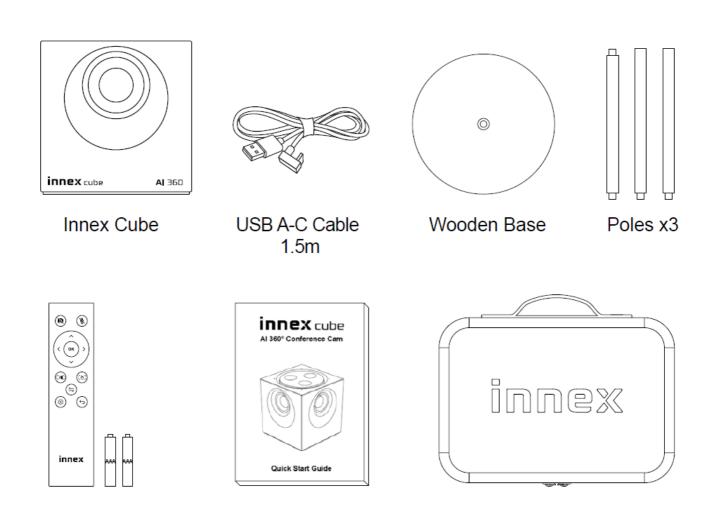


AAA battery x2


Remote Control

Quick Start Guide


Travel Box

Overview

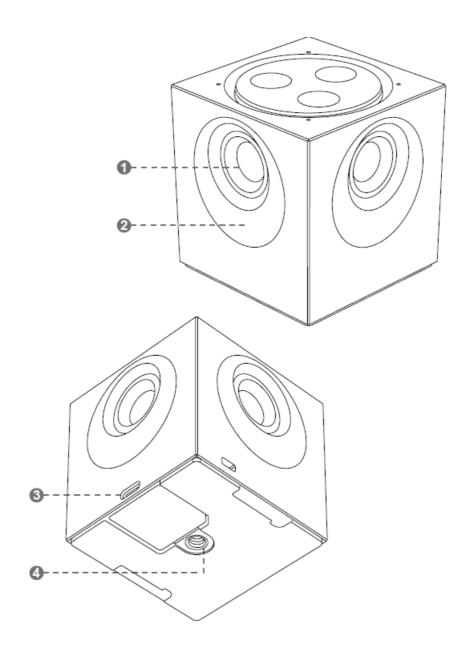


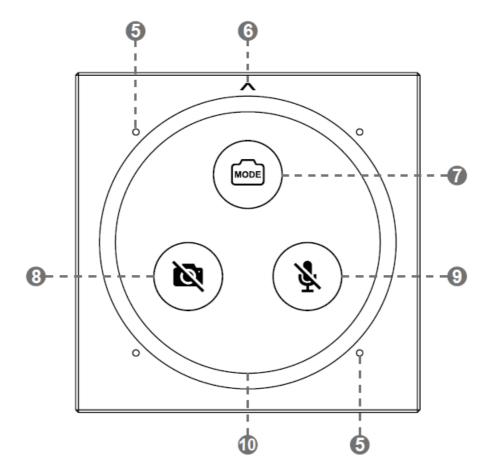



- 1. Cameras
- 2. IR Receivers
- 3. USB Type-C Port
- 4. 1/4 Tripod Screw Hole
- 5. Microphones
- 6. Front Arrow
- 7. Mode Switch
- 8. Camera Off
- 9. Microphone Off
- 10. LED Indicator
- 11. Pole (male-female)
- 12. Pole (male-male)
- 13. Wooden Base
- 14. Pole Storage

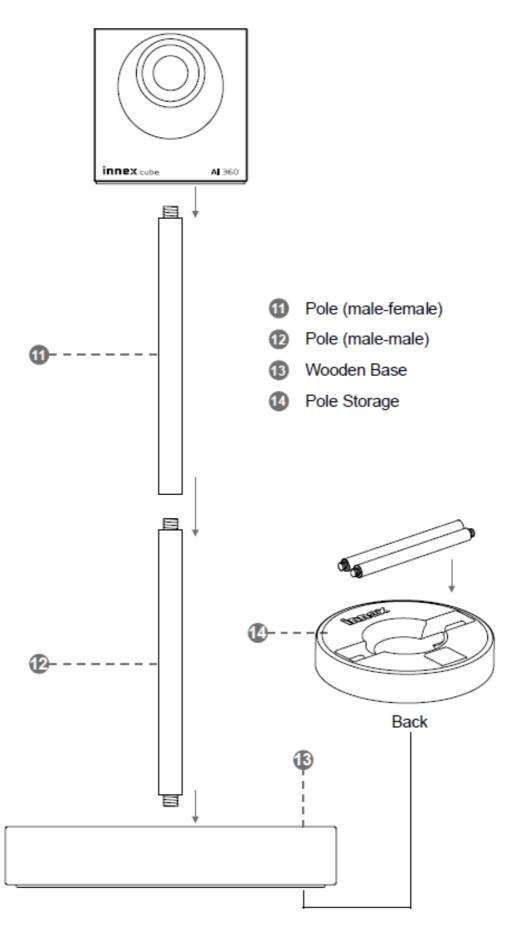

- 15. Additional Pole (male-female)
- 16. Kensington Nano Security SlotTM
- 17. Velcro Cable Tie

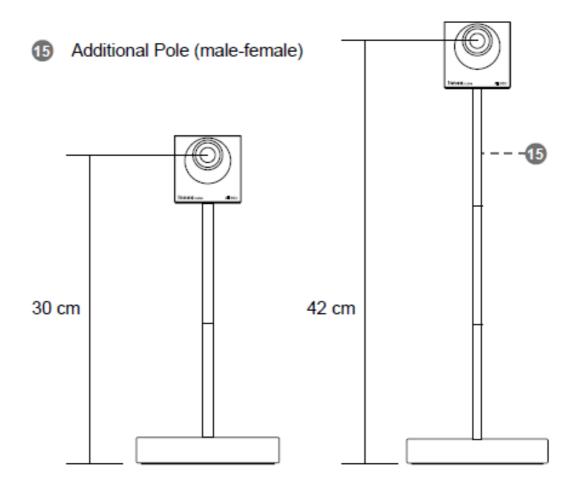

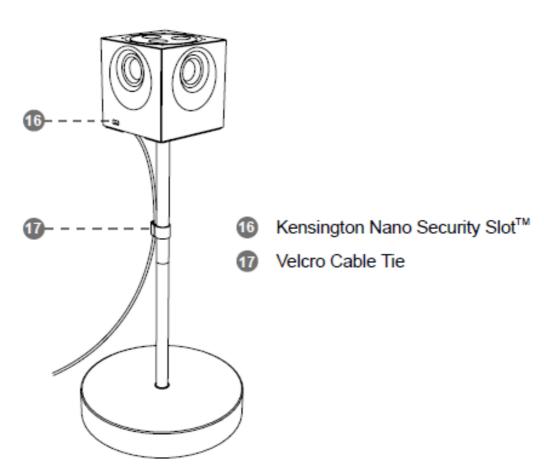

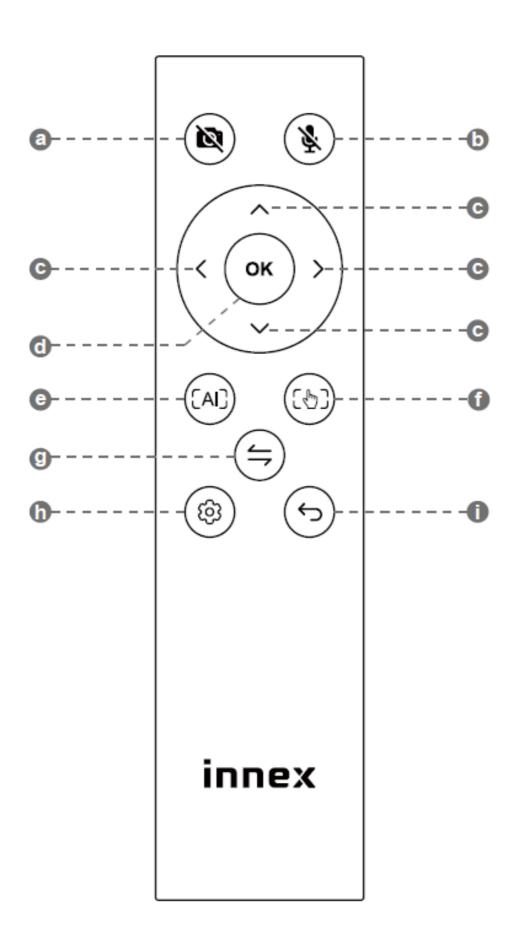

	Button	Description	Function
a	Ø	Camera on/off	Press to turn off and turn on the video
0	%	Microphone on/off	Press to mute and unmute the microphone
•	< > >	Arrow Keys	Adjust the position of the field of view
(ок	Okay	Confirm
e	[AI]	Al mode	Get into AI mode or AI setting
•	[] []	Manual mode	Get into manual mode or manual setting
9	11	Toggle	Switch modes
0	(2)	Setting	Get into general setting
0	J	Close	Close the setting

Notice: The typical response time of making commands is 1.6 seconds. Please allow sufficient response time when using the remote control.

Getting started

- 1. Assemble Innex Cube with 2 or 3 poles.
- 2. Connect the USB cable. Plug the USB-C end to Innex Cube and USB-A end to a USB3.0 port of your computer.
- 3. Once the Cube is powered, the LED will start flashing. Wait until the LED is off before selecting Cube as camera in video conference software. When the Cube is selected as active camera, the LED will be on.
- 4. Point the Front Arrow toward the front of the meeting room where the display is usually located.
- 5. Press the Mode button on the camera or the buttons on the remote control to switch video modes. (By default, Cube starts in Al Dedicated Focus mode.)


Long press the camera's " button or short press the or button on the remote control to switch between AI mode and Manual Mode.

Press the camera's "" button or the "" button on the remote control to rotate through corresponding modes


available in the AI mode and the Manual mode.

In AI mode: Dedicated Focus/ Auto-Framing/ Stage modes.


In Manual mode: Conversation/ 360° Panorama/ 270°/ 180°/ 120°/ 90°.

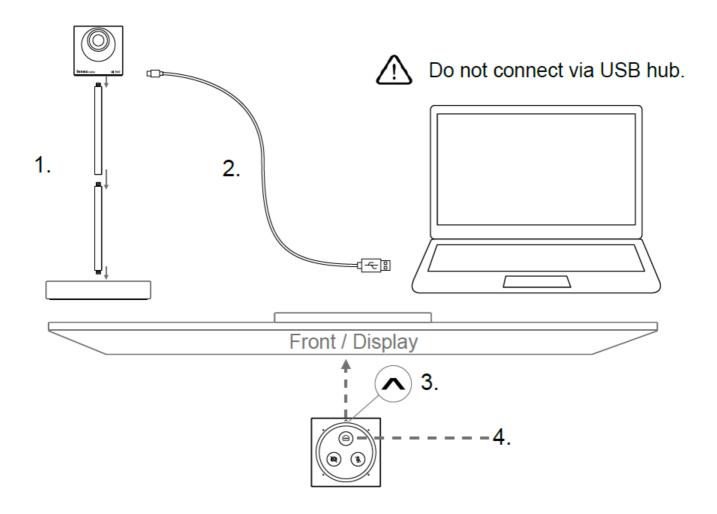


Al modes apply to people who is within 2.5 meters away from Cube, Al mode is recommended for the use of small-sized to middle-sized conference room. If you wish to use Cube in a large-sized meeting room, please consider using manual mode for the best experience.

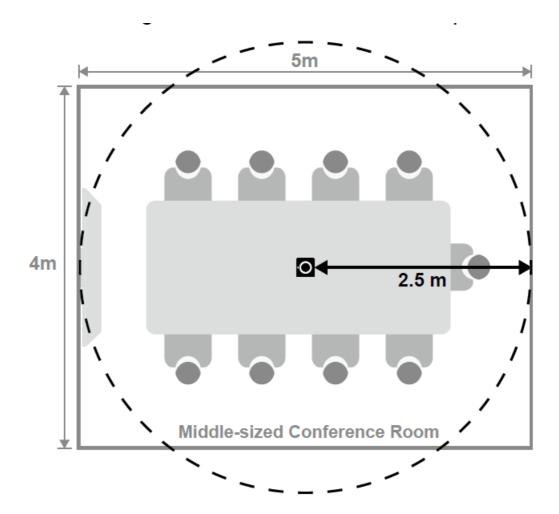

Al provides an unique TV block function which avoids detection of people on TV in All Al modes. However, it is crucial that the TV is not blocked by any objects which can lead to a malfunction of the TV block.

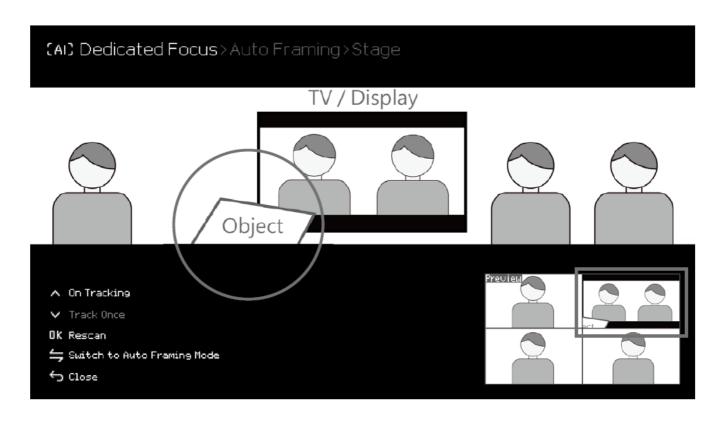


Al Dedicated Focus

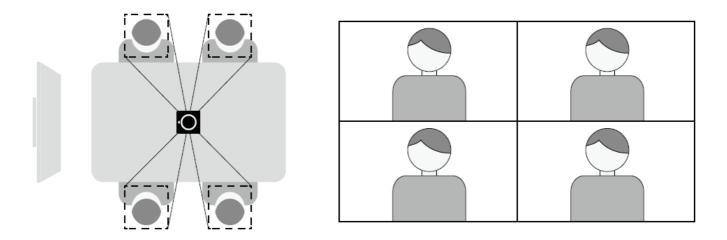


Dedicated focus creates a close-up shot for each person in which Cube is capable of detecting up to 12 people at once, however it could only create 8 boxes of view in total. When people are close to each other, their boxes will merge into one. When no person is detected, the 360° panorama will be displayed.

Al Auto-framing

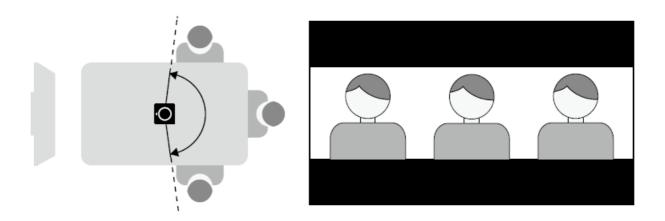

Auto-framing frames up to 20 people in the center of the view and trims off excess space on both sides. When no person is detected, the 360° panorama will be displayed.


Al Stage

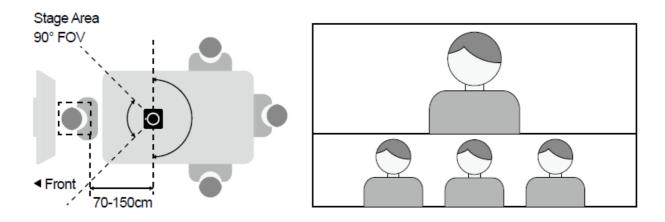

Stage auto-frames the presenter(s) in the stage area(180° centered on front arrow direction) and displays at the upper screen while showing the back 180° side at the lower screen. The presenter needs to stay within the range


of 70cm to 150cm away from camera. When there's only one presenter in the stage area, the viewing angle will be limited to 90°. When there are multiple presenters in the stage area, stage auto-frames the presenters. When no person is detected in the stage area, two equal sized 180° views of the front and back side will be displayed.

Manual Conversation

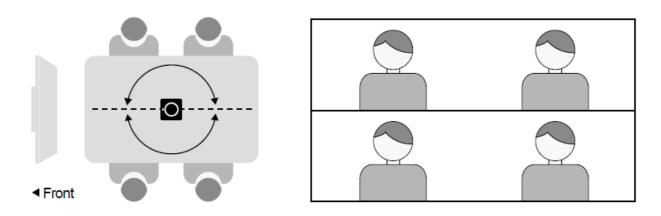


With the camera facing front (front arrow direction), Conversation splits participants from two sides into two equal 180° views. (Note: Al is not available under this mode.)

Manual 360° Panorama

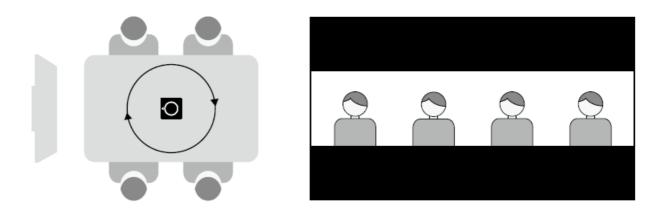


360° Panorama shows a full 360-degree view. (Note: Al is not available under this mode)


Manual 270°/ 180°/ 120°/ 90°

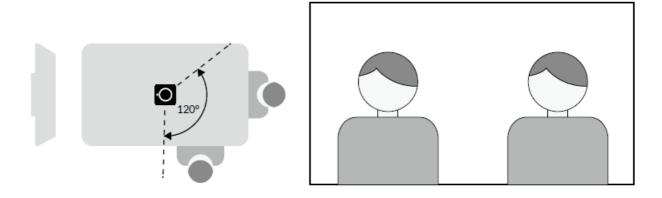

Customize the field of view with 4 preset viewing angles. Press "" to rotate through view angles from 270° to 90°

General Settings

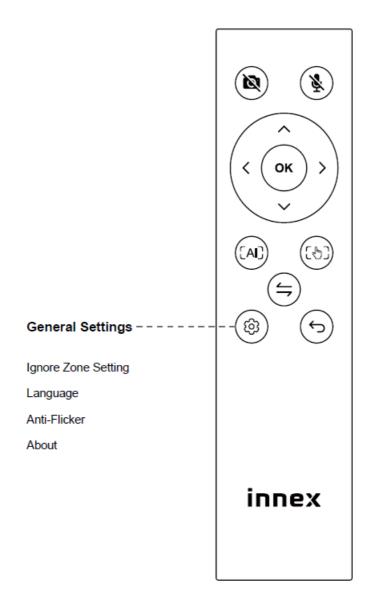

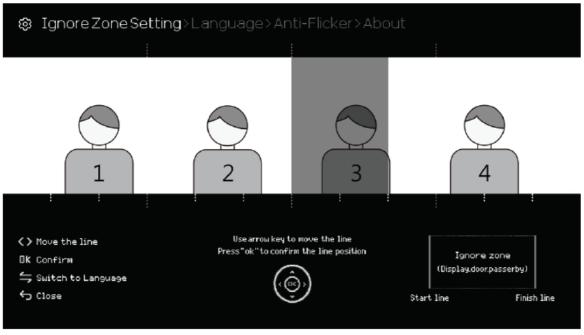



Select an area to disable AI detection to prevent unnecessary distractions or maintain privacy.

Apply Ignore Zone Under the Al Modes

Dedicated Focus


When the Ignore Zone is set, under Dedicated Focus mode, Innex Cube will not detect the participants who sit in that area of the room.

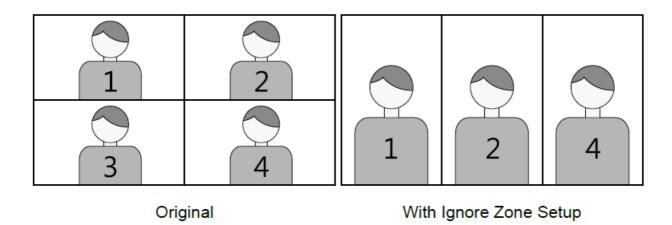

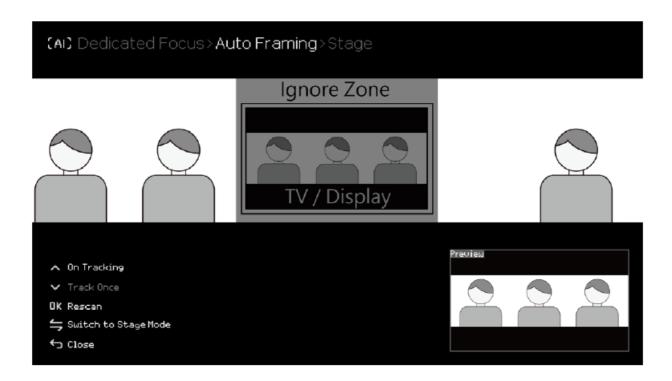


Auto-Framing


When the ignore zone is set, under Auto-Framing mode, Innex Cube will keep that area out of the frame.

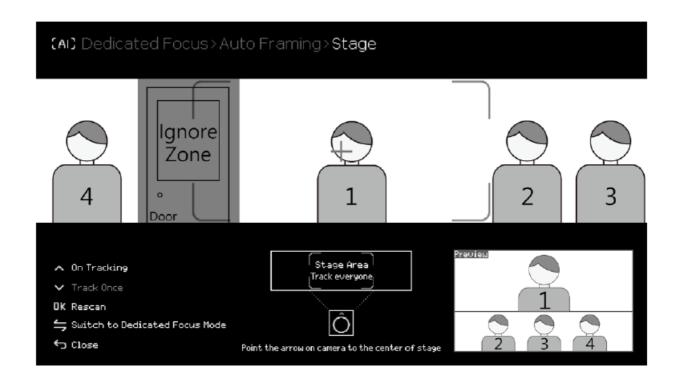


Stage

When the Ignore Zone is set within Stage Area, under Stage mode, Innex Cube will not display that area in the upper screen. If the Ignore Zone is set within the back 180° side, the ignore Zone will not work, as the bottom side is not using AI.

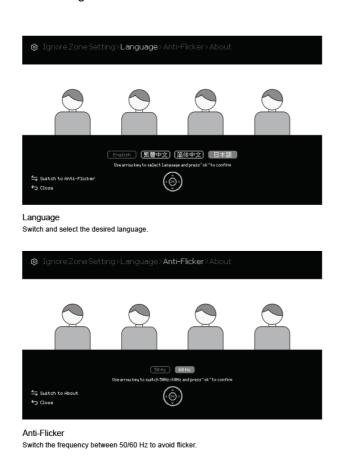


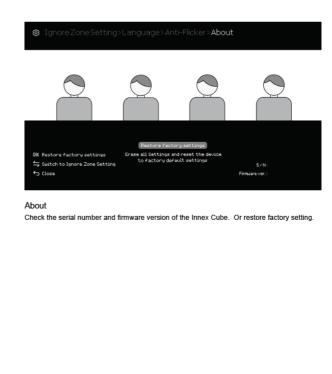

Al Mode Settings

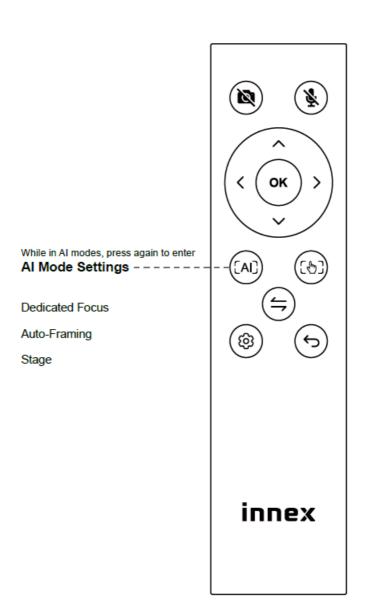


(AIC Dedicated Focus > Auto Framing > Stage

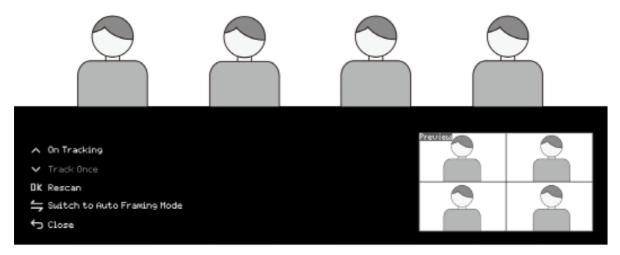


Dedicated Focus

Dedicated Focus outputs a close-up shot for each person, up to 8 boxes total. On-tracking is selected by default and the AI constantly auto-tracks people in the scene. The preview of the output is shown at the button right corner.

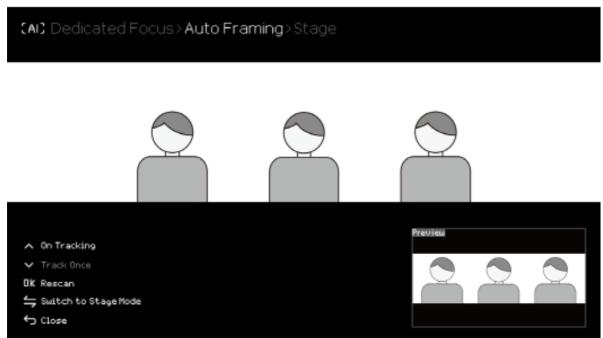


Auto-Framing

Auto-Framing frames people in the center of the view and trims off excess space on both sides. On-tracking is selected by default and the AI constantly auto-tracks people in the scene. The preview of the output is shown at the button right corner.

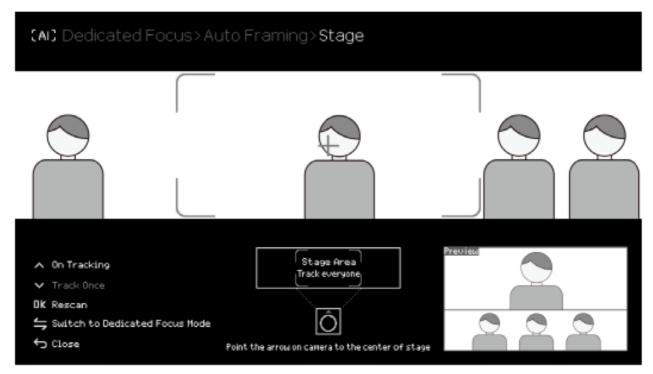

Stage


Stage auto-frames the presenter(s) in the stage area (180° centered on Front Arrow direction) and displays at the upper screen while showing the back 180° view at the lower screen. Ontracking is selected by default and the AI constantly auto-tracks people in the Stage Area. The preview of the output is shown at the button right corner.

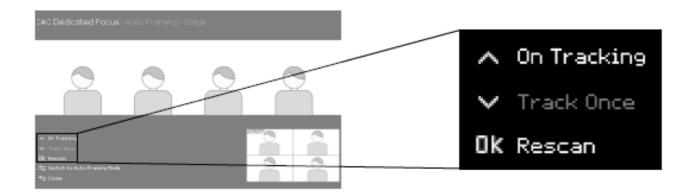


Track Once

To prevent interference resulting from people constantly moving, use the ">" arrow to select Track Once to disable auto-tracking and press "OK" to rescan the scene and update people's positions once. This will lock the Cube and prevent any person's movement from changing the Cube's output. Once Track Once is setup under any AI mode, it will apply to all other AI modes. To switch back, use the " ^ " arrow to select On Tracking, or unplug the USB cable to reset. Notice: When pressing "OK", the Cube will take around 2.6 seconds to scan.


Manual Mode Settings

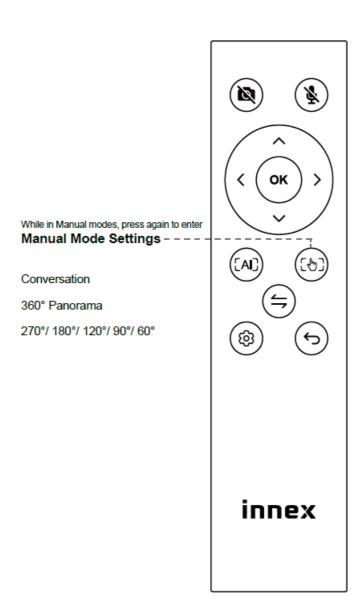

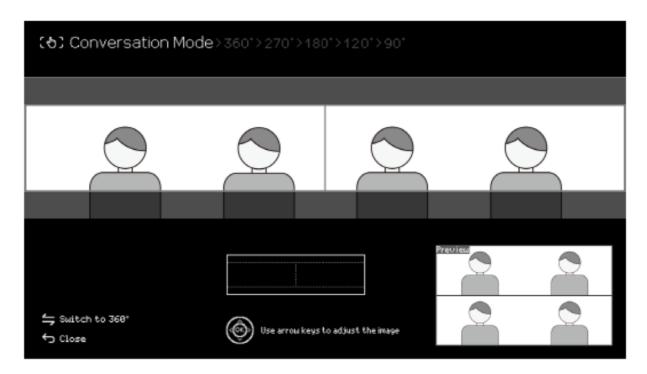


Conversation

Conversation splits participants from two sides into two equal 180° views. Use the up/down/ left/right arrow keys to adjust the center of the view. The preview of the output is shown at the button right corner.

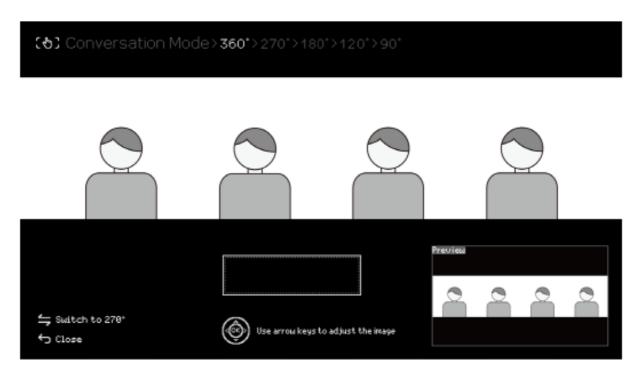

360° Panorama

360° Panorama shows a full 360-degree view. Use the left/right arrow key to adjust the center of the view. The preview of the output is shown at the button right corner.

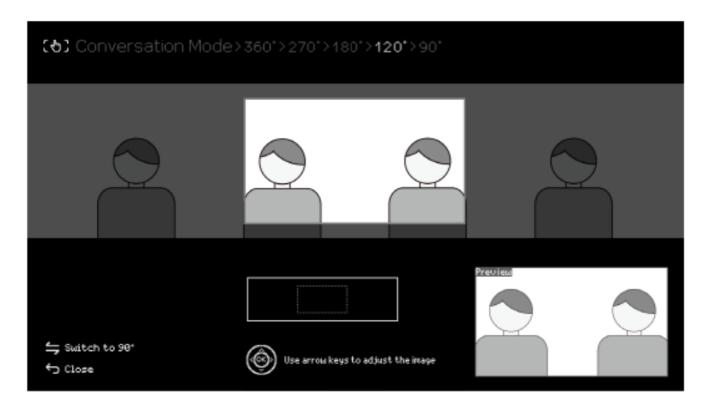

270°/ 180°/ 120°/ 90°

Customize the view angles from 270°/ 180°/ 120°/ 90°. Press " = " to rotate through the view angles and use up/down/left/right arrow key to adjust the center of the view. The preview of the output is shown at the button right corner.

Specifications

Camera	
Lens Resolution	5 Megapixels
Lens Quantity	4
Sensor	1/2.7" CMOS
Stitching Technology	Dynamic Real-Time Stitching Technology
Max. Resolution & Frame Rate	4992×928 @30fps (360°Panorama)
Focus Distance	2.3ft / 70cm
Max. Output Field of View	Horizontal 360° / Vertical 60°

Flicker	50Hz/ 60Hz
Auto Exposure	Yes
Auto White Balance	Yes
Camera Embedded Mode	 Dedicated Focus Mode Stage Mode Conversation Mode Auto-Framing Manual Mode 360°/ 270°/ 180°/ 120°/ 90°

Microphone	
Microphone	2 Omnidirectional Microphones
Automatic Gain Control (AGC)	Yes
Active Noise Supression (ANS)	Yes
Sensitivity	-26dB FS
Pick-up Distance	10ft / 3m
Others	
Power Consumption	5V / 900mA
Interface of MIC & Camera	USB Type-C x1
Dimension	Cube: 65x65x66mm Pole: 122mm Wooden Base: 26×138Φmm Full Height: 208mm(1 Pole) / 324mm(2 poles) / 440mm(3 Poles) Travel Box: 235x108x165mm
Weight	Cube: 260g Wooden Base: 345g Poles: 70g (for 3)

	Oules LICE Calde (1 Em) Pala vo Waadan Pasa Panata Cantual Patt
Package Contents	Cube, USB Cable(1.5m), Pole x3, Wooden Base, Remote Control, Batt ery x2 (for Remote Control), Travel Box

Important Safety, Compliance and Warranty Information

Read Manual Before Product Use



POWER SUPPLY WARNING!

The power supply is for indoor use only. Only use the power supply included with your product. Do not attempt to repair or use a damaged power supply. Do not immerse the power supply in water or subject it to physical abuse. Inspect the power supply regularly for cable, plug, and casing damage.

BATTERY WARNING!

Improperly replaced batteries may present a risk of leak or explosion and personal injury. Mistreated rechargeable batteries may present a risk of fire or chemical burn. Do not disassemble or expose to conducting materials, moisture, liquid, or heat above 54° C (130° F). Do not use or charge the battery if it appears to be leaking, discolored, deformed, or in any way abnormal. Do not leave your battery discharged or unused for extended periods. Do not short circuit. Your device may contain an internal, rechargeable battery that is not replaceable. Battery life varies with usage. Non-operational batteries should be discarded according to local laws. If no laws or regulations govern, dispose of your device in a waste bin for electronics. Keep batteries away from children.

Safe Usage Guidelines for Products

- Do not open or modify the product except for battery removal and replacement.
- Do not disassemble or attempt to service this product.
- This product is safe under normal and reasonably foreseeable misuse operating conditions.
- If product is operating improperly, contact the authorized reseller.
- Product must be returned to the authorized reseller for any service or repair.
- This is not a Children's Product and is not intended for use by children under 14 years old.

FunTech Innovation Compliance.

For Product Safety, EMC, RF and Energy information, go to www.funtechinnovation.com/compliance Maintenance is not required for product compliance.

This product complies with relevant legal requirements for Restriction of Hazardous Substances (RoHS) and management of waste electronic and electrical equipment (WEEE). For RoHS and WEEE information, go to www.funtechinnovation.com/compliance



Batteries, electronic and electrical equipment should not be disposed of with household waste. Wherever possible, they should be segregated and brought to an appropriate collection point to enable recycling and avoid potential impacts on the environment and human health. For more information, contact your local authorities or place of purchase.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy. And, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Where shielded interface cables or accessories have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC. Changes or modifications to product not expressly approved by Fun Technology Innovation Inc, could void your right to use or operate your product by the FCC.

IC statement:

CAN ICES003 (B) / NMB003 Class (B)

This device complies with Industry Canada license exempt RSS standard(s) Operation is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Cordless (Radio Transmitter) products: Section A. RSS310 (27 MHz transmitters and receivers): This Category II radio communication device complies with Industry Canada Standard RSS310. Section B. RSS210 (2.4 GHz transmitters or transceivers): This Category I radio communication device complies with RSS210 of Industry Canada.

FunTech Innovation's Limited Hardware

Product Warranty – A Summary

FunTech Innovation warrants that its hardware product shall be free from defects in materials and workmanship for the length of time identified on your product package beginning from the date of original retail purchase. See for specific warranty information about your product and procedures to act on a warranty claim.

FunTech Innovation's entire liability and your exclusive remedy for any breach of warranty shall be, at FunTech Innovation's option, to repair or replace a functional equivalent of the product, or to refund the price paid, it the hardware is returned to the point of purchase or such other place as FunTech Innovation may direct along with a receipt.

Warranty protections are in addition to rights provided under local consumer laws and may vary among countries. See the full warranty information to know your consumer rights and the additional protections provided by this product warranty.

Safety Instruction

For your safety, please read the following instruction before you use the product. Serious injury or property damage may be caused by improper operations. Do not try to repair the product on your own.

WARNING

WARNING	
	Disconnect the product from power supply immediately if major failures occur. Major failures includ e the following: • Smoke, peculiar smell or abnormal sound is discharged from the product. • No image or sound is displayed, or the image error occurs. In the preceding scenarios, do not continue to use the product. Disconnect power supply immediat ely and contact professional staff for troubleshooting.
	 Do not drop liquid, metal or anything combustible into the product. If any liquid or metal is dropped into the product, power off the product and disconnect power s upply, then contact professional staff for solutions. Pay attention to children when they are close to the product.
	Put the product on a stable surface. An unstable surface includes and does not limited to an incline d plane, a shaky stand, desk or platform, which might cause turnover and damage.
	Do not open the cover or change the product on your own. High voltage components are installed in the product. When you open the cover, high voltage, electric shock, or other dangerous situation s may occur. If inspection, adjustment, or maintenance is required, contact the local distributor for help.

Use the Qualified USB Cable. • To prevent the product from being damaged, do not use any types of USB cables other than the one provided with the product or a USB certificated cable.
Do not put items on the top of the product. • Do not put items, such as a container for liquid (a vase, flowerpot, cosmetics or liquid medicine) on the top of the product. • If any water or liquid is spilled on the product, a short circuit may occur and cause fire or electric shock. • Do not walk on or hang any items on the product.
 Do not install the product in an improper place. Do not install the product in humid places, such as the bathroom, the shower room, near window s, or outdoor environments that experience rain, snow or other harsh weather. Avoid installation ne ar hot spring vapor. The preceding environments may cause faults in the product or electric shock under extreme conditions. Do not put exposed fire source, such as an ignited candle, on the product.
Pull out the power plug during thunderstorms. • Do not touch the product during a lighting storm to avoid electric shock. • Install or place components that supply high enough voltage to cause personal injury out of the reach of children.

WARNING	
	Do not touch the power cable with wet hands.
	 Do not install the product in high temperature environments. Do not install the product near a heat source, such as a radiator, a heat reservoir, a stove or other heating products. Do not expose the product to direct sunlight, which may cause high temperatures and subseque nt faults in the product.
	For transport. Pack the product for transport or maintenance by using the cartons and cushioning material provided with the product. Vertically move the product during transport. The screen or other components are easily broken if the product is moved by an improper way. Before you move the product, disconnect all external connections and separate all toppling preventing products. Move the product carefully to prevent it from being hit or squeezed, especially the screen, which may cause injury if broken.

	Do not cover or block up any vents on the product.
	 Any overheated components may cause fire, damage the product, and shorten the service
	 Do not lay the product down where the venting surface will be covered.
	Do not install the product on a carpet or cloth.
	Do not use a cloth such as table cloth to cover the product.
	Keep away from the product when you use a radio.
	The product complies with the international EMI standard to pervent radio interference. How nterference may still exists and causes noise in the radio. If noise occurs in the radio, try the ng solutions.
	• Adjust the direction of the radio antenna to avoid the interference from the product.
	Keep the radio away from the product.
-	
	Glass lens is broken or falls off.
	• In case of glass lens breakage, keep all personnel away from the cube to ensure safety.
	• Do not perform any installation or disassembly when the glass lens is broken or falls off.

Use the battery correctly.

- Galvanic corrosion, electric leakage, and even fire may be caused by improper battery usage.
- It is recommended to use the designated type of battery and install the battery by correct electro des (positive and negative).
- Do not install and use new battery with a used one.
- Take out the battery if the remote control is not used for a long period.
- Do not expose the battery to overheated environments such as sunlight and firing.
- Dispose of the used battery based on your local regulations.

For any product /warranty-related question please visit www.funtechinnovation.com/support

Visit FTI website https://funtechinnovation.com

Documents / Resources



SKILL ATTACK Volleyball Pitching Machine [pdf] Instruction Manual Volleyball Pitching Machine, Pitching Machine, Machine



SKILL ATTACK Volleyball Pitching Machine [pdf] Instruction Manual Volleyball Pitching Machine, Pitching Machine, Machine

References

- Sports Attack Professional Sports Equipment
- Warranty Registration Sports Attack
- Sports Attack Professional Sports Equipment

Manuals+,