

SKYDANCE CXR-28A RF Constant Current LED Driver User Manual

Home » SKYDANCE » SKYDANCE CXR-28A RF Constant Current LED Driver User Manual



SKYDANCE CXR-28A RF Constant Current LED Driver User Manual



Contents

- 1 Features
- **2 Technical Parameters**
- 3 LED Current Selection
- **4 Mechanical Structures and Installations**
- **5 Wiring Diagram**
- **6 Match Remote Control**
- 7 Dimming Curve
- 8 Malfunctions analysis &


troubleshooting

- 9 Documents / Resources
- **10 Related Posts**

Features

- · Special for magnetic & linear lamp
- · No input polarity
- DC to DC constant current output, multiple output current settings
- Match with RF 2.4G dimming remote control
- Synchronize on multiple number of LED drivers

- Suitable for STUCCHI standard housings, magnetic installation
- Smooth dimming without icker, quiet without noise
- Short circuit, overload, no-load and anti-reverse protection
- 5-year warranty.
- No flicker, no noise

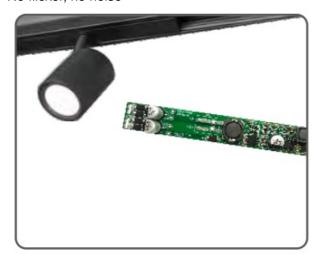

• For STUCCHI standard housing – 9519-166-K – B 9519-166-K/W



• Installation guide



Technical Parameters

	Model	CXR-21A	CXR-28A		
	Output Voltage	10~42Vdc			
	Output Current	150-500mA	350-700mA		
	Output Power	1.5W- 21W	3.5W-29.4W		
Output	Current Accuracy	±5%			
	Dimming Range	0~100% , 024levelsdimmi ng			
	Channel num	1			
	Dimming Interface	RF2.4G			
	input Voltage	48Vdc±5%(Nopolarity)			
Input	Input Current	Max.0. 47A	Max.0.65A		
	Efciency(Typ)	93%	95%		
	Standby Power	<0.5W			
	Woking Temperature	-20~50°C			
Environment	Storage Temp				
	Working Humidi	20~95%RH,non condensi ng			
	Overload	When load voltage excee d its range, the current de clines, auto recovers whe n the load is reduced.			
Protection	Short Circui	Shut down automatically if short circuit occurs, auto r ecovers.			
	Reverse connection	Prevent dirver and load d amage			
Other	Size	L125×W13.5×H10.8mm			
Other	Weight	10.5g±2g			

LED Current Selection


Note: Please select the correct current through the DIP switch on the PCB board when the power is off.




DIP Swit	ch									
	Output Current	150mA	200mA	250mA	300mA	350mA	400mA	450mA	500mA	
CXR-2 1A	Output Voltag	10-42V	10-42V	10-42V	10-42V	10-42V	10-42V	10-42V	10-42V	ON OFF
	Output Power	1.5-6.3 W	2-8.4W	2.5- 10.5W	3-12.6 W	3-12.6 W	4-16.8 W	4.5- 18.9W	5-21W	

DIP Swit	ch									
	Output Current	350mA	400mA	450mA	500mA	550mA	600mA	650mA	700mA	
CXR-2 8A	Output Voltage	10-42V	10-42V	10-42V	10-42V	10-42V	10-42V	10-42V	10-42V	ON OFF
	Output Power	3.5- 14.7W	4-16.8 W	4.5-18. 9W	5-21W	5.5-23. 1W	6-25.2 W	6.5-27. 3W	7-29.4 W	

Mechanical Structures and Installations

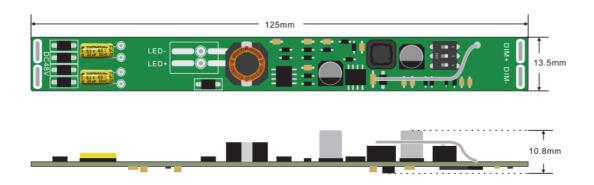

Wiring Diagram

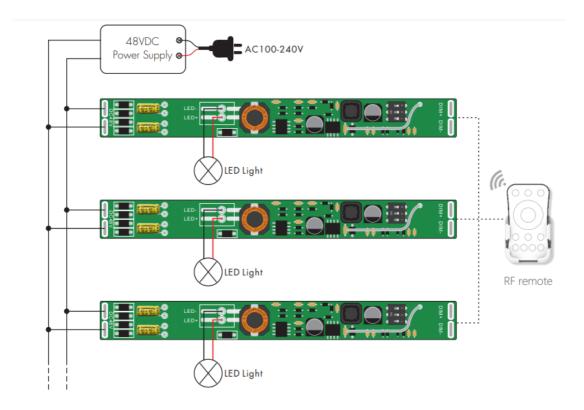

Match Remote Control


Match:

Switch off the power of the LED dirver, then switch on power, repeat again. Immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 3 times on the remote. The light blinks 3 times means match is successful.

Delete:

Switch off the power of the LED driver, then switch on power, repeat again. Immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.

Dimming Curve

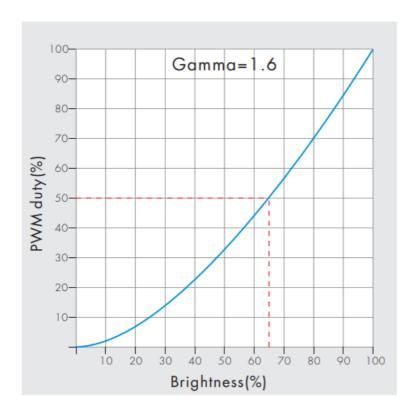

Malfunctions analysis & troubleshooting

Malfunctions	Causes	Troubleshooting
No light	 No power. Wrong connection or insecure. 	 Check the power. Check the connection.
No response from the remote	 The battery has no power. Beyond controllable distance. The LED driver did not match the remote 	 Replace battery. Reduce remote distance. Re-match the remote.

Documents / Resources



SKYDANCE CXR-28A RF Constant Current LED Driver [pdf] User Manual CXR-21A, CXR-28A, RF Constant Current LED Driver, CXR-28A RF Constant Current LED Driver, Constant Current LED Driver, LED Driver, Driver, Driver, Driver

Manuals+,