



## Skydance DH4 Lighting Control System Installation Guide

[Home](#) » [SKYDANCE](#) » Skydance DH4 Lighting Control System Installation Guide 

# SKYDANCE

DALI Switch



4CH/ dry contact output / 4 DALI address/ DMX-RDM / OLED display / Din Rail

### Contents

- 1 DH4
- 2 Technical Parameters
- 3 Mechanical Structures and Installations
- 4 Wiring Diagram
- 5 Documents / Resources
  - 5.1 References

## DH4

### DALI/DMX 4-Channel Switch

- 4 DALI address, 4 channel 16A dry contact mains rated relay switch output.
- OLED display screen, via button setting two work mode: DALI mode, DMX mode.
- DALI address can be manually assigned and shown in digital display or automatically assigned by DALI master.
- In accordance with DALI standard protocol IEC 62386-101,102, 208 and in compliance with DALI products from other international incorporation.
- Comply with the DMX512 standard protocols.
- RDM function can realize intercommunication between DMX master and decoder.
- Supports manual switching of individual channels.
- High-inrush specification relays (single pole, normally open).
- Zero cross switching function.
- Can operate as:
  - 4 individual channels (4 × 1)
  - 2 sets of 2 channels (2 × 2)
  - 1 sets of 4 channels (1 × 4)



### Technical Parameters

#### Input and Output

Input voltage	100-240VAC
Input current	0.1A
Input signal	DALI+DMX512
No-load standby power consumption	0.5W@100V, 1.5W@240V
Full load loss power	4W@100V, 4.5W@240V
Relay contacts	High inrush (120 A at 20ms), single-pole, single-throw (S PST) relay.
Max relay load current	16A resistive load (incandescent lamp) 8A Capacitive load (LED dimming driver) 8A inductive load (

### Safety and EMC

EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4
Safety standard(LVD)	EN 62368-1:2020+A11:2020
Certi	CE,EMC,LVD

## Warranty and Protection

Warranty	5 years
----------	---------


## Environment

Operation temperature	Ta: -20°C ~ +50°C
Case temperature (Max.)	Tc: +60°C
IP rating	IP20


## Package

Size	W118 x L102 x H71mm
Gross weight	0.345kg

## Mechanical Structures and Installations

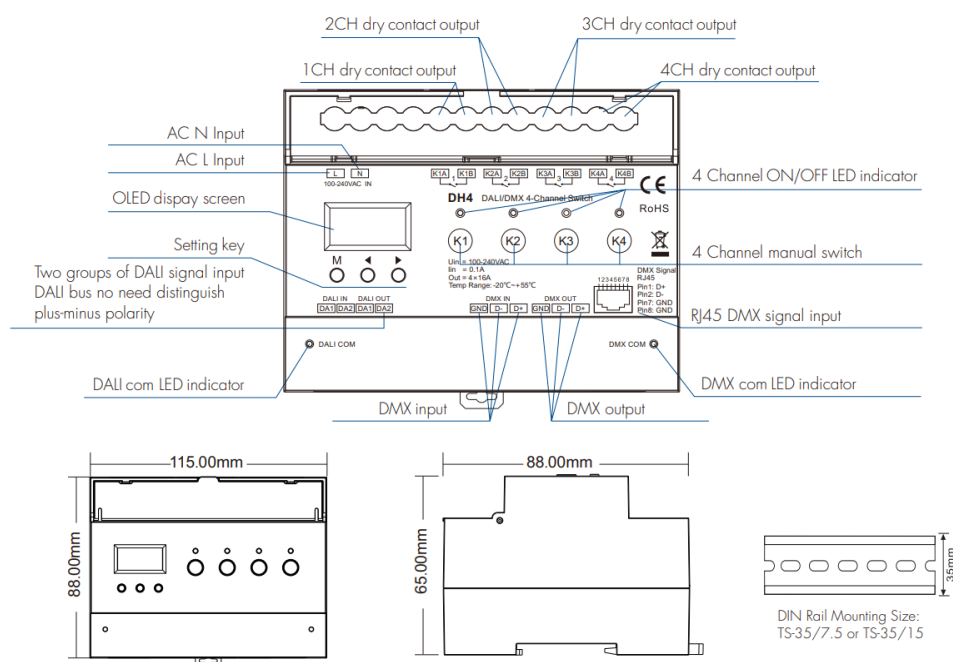

## Wiring Diagram

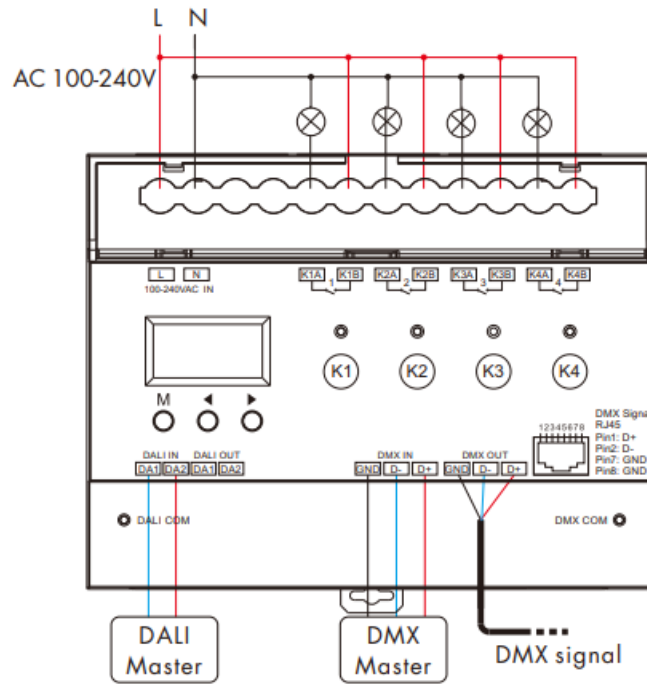

**Note:** The maximum surge current of the AC output is 120A, the sum of surge current of multiple resistive load or inductive load (LED drivers) should not exceed its maximum value. Otherwise, the product will be overloaded and damaged.

## Work Mode

### 1. System setting

System Setting  
WorkMode: DALI  
ChannelNum: 4  
ManualSwitch: Yes

- Long press M button for 2s, enter system setting state, prepare to set the working mode, channel number and manual switch enable. Short press the M button to switch three setting items.
- Working mode: Short press ◀ or ▶ button, switch between DALI and DMX working mode.
- Channel number: Short press ◀ or ▶ button, switch the number of 4/2/1 channels, i.e. 4 independent channels (4×1), 2 groups of 2 channels (2×2) or 1 group of 4 channels (1×4).
- Manual switch enable: Short press ◀ or ▶ button, setting to allow (Yes) or disallow (No) the manual switching function, i.e. setting whether the four-channel manual switching buttons are active or not.
- Long press M button for 2s, or timeout 15s, quit system setting.

### 2. DALI mode

DALI Mode  
CH1: 01      CH2: 02  
CH3: 03      CH4: 04

In DALI mode, the DALI address can be set by buttons or DALI master control:

(1) Set DALI Address via buttons


- Short press M button, prepare for set the start DALI address. The four channels can be addressed separately, and the address setting of the four channels can be switched sequentially by short pressing the M button.
- Short press ◀ or ▶ button, change the address value of the current channel (00-63-FF), FF means unassigned DALI address. long press for fast adjustment.
- Long press M button for 2s, or timeout 15s, quit DALI address setting.

#### (2) DALI address assigned by DALI masters

DALI address can also be assigned by DALI Master controller automatically.

Please refer to user manuals of compatible DALI Masters for specioperations.


### 3. DMX mode

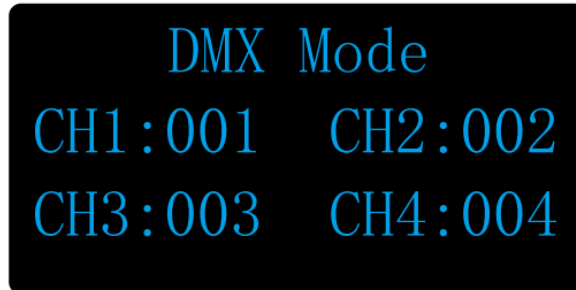

In DMX mode, the DMX address can be set by buttons or DMX RDM master:

- Short press M button, prepare for set the start DMX address.
- Only the address of the channel needs to be set, and the addresses of the other channels will be automatically added 1 in sequence.
- Short press ◀ or ▶ button, change the DMX address value (001-512), long press for fast adjustment.
  - Long press M button for 2s, or timeout 15s, quit DMX address setting.

### 4. Restore factory settings

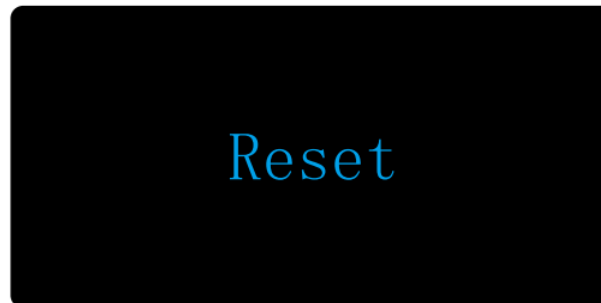

- Long press ◀ and ▶ buttons at the same time for 2 seconds to restore factory settings.
- Factory default parameter: DALI mode, number of channels is 4, manual switch enable.

### 5. Overheat protection




- 110°C triggers temperature protection and shuts off the relay output.
- Normal switching control is resumed at 90°C.

# SKYDANCE

---

## Documents / Resources

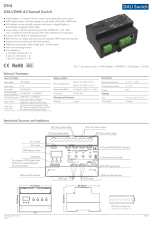	<p><a href="#">Skydance DH4 Lighting Control System</a> [pdf] Installation Guide DH4 Lighting Control System, DH4, Lighting Control System, Control System</p>
---	--

## References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.