

SKYDANCE R1-1 One-key RF Remote Controller User Manual

Home » SKYDANCE » SKYDANCE R1-1 One-key RF Remote Controller User Manual

Contents

- 1 R1-1 One-key RF Remote Controller
- 2 Features
- **3 Technical Parameters**
- 4 Safety and EMC
- **5 Environment**
- **6 Warranty**
- 7 Mechanical Structures and Installations
- 8 Use the controller's Match key
- 9 Use Power Restart
- 10 Safety information
- 11 Documents / Resources
 - 11.1 References
- **12 Related Posts**

R1-1 One-key RF Remote Controller



User Manual

One-key portable dimmer/Wireless remote 30m distance/CR2032 battery/Magnet stuck fix

Features

- Apply to single color LED controller.
- Each remote can match one or more receiver.
- CR2032 battery powered.
- Operate with LED indicator light.
- Magnet on the back which can be easily stuck on any metal surfaces.

Technical Parameters

Output signal	RF(2.4GHz)
Working voltage	3VDC(CR2032)
Working current	5mA
Standby current	2μΑ
Standby time	2 years
Remote distance	30m(Barrier-free space)

Safety and EMC

EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4
Safety standard(LVD)	EN 62368-1:2020+A11:2020
Radio Equipment(RED)	ETSI EN 300 328 V2.2.2
Certification	CE,EMC,LVD,RED


Environment

Operation temperature	Ta: -30 OC ~ +55 OC
IP rating	IP20

Warranty

Warranty: 5 years

Mechanical Structures and Installations

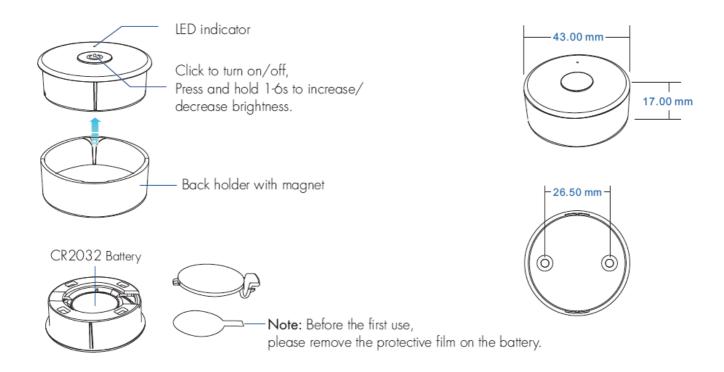

To fix the remote, three options are offered for selection:

Option 1: stuck on any metal surfaces directly.

Option 2: fix it on the wall with two screws.

Option 3: adhere it to the wall with paster.

Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controller's Match key

Match:

Short press match key, immediately press on/off key on the remote. The LED indicator fast flash a few times means match is successful.

Delete:

Press and hold match key for 5s to delete all match, The LED indicator fast flash a few times means all matched remotes were deleted.

Use Power Restart

Match:

Switch off the power, then switch on power, repeat again. Immediately short press on/off key 3 times on the remote. The light blinks 3 times means match is successful.

Delete:

Switch off the power, then switch on power, repeat again. Immediately short press on/off key 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.

Safety information

- 1. Read all instructions carefully before you begin this installation.
- 2. When installing battery, pay attention to the battery positive and negative polarity.

A long time without the remote control, remove the battery.

When remote distance becomes smaller and insensitive, replace the battery.

- 3. If no response from the receiver, please re-match the remote.
- 4. Gently handle remote, beware of falling.
- 5. For indoor and dry location use only.

www.iskydance.pl

Documents / Resources



SKYDANCE R1-1 One-key RF Remote Controller [pdf] User Manual R1-1, One-key RF Remote Controller, R1-1 One-key RF Remote Controller

References

• Sklep ELED - oświetlenie LED na miarę Twoich potrzeb

Manuals+.