



SKYDANCE R10 Ultrathin Touch Slide RF Remote Controller Instructions

[Home](#) » [SKYDANCE](#) » SKYDANCE R10 Ultrathin Touch Slide RF Remote Controller Instructions 


Contents

- [1 Ultrathin Touch Slide RF Remote Controller](#)
- [2 Model No.: R10](#)
- [3 Features](#)
- [4 Technical Parameters](#)
- [5 Mechanical Structures and Installations](#)
- [6 Match Remote Control \(two match ways\)](#)
- [7 Key function](#)
- [8 Safety information](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)

Ultrathin Touch Slide RF Remote Controller

Model No.: R10

Touch color slide/RGB+CCT/Wireless remote 30m distance/CR2032 battery/Magnet stuck fix

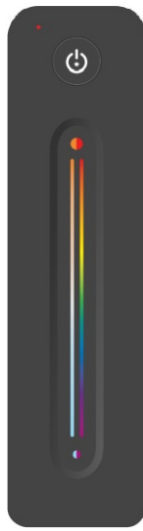

CE RoHS  LVD RED

Features

- Apply to RGB+CCT, dual color or RGB LED controller.
- Ultra sensitive color adjustment touch slide.
- Each remote can match one or more receiver.
- CR2032 battery powered.
- Operate with LED indicator light.
- Magnet on the back which can be easily stuck on back holder or any metal surfaces.

Technical Parameters


Input and Output	
Output signal	RF(2.4GHz)
Working voltage	3VDC(CR2032)
Working current	< 5mA
Standby current	< 10μA
Standby time	1 year
Remote distance	30m(Barrier-free space)

Warranty	
Warranty	5 years

Safety and EMC	
EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4
Safety standard(LVD)	EN 62368-1:2020+A11:2020
Radio Equipment(RED)	ETSI EN 300 328 V2.2.2
Certification	CE, EMC, LVD, RED

Environment	
Operation temperature	Ta: -30°C ~ +55°C
IP rating	IP20

Mechanical Structures and Installations

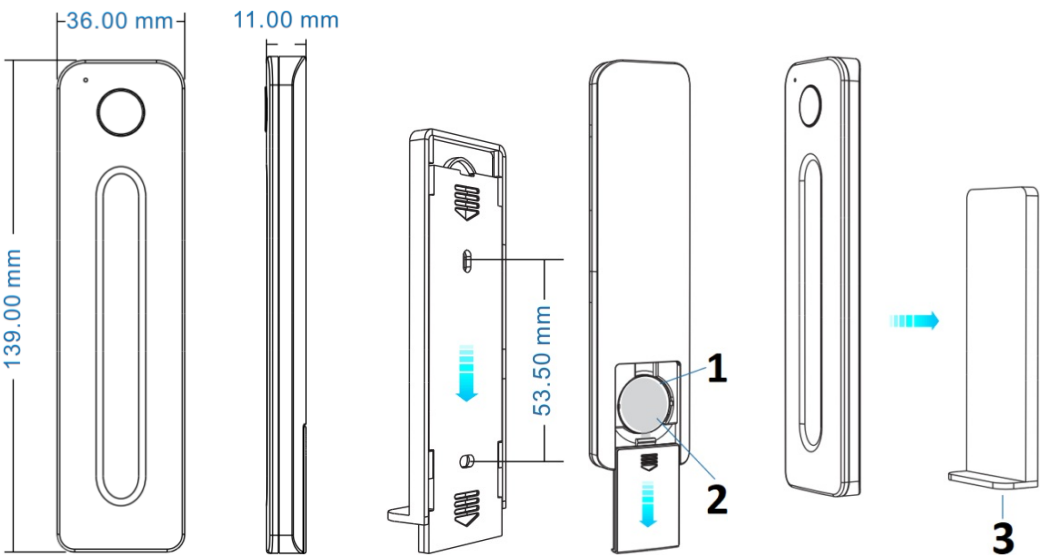

1. CR2032 Battery
2. **Note:** Before the first use, please remove the protective film on the battery.
3. Back holder with magnet

To fix the remote, three options are offered for selection:

- Option 1: stuck the remote on any metal surfaces directly.
- Option 2: fix the remote' back holder on the wall with two screws.

Option 3: adhere the remote's back holder to the wall with paster.

Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controller's Match key

Match:

Short press match key, immediately press on/off key on the remote.

The LED indicator fast flash a few times means match is successful.

Delete:

Press and hold match key for 5s to delete all match, The LED indicator fast flash a few times means all matched remotes were deleted.

Use Power Restart

Match:

Switch off the power, then switch on power, repeat again.

Immediately short press on/off key 3 times on the remote.

The light blinks 3 times means match is successful.


Delete:

Switch off the power, then switch on power, repeat again.

Immediately short press on/off key 5 times on the remote.

The light blinks 5 times means all matched remotes were deleted.

Key function

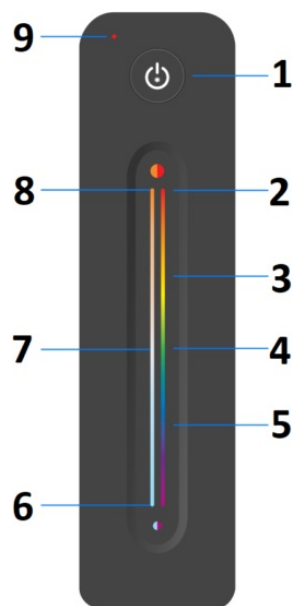

1. 1. Short press for On/Off.
2. Press and hold 1-6s for brightness dimming.
3. When light is on, fast press 2 times for shift between RGB and CCT touch slide.
2. R 100%
3. Color touch slide

- 4. G 100%
- 5. B 100%
- 6. WW 0%
CW 100%
- 7. WW 50%
CW 50%
- 8. WW 100%
CW 0%
- 9. LED indicator

Safety information

- 1. Read all instructions carefully before you begin this installation.
- 2. When installing battery, pay attention to the battery positive and negative polarity. A long time without the remote control, remove the battery. When remote distance becomes smaller and insensitive, replace the battery.
- 3. If no response from the receiver, please re-match the remote.
- 4. Gently handle remote, beware of falling.
- 5. For indoor and dry location use only.

User Manual Ver 1.0.3

Documents / Resources

	SKYDANCE R10 Ultrathin Touch Slide RF Remote Controller [pdf] Instructions R10, Ultrathin Touch Slide RF Remote Controller, R10 Ultrathin Touch Slide RF Remote Controller
---	---