

SKYDANCE R14 Ultrathin Touch Slide RF Remote Controller User Manual

[Home](#) » [SKYDANCE](#) » SKYDANCE R14 Ultrathin Touch Slide RF Remote Controller User Manual 

Contents

 
- [1 R14 Ultrathin Touch Slide RF Remote Controller](#)
 - [1.1 Features](#)
 - [1.2 Technical Parameters](#)
 - [1.3 Mechanical Structures and Installations](#)
 - [1.4 Use Power Restart](#)
 - [1.5 Key function](#)
 - [1.6 Safety information](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

R14 Ultrathin Touch Slide RF Remote Controller

Ultrathin Touch Slide RF Remote Controller

Model No.: R14

Touch color slide/RGB+W/Wireless remote 30m distance/CR2032 battery/Magnet stuck fix

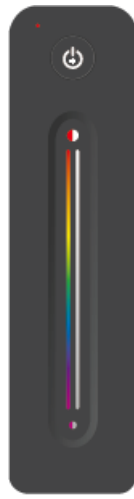

CE RoHS  LVD RED


Features

- Apply to RGB+W LED controller.
- Ultra sensitive color adjustment touch slide.
- Each remote can match one or more receiver.
- CR2032 battery powered.
- Operate with LED indicator light.
- Magnet on the back which can be easily stuck on back holder or any metal surfaces.

Technical Parameters

Input and Output	
Output signal	RF(2.4GHz)
Working voltage	3VDC(CR2032)
Working current	5mA
Standby current	10μA
Standby time	1 year
Remote distance	30m(Barrier-free space)
Warranty	
Warranty	5 years
Safety and EMC	
EMC standard	(EMC) ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-1 7 V3.2.4
Radio Equipment	(RED) ETSI EN 300 328 V2.2.2
Certification	CE,EMC,LVD,RED
Safety standard	(LVD) EN 62368-1:2020+A11:2020
Environment	
Operation temperature	Ta: -30 OC ~ +55 OC
IP rating	IP20

 Mechanical Structures and Installations

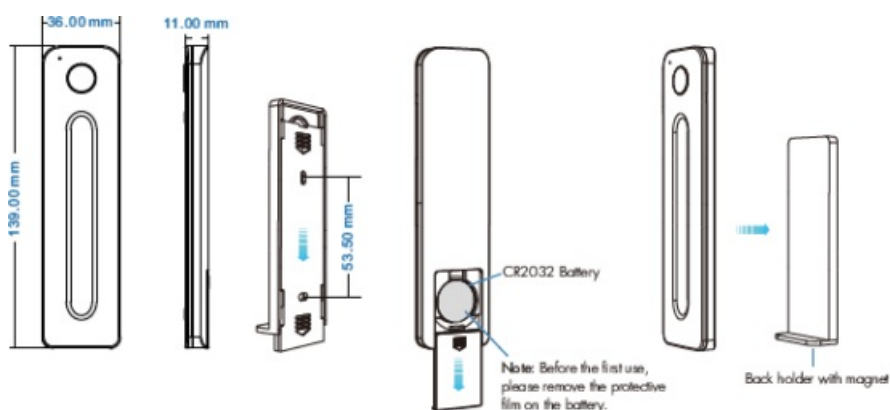

To fix the remote, three options are offered for selection:

Option 1: stuck the remote on any metal surfaces directly.

Option 2: fix the remote' back holder on the wall with two screws.

Option 3: adhere the remote' back holder to the wall with paster.

Match Remote Control (two match ways)

Use the controller's Match key

Match:

Short press match key, immediately press on/off key on the remote. The LED indicator fast flash a few times

means match is successful.

Use Power Restart

Match:

Switch off the power, then switch on power, repeat again. Immediately short press on/off key 3 times on the remote. The light blinks 3 times means match is successful.

 
Delete:

Switch off the power, then switch on power, repeat again. Immediately short press on/off key 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.

Delete:

Press and hold match key for 5s to delete all match, The LED indicator fast flash a few times means all matched remotes were deleted. End user can choose the suitable match/delete ways. Two options are offered for selection:

Key function

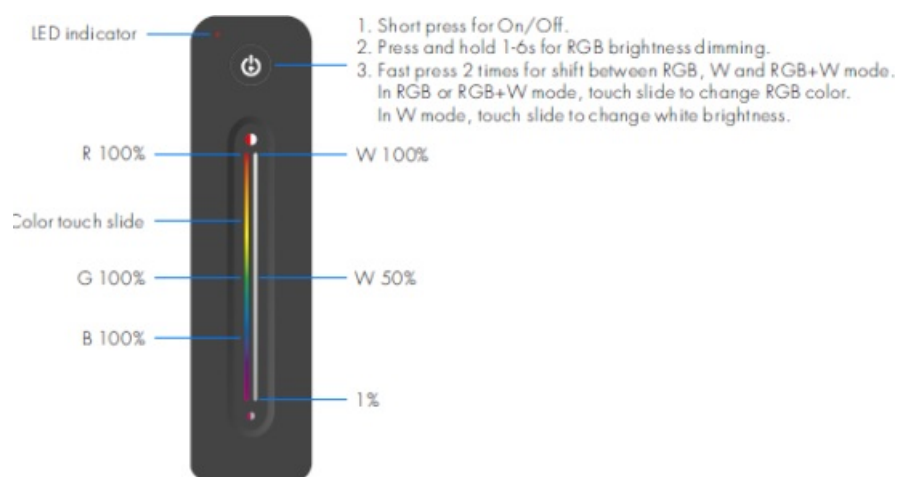

Safety information

1. Read all instructions carefully before you begin this installation.
2. When installing battery, pay attention to the battery positive and negative polarity.
A long time without the remote control, remove the battery. When remote distance becomes smaller and insensitive, replace the battery.
3. If no response from the receiver, please re-match the remote.
4. Gently handle remote, beware of falling.
5. For indoor and dry location use only.

User Manual Ver 1.0.4

R14 Ultrathin Touch Slide RF Remote Controller
Page 2

Documents / Resources



[SKYDANCE R14 Ultrathin Touch Slide RF Remote Controller](#) [pdf] User Manual
R14, Ultrathin Touch Slide RF Remote Controller