



Skyhawk Hub, Gateway User Guide

[Home](#) » [Skyhawk](#) » Skyhawk Hub, Gateway User Guide 



Contents

- [1 Hub, Gateway](#)
- [2 Device Overview](#)
- [3 Device Status Lights](#)
- [4 Activate Hub](#)
- [5 Start-Up Operation](#)
- [6 Shutdown Operation](#)
- [7 Battery Replacement](#)
- [8 FCC Information](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

Hub, Gateway



ATTENTION

Please setup and register this device **FIRST!**


In order to receive alerts, the Skyhawk Hub must be used in conjunction with a Skyhawk Sensor (sold separately) and the Skyhawk CE smartphone app.

See the specific Skyhawk Sensor user's manual for additional information on connecting your devices.

Need to download the Skyhawk **CE App**?



Device Overview

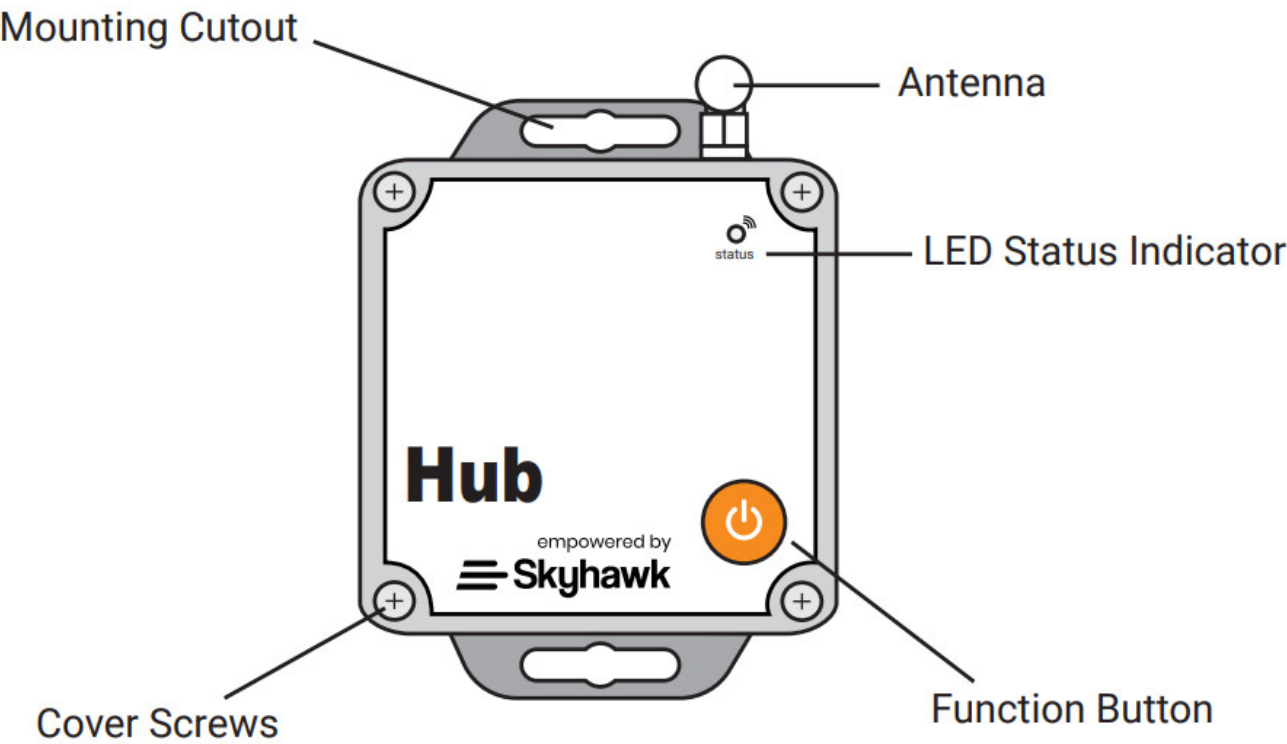

Device Status Lights

Powering Up	<div><div></div><div></div><div></div><div></div><div></div></div> (30 Sec.)
Powering Down	<div><div></div><div></div><div></div><div></div><div></div></div> (30 Sec.)
RF Event Trigger	<div><div></div><div></div></div>
Device Reset	<div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div> (30 Sec.)
Firmware update	<div><div></div><div></div></div> (until complete)
*Success Indicator, Solid LED	<div><div></div></div> (5 Sec.)
*Failure Indicator, Solid LED	<div><div></div></div> (5 Sec.)

Blink

Rapid Flashing


P

 Pause


While unit is ON and not being triggered the status LED will flash every 5 seconds:

Last transmission was successful	<div><div></div></div> (Rapid flash once)
Last transmission failed	<div><div></div></div> (Rapid flash once)
Unit currently paused	<div><div></div></div> (Rapid flash once)

Activate Hub

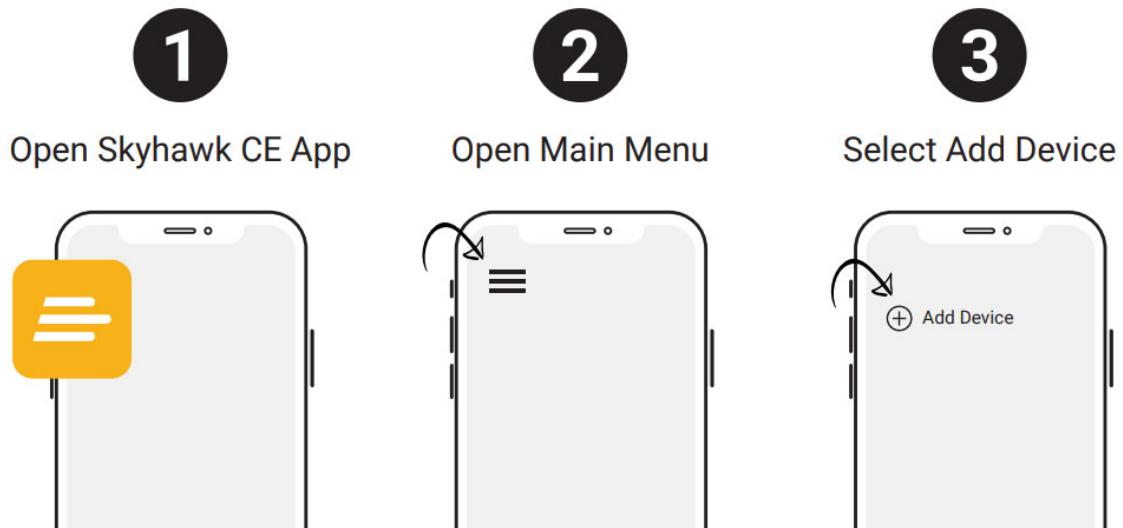


Scan the unique QR code located on the back of the device and follow all in-app instructions to finish activating your Hub.

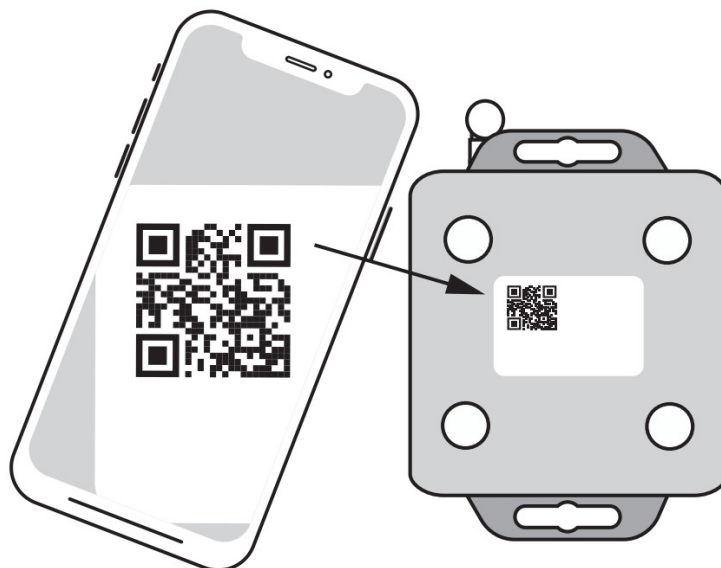

<https://sky-hawk.com>


NOTE: QR code and serial number can also be found on the original packaging.

Start-Up Operation

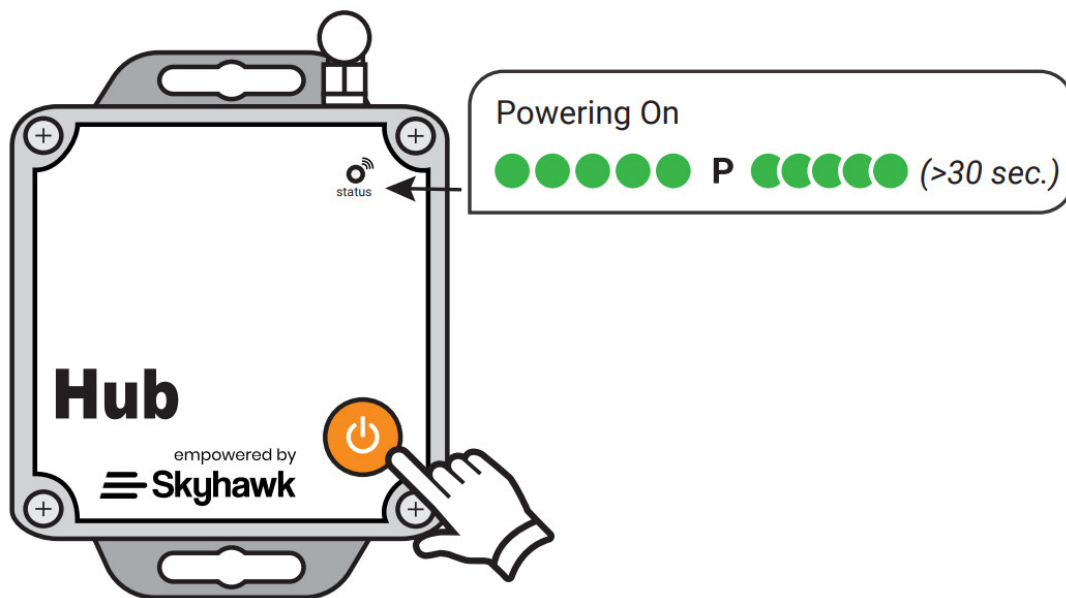



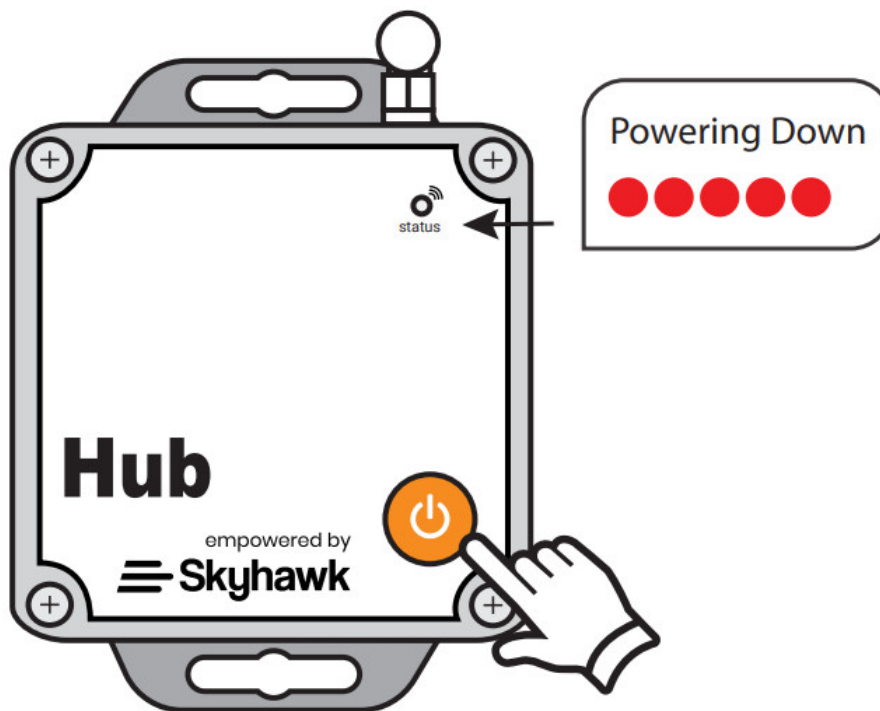

1. Power ON the Hub by pressing and holding the function button; release when the GREEN status LED starts blinking.
2. Upon successful completion of the power ON process an alert will be sent to the Skyhawk CE application.

Shutdown Operation




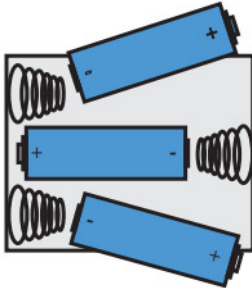
1. Power OFF the Hub by pressing and holding the function button; release when the RED status LED starts blinking.
2. Upon successful completion of the power OFF process an alert will be sent to the Skyhawk CE application.



Resetting Hub (Factory Default Setting)

1	Press & Hold Function Button	
2	Keep Holding Function Button	 <p>status</p> <p>Press and hold button until LED sequence changes to rapid blinking red</p>
3	Release Function Button	 <p>status</p>
4	Startup Operation Begins	 <p>status</p>

Battery Replacement

IMPORTANT: Always replace batteries with 3 new and identical name-brand AA lithium batteries.

1	Unscrew/Open Hub Case	
2	Remove Batteries	

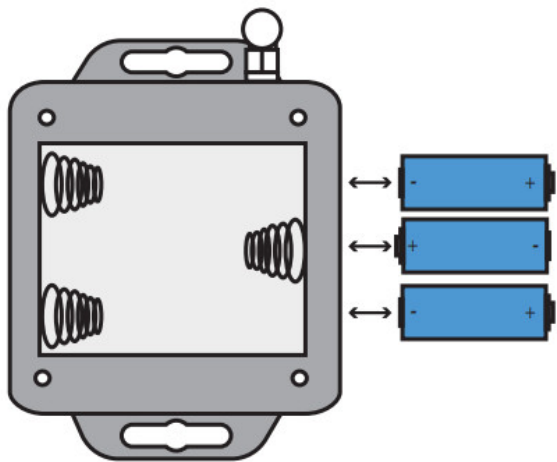3	Insert New Batteries (Following +/- symbols)	
4	Close Case > Startup Sequence Begins	

(Refer to hardware manual for detailed instructions)

Product Support & Manuals

For product support and to download detailed user and product manuals: support.sky-hawk.com

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

empowered by



App Store and the Apple logo are trademarks of Apple Inc.

Google Play and the Google Play logo are trademarks of Google LLC.

Skyhawk™, No Wi-Fi. No Power. No Problem.™, Skyhawk CE™ and Skyhawk Logo are trademarks of PICA Product Development, LLC, dba Skyhawk. ©2021 All rights reserved.

Rev A1 – 7/21

Documents / Resources

	Skyhawk Hub, Gateway [pdf] User Guide Hub Gateway, Hub, Gateway
---	--

References

-  support.sky-hawk.com