



## SKYLAB F206 Real time tracking| Remote Training Collar Tracer User Manual

[Home](#) » [SKYLAB](#) » SKYLAB F206 Real time tracking| Remote Training Collar Tracer User Manual 



F206 Real time tracking  
Remote Training Collar  
Tracer User Manual

### Contents

- [1 F206 Real time tracking| Remote Training Collar Tracer](#)
- [2 Revision History](#)
- [3 Product Introduction](#)
- [4 Functional Characteristics](#)
- [5 Product Parameter](#)
- [6 LED Indicator Definition](#)
- [7 Device Start up](#)
- [8 APP and SMS instructions](#)
- [9 Download phone APP](#)
- [10 Log in by website and phone APP](#)
- [11 Faults & The solutions](#)
- [12 Cautions](#)
- [13 Contact information](#)
- [14 Documents / Resources](#)
  - [14.1 References](#)
- [15 Related Posts](#)

## F206 Real time tracking| Remote Training Collar Tracer

### Document information

Title	F207 Real-time tracking   Remote Training Collar Tracer
Document type	User manual
Document number	SL-22050244
Revision and date	V1.01
Disclosure restriction	Public

### Revision History

Version	Description	Make	Date
V1.01	Initial version	Wilson	20220517

### Product list

NO.	product name	Amount	Remark
1	GPS tracker	1	
2	Charging cable	1	
3	Screwdriver	1	
4	Pedestal	1	
5	Charger	1	
6	Operation instruction	1	
7	Warranty card	1	
8	Conformity certificate	1	

SKYLAB reserves all rights to this document and the information contained herein. Products, names, logos and designs described herein may in whole or in part be subject to intellectual property rights.

Reproduction, use, modification or disclosure to third parties of this document or any part thereof without the express permission of SKYLAB is strictly prohibited.

The information contained herein is provided “as is” and SKYLAB assumes no liability for the use of the information. No warranty, either express or implied, is given, including but not limited, with respect to the accuracy, correctness, reliability and fitness for a particular purpose of the information. This document may be revised by SKYLAB at any time. For most recent documents, visit [www.skylab.com.cn](http://www.skylab.com.cn).

Copyright © 2022, Skylab M&C Technology Co., Ltd.

SKYLAB® is a registered trademark of Skylab M&C Technology Co., Ltd in China

### Product Introduction



Figure 1 F206 Product picture

This product is based on LTE / GPRS network and GPS satellite positioning system. It is the most technologically advanced dual positioning of GPS and AGPS. IPX-68 waterproof professional is designed for individuals and hound. A new pet tracker and activity state 4G GPS locator for pets.

### Functional Characteristics

- Real-time tracking / AGPS assisted positioning;
- Upload methods: timing, real-time mode;
- Vibration dog training in multiple modes, and its own speaker;
- Virtual fence / history track playback / displacement / low power alarm etc., alarm data upload to cloud background;
- Real-time health oversee (sleep, step counting);
- LED indicator: charging, GPS, communication, dog training status;
- Magnetic charging, safe, waterproof and anti-static

### Product Parameter

Product name	4G Pet Dog training GPS Tracker
Model	F206

Suitable Object	Dog and other medium or large-sized animals
Support the spectrum (Asia/Overseas optional)	FDD-LTE:B1 B2 B3 B4 B5 B7 B8 B12(17) B20 B28 TDD-LTE:B38 B39 B40 B41 WCDMA:B1 B2 B5 B8 GSM:850/900/1800M/1900
Network	GSWGPRS/LTE
Battery	Polymer lithium battery
Start-up time	Cold start 35s-80s
Hot start 1s	
LTE Module GPS accuracy	10m
CPU: SC9820E	
GPS sensitivity	-159dBm
Operating temperature	-20E-70t
Operating humidity	5%-95% Noncondensing
Storage temperature	-40t —75t
Power Charge	Magnetic suction 5 v / 1
SIM card	Nona card, self-elastic insert card
Dimension	70'39.5-17mm
Weight	65g

## LED Indicator Definition

Red Indicator Power charge and Find dog

Status of indicator	Meaning
Flash	Normal working
Not bright	Standby or fault

Green indicator – GSM/LTE signal indicator

Status of indicator	Meaning
Continuously in bright status	Communication initialization
Flash	Communication is normal
Not bright	Standby or fault

Blue light -GPS signal indicator

Status of indicator	Meaning
Continuously in bright status	Searching for GPS signals
Flash	GPS signal is normal
Not bright	Standby or fault

**Note:** When the device is in power-saving sleep mode, the device will be shut down after 5 minutes (configurable) if there is no operation indicator.

## Device Start up

1. Open the USB plug by hand and insert a 4G SIM card with the chip facing down.



2. After holding down the power button for three seconds, the device will start up.
3. Set admin number, by sending a SMS command to the SIM card inside device. For example:  
admin123456 86132\*\*\*\*\* (86132\*\*\*\*\*should be your phone number).

## Note

1. Charge the battery for 8-12 hours on the first time. Please use the charger and battery that are configured by the manufacturer. The standard configuration battery is a lithium battery.
2. The battery of this product is a lithium battery that contains harmful chemical components and may explode. Please do not force it, puncture it and put it into fire.
3. Please charge in time to keep the equipment working properly.

## APP and SMS instructions

Function	Descriptions	APP support	SMS support	Command Format
Master number	Set the mobile phone number for receiving alarms	YES	YES	admin123456 cell-phone number
Frequency of upload	Set the frequency of uploading device location and other information(Unit: second)	YES	YES	Upload123456 frequency
Time zone	Setting the Device Time Zone	YES	YES	Timezone123456, time zone
Sensitive ness to shock	Set vibration sensitivity of equipment	YES	YES	vibxyz123456, 3,5,5,5
Power saving mode	In power-saving mode, vibration cannot wake up the device, GPS is off, SMS phone keys can wake up the device for 5 minutes	YES	YES	sleep123456 time
Vibration of dormancy	In vibration mode, the vibration can wake up the device to work for 5 minutes. If the vibration continues, the device will work continuously	NO	YES	sleep123456 shock
Monitor	You can use your mobile phone to monitor the sound around the device	YES	YES	jt
Electronic fence	Electronic fence can be edited through the web page or APR Warning messages will be sent when the device enters or exceeds the electronic fence	YES	NO	
Low battery alarm	If the built-in battery is less than 3.7V, the device will report a low power alarm	YES	YES	LOW,1 )1/LOW,0 X
Time to upload	The device periodically uploads location and other information at a set frequency.(Unit: second)	YES	YES	upload123456 .3600
Call the roll	Send the roll call message, the device from the sleep state into the working state, work for 5 minutes, upload location information	YES	YES	d123456

Dormancy online	When the device is sleeping, keep the network connected to ensure that the APP can send commands	N O	Y E S	gprson123456,1
Dormancy offline	When the device is sleeping, close the network connection and app cannot send instructions	N O	Y E S	gprson123456,0
To change the domain name, IP	Example Change the domain name or IP address	N O	Y E S	szcs,123456,domain= a.zg666gps.com:7700
Language settings	Modify the text reply language	N O	Y E S	lagl(English)lag2(Chinese)
APN settings	Example Set the APN of the device	N O	Y E S	apn123456, Access Point ; apn123456, Access Point, User name ; apn123456, Access Point , User name, Password.
Factory reset	Restore the factory Settings of the device	Y E S	Y E S	format
Remote restart	Restarting the device	Y E S	Y E S	RST
Parameter Query 1	View software version number, device ID, domain name, APN, network signal, defense status, vibration sensitivity	N O	Y E S	param 1
Parameter Query 2	Check the main control number, SOS number, and defense parameters	N O	Y E S	param2
Query status	Check battery, network, GPS status, etc	N O	Y E S	status
Do Not Disturb	Set the do not disturb period, during which the device enters the flight mode	Y E S	N O	
Turn off do not disturb mode	Cancel the Do not Disturb function	Y E S	N O	
Step down the switch	This feature is not currently implemented	Y E S	N O	

Weak vibration	When the command is issued, the equipment will vibrate 10 times, and the vibration intensity is weak	Y E S	N O	
Moderate vibration	Send the command, the equipment will vibrate 10 times, vibration intensity	Y E S	N O	
strong vibration	Send the command, the equipment will vibrate 10 times, vibration intensity is strong	Y E S	N O	
Voice	When the command is issued, the device will beep for 10 consecutive seconds	Y E S	N O	
Finding indicator light	When the command is issued, the red light of the device blinks continuously	Y E S	N O	
Language play	The voice in the APP will be delivered to the device to play	Y E S	N O	
Upgrade instructions	Check whether the software has a new version. If yes, the software is automatically upgraded	N O	Y E S	checkUp date

### Download phone APP




<https://appdownload.org/lhyk/>

1. Android mobile phone: Scan above QR to download;
2. ios: search "LKGPS2" in the app store or Google play store to download.

### Log in by website and phone APP




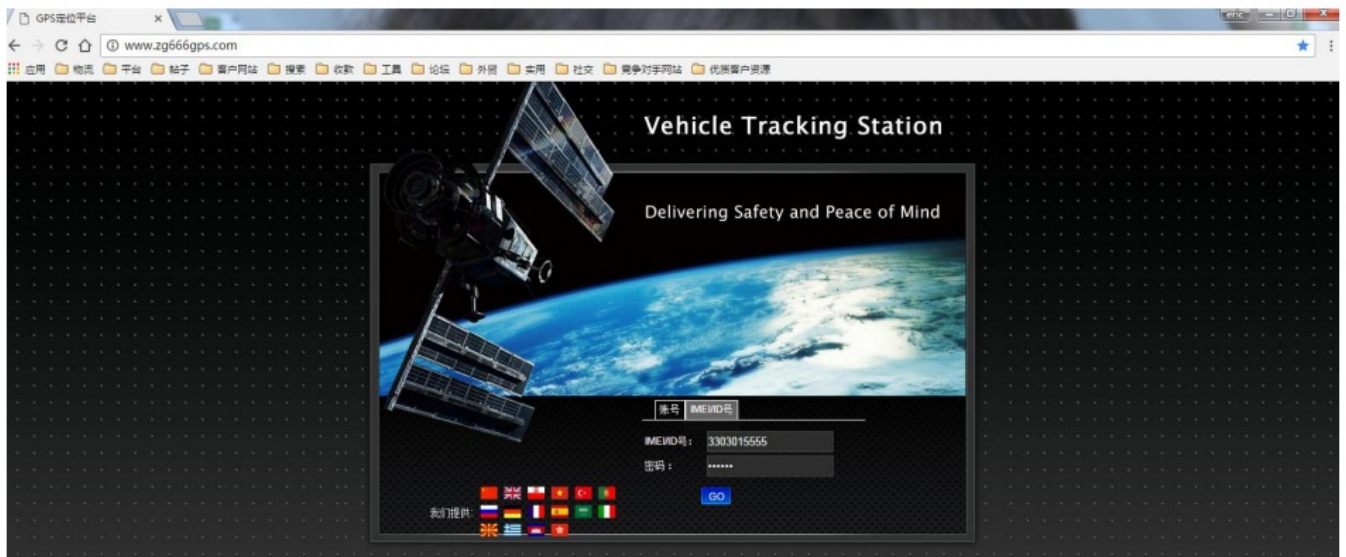

		<p>LKGPS2</p> 
<p><a href="http://weixin.qq.com/r/5XX54XPEKS5WrTeC9yD3">http://weixin.qq.com/r/5XX54XPEKS5WrTeC9yD3</a></p>	<p><a href="http://weixin.qq.com/r/KExpcQLE3V_i rUYs9xk6">http://weixin.qq.com/r/KExpcQLE3V_i rUYs9xk6</a></p>	<p><a href="https://appdownload.org/lhyk/">https://appdownload.org/lhyk/</a></p>

<p>GPS</p> 	<p>APP</p> 
<p><a href="http://i.eqxiu.com/s/5y9z6Uvu">http://i.eqxiu.com/s/5y9z6Uvu</a></p>	<p><a href="http://www.zg666gps.com/download.htm">http://www.zg666gps.com/download.htm</a></p>

Type [www.zg666gps.com/www.lkgps.net](http://www.zg666gps.com/www.lkgps.net) in the browser address bar, click the enter key.  
 Select IMEI, enter 10 digits of device ID, and the default password is 123456. Click GO to log in.

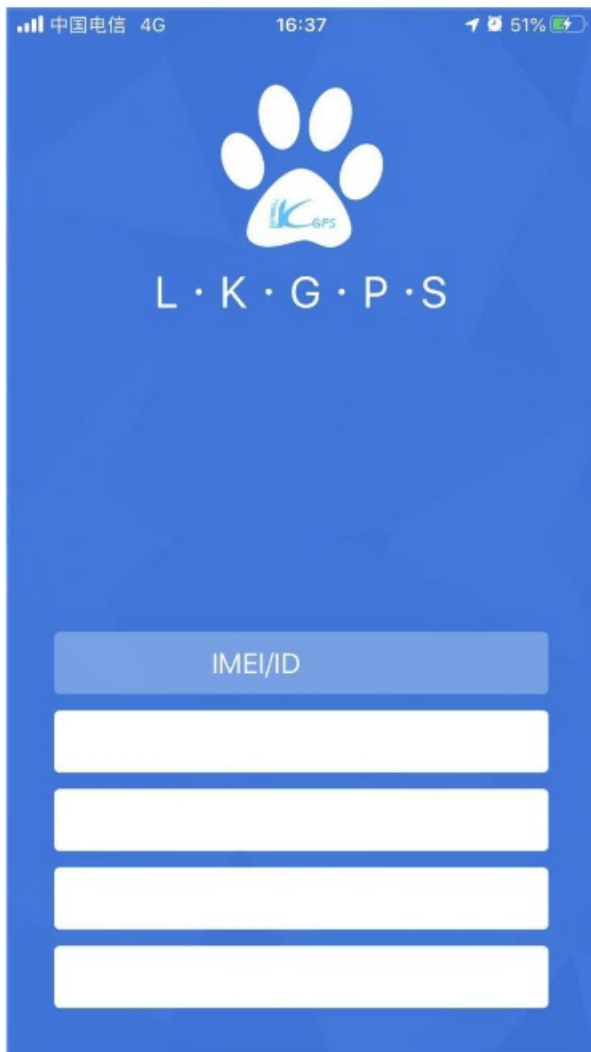

### 8.1 Log in by Phone APP

Please refer to the picture below Select “IMEI / ID login” for the first login, select “666” for the first column of address, input 10 digits on the device barcode, and the default password is 123456, Click “log in” to log in. After logging in, set up and improve the user information, you can use other login methods.

**Note:**

1. The optional items in the address column of the first column: select “666” for domestic users and “lkgps” for foreign users;
2. Error “wrong user name or password” appears in the address bar, unable to log in normally.



**8.2 App App usage introduction** The settings include: reminder settings (mobile phone sound and vibration settings), password modification, skin replacement, instructions for use (multi version instructions), log out of the current login.

More settings include: command issuing (instruction 1, instruction 2, instruction 3, instruction 4, instruction 5, instruction 6, instruction 7, instruction 8, instruction 9) Electronic fence, equipment information (equipment name, equipment number, expiration time, equipment model, equipment SIM card number, type, gender, weight, age, birthday, owner name, owner phone number, icon), product description, equipment message.

Instruction: instruction 1, instruction 2, instruction 3, instruction 4, instruction 5, instruction 6, instruction 7, instruction 8, instruction 9.

**Health:** step counting, sleep

**Note:** If you need to use a multi machine version of the advanced account, please contact the equipment manufacturer. You can use it after opening the exclusive account. The software operation interface is slightly different.

### 8.2.1 Dog training function

#### Instruction set



**Operation interface**



**Send command**



**Long press rename instruction name**

### Command setting(edit command name from APP)

Default instruction name	Command function	Vibration mode
Command 1	Weak vibration 0.5 s	One Vibration for 0.5s
Command 2	Weak vibration for 10s	Interval Vibration. 0.5s every time. 20times, for 10s
Command 3	Moderate vibration for 0.8s	One Vibration for 0.8s
Command 4	Medium vibration for 0.8s	Interval vibration. 0.8s every time. 13 times for 10s
Command 5	Strong vibration for 2s	One Vibration for 2s
Command 6	Interval vibration For 10s	Interval Vibration, 1.25s every time. 9 times for 10s
Command 7	"Ticking" for 0.5s	One ticking for 0.5s
Command 8	"Ticking" for 10s	Interval ticking. 0.5s every time. 20 times for 10s
Command 9	On: Light flashes	Off: Light turns off

### 8.2.2 How to use health Overseer interface



## Faults & The solutions

### Q Start up Fail?

– A Please fully charge the device before turning it on.

### Q The device can not obtain location information?

– A Please place the device in an open area for testing. There is no GPS signal in the room.

### Q How to choose SIM card?

– A The SIM card must support LTE&GSM&GPRS network, please make sure the balance in the card is sufficient and there is enough traffic.

### Q: Whether the equipment can be used overseas?

– A Overseas customers need to set the APN before normal use. Edit the SHORT message APN123456 CMNET and send it to the SIM card of the device. Cmnet is the APN of the mainland carrier.

## Cautions

Please be sure to follow the instructions when using:

1. Keep the device in a dry environment. The internal circuit may be damaged in a damp environment.
2. Please do not place it in too hot or cold places..
3. Please do not shake the equipment violently during use.
4. If soiled, clean up with a dry cloth. Do not use chemicals or cleaners.
5. Please do not paint the equipment, this may cause internal circuit failure.
6. Do not disassemble or disassemble equipment.


## Contact information

**Skylab M&C Technology Co.,Ltd.**

Address: 6 Floor, No.9 Building, Lijincheng Scientific & Technical park, Gongye East Road,  
Longhua District, Shenzhen, Guangdong, China  
Phone: 86-75583408210 Sales Support  
Phone: 86-75583408510 Technical Support  
Fax: 86-755-83408560  
E-mail: [technicalsupport@skylab.com.cn](mailto:technicalsupport@skylab.com.cn)  
Website: [www.skylab.com.cn](http://www.skylab.com.cn)[www.skylabmodule.com](http://www.skylabmodule.com)

**F206-UM-005,A/1**

**Documents / Resources**

	<p><a href="#">SKYLAB F206 Real time tracking  Remote Training Collar Tracer</a> [pdf] User Manual F206 Real time tracking Remote Training Collar Tracer, F206, Real time tracking Remote Traini ng Collar Tracer, Remote Training Collar Tracer, Training Collar Tracer, Collar Tracer, Tracer</p>
---	---

**References**

- [GPS](#) [WiFi](#)