



# Skylight Frame Plus 10 Inch Color Digital Photo Frame User Guide

[Home](#) » Skylight Frame Plus 10 Inch Color Digital Photo Frame User Guide 

## Skylight PLUS

Skylight Frame Start Guide

### Contents

- [1 Contents of the Box](#)
- [2 Set Up](#)
- [3 Turn On](#)
- [4 WiFi](#)
- [5 Activate](#)
- [6 Share](#)
- [7 Skylight PLUS](#)
- [8 Settings](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)

### Contents of the Box

- Skylight Frame
- Plastic support stand
- Power adapter and cable

### Set Up

**Support stand:** Locate the hole in the lower-right corner of the back of your Skylight, and screw in your plastic support stand.

OR

**Mount Skylight:** Find the wall mount hole in the uppermiddle of the back of the frame to mount your Skylight on the wall.

## Turn On

### 1. **Connect the power adapter:**

- a The rectangular USB end of the cord connects to the USB port on the charging cube.
- b The round end of the cord plugs into the power port on the back of your Skylight (it is the bottom port to the side).

### 2. **Connect the adapter to an outlet:** In approximately 30 seconds, your Skylight home screen will appear.



## WiFi

1. **Select your network:** A list of available WiFi networks will appear on the right side of the screen. Tap to choose your network from the list. Swipe up if the list is long. If your network does not appear, wait for 30 seconds and check once more.
2. **Enter your password:** If your WiFi requires a password, a prompt will appear. Type in your password using the on-screen keyboard. Don't make any typos!

Skylight will say "WiFi Connected" once it has connected successfully.



## Activate

1. **Create your Skylight's email address:** Visit [app.ourskylight.com/register](https://app.ourskylight.com/register), and follow the instructions to create your unique Skylight email address.
2. **Retrieve your code:** Once you create your Skylight email address, our system will give you a 6-digit activation code.
3. **Enter your code:** Enter your code on your device using your Skylight's on-screen keypad. Please note that this will only happen the first time you turn your frame on and connect to WiFi.

Your frame will automatically connect to your unique Skylight email address and display it on the screen.








## Share

1. **Email photos:** Now everyone in your family can email photos (as attachments) to your Skylight email address

(e.g. mom@ourskylight.com). The subject and contents of the email don't matter – Skylight just grabs photo attachments.

2. **Enjoy photos:** About 60 seconds after photos get sent, they appear on your Skylight!



	<b>Send Photos:</b> Email photos to your unique Skylight email address, and they will appear on your frame.
	<b>Swipe:</b> When photos arrive, they'll play in a slideshow. Swipe to view additional photos.
	<b>Zoom:</b> To zoom into a photo so it fills the screen, take two fingers (e.g. your two index fingers) and pinch to zoom.
	<b>Heart Button:</b> If you love a photo, tap the Heart button in the lower-right corner of the screen, and we'll email the sender to tell them you loved it! You can also hide the Heart button by going to Settings > Advanced Features.
	<b>WiFi:</b> Skylight requires WiFi for initial setup and to receive new photos, but you can still view photos without a WiFi connection.

## Skylight PLUS

If you have purchased the Skylight Plus plan, you get access to these premium features:

- **Mobile App:** Download the Skylight app to your phone from the Apple or Google Play store.
- **Cloud Portal:** View, download & share photos using the Cloud Portal ([app.ourskylight.com](http://app.ourskylight.com)).
- **Videos:** Send videos to your Skylight via email, mobile app or Cloud Portal.
- **Captions:** Send photos with captions using the mobile app or Cloud Portal.

## Settings

**Settings:** Tap the screen to see the Settings Bar. From here you can:

- **Delete:** Remove photos from your Skylight

- **Rotate:** Rotate photos on your Skylight
- **Pause:** Pause your favorite photos
- **Gallery:** View all of your photos

**Advanced Features:** Change the slideshow speed or shuffle your photos

**How it Works:** Check your Skylight email address or reset your WiFi.

If you have any additional questions or would like to get in touch with us, please visit our User Guide at [www.skylightframe.com/support](http://www.skylightframe.com/support).

## FCC Warning

### 15.19 Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### 15.21 Information to user.


Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
  2. This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment.
  3. This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.

## Documents / Resources

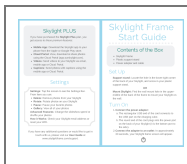

[Skylight Frame Plus 10 Inch Color Digital Photo Frame](#) [pdf] User Guide  
SKYLIGHT2, 2AABSKYLIGHT2, Frame Plus 10 Inch Color Digital Photo Frame, Frame Plus, 10 Inch Color Digital Photo Frame