



skypearll Wireless Audio Adapter User Manual

[Home](#) » [skypearll](#) » skypearll Wireless Audio Adapter User Manual 

SKYPEARLL

Wireless Audio Adapter
User Manual



Contents

- [1 Wireless Audio Adapter](#)
- [2 Instructions:](#)
- [3 Functions:](#)
- [4 Troubleshooting](#)
- [5 Launch mode display:](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

Welcome to use wireless audio adapter, this product chip has built-in enhanced signal sending circuit, fast connection, long distance, stable and continuous sound, chip built-in AEC echo and ANC elimination circuit, pure sound quality, make your use more convenient and fast. The product is easy to operate and is free to send/receive all audio.

This product allows you to make TV/CD player/ MP3/speaker/car radio or anything else that is audio on your device.

Packing Accessories:

 
Wireless Audio Adapter: 1 PCS

3.5MM audio cable: 1PCS

Neutral Instruction Manual: 1 PCS

Instructions:

Interface schematic diagram:

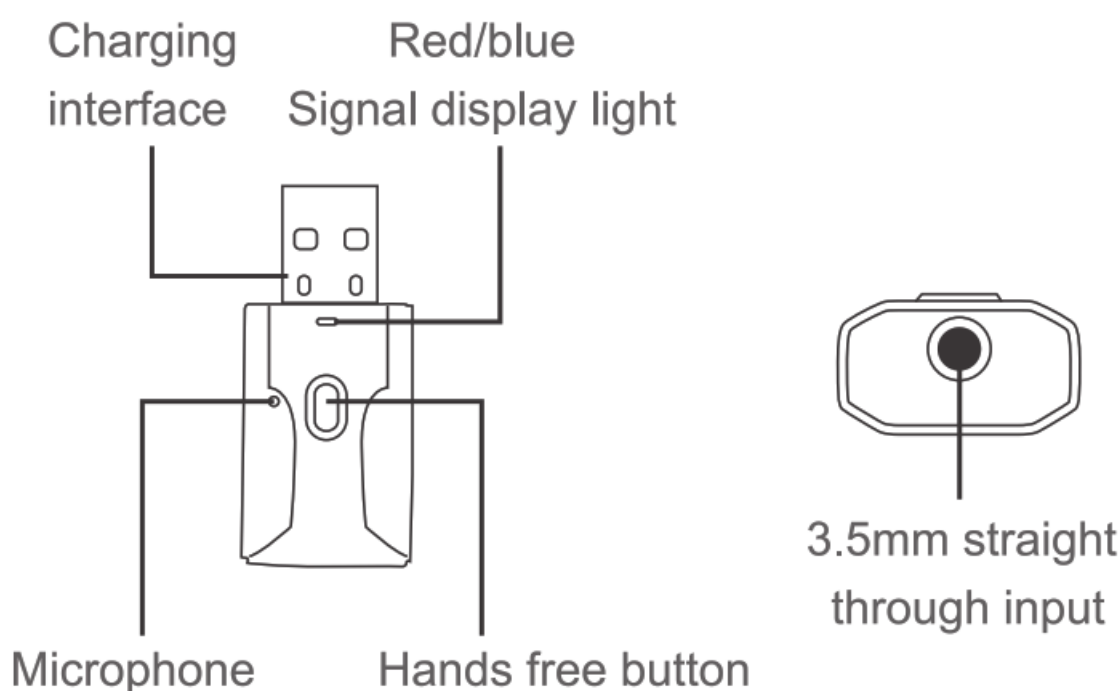

Note: Connect antenna with device before using.

Functions:

The product is powered on by default in the transmit mode, the red indicator light flashes quickly, long press the function key to switch to the receiving state, and the blue indicator light flashes rapidly.

Pairing steps:

A: Launch mode:

1. Plug the device into the USB port to supply power (such as TV, computer, mobile phone charger on the USB charging port), the device will automatically turn on, the device lights red and flashes quickly, that is, enters the wireless search state;
2. Insert the 3.5MM audio cable into the 3.5mm audio port on the device, and insert the other end of the audio cable into the audio output interface of the computer, TV, projector, mobile phone, tablet, MP3, CD player, etc. : the device's headphone output interface);

3. Turn on the audio receiving device (such as wireless headset, wireless speaker, etc.) to the pairing state, the device will be paired automatically, the pairing is successful, and the red indicator light is always on;
4. If it is not the wireless device you want to connect to, you can quickly search for the next wireless audio receiving device by briefly pressing the function button on the device.

B: Receive mode:

1. Plug the device into the USB port for power supply (5V USB interface), the device will automatically turn on, the device will light red indicator light and flash quickly, often press the function button, the indicator light will switch to blue, and flash quickly, that is, enter wireless reception. State
2. Insert the 3.5MM audio cable into the 3.5mm audio port on the device, and insert the other end of the audio cable into the AUX port of the playback device (headphone, speaker, etc.);
3. Turn on the wireless function of the mobile phone (or computer), search for the surrounding wireless devices, find a device named "wireless music adapter" in the search results, find it and match it with it. After the pairing is successful, the indicator light on the wireless receiver becomes Constantly lit state. When you have a coming call, Press the button to answer the call hands-free.

Note:

1. Different wireless devices (such as wireless headsets) will have different search connections depending on the solution and protocol used.
2. If the pairing connection fails or cannot be connected for a long time, you can shut down and re-pair the connection once.

 
Troubleshooting

When you encounter the following problems, you can try the following solutions, if there is still a problem after processing? Please contact your local dealer and do not start the repair yourself, so as not to cause unnecessary trouble!


The wireless audio adapter is not working properly?

1. Please check if the power supply of the USB port is normal? Is the power indicator on the device lit? Also try to change the power of the USB port.
2. No sound output? Please check if the 3.5MM audio cable is connected correctly?
3. If the wireless device (such as a wireless headset) is not connected, the wireless receiver can be close to some distance, or the device can be powered off and restarted once.
4. Due to the different wireless receiver chip solutions and transmission protocols, there may be problems that cannot be paired. We are constantly striving for optimization.

Launch mode display:

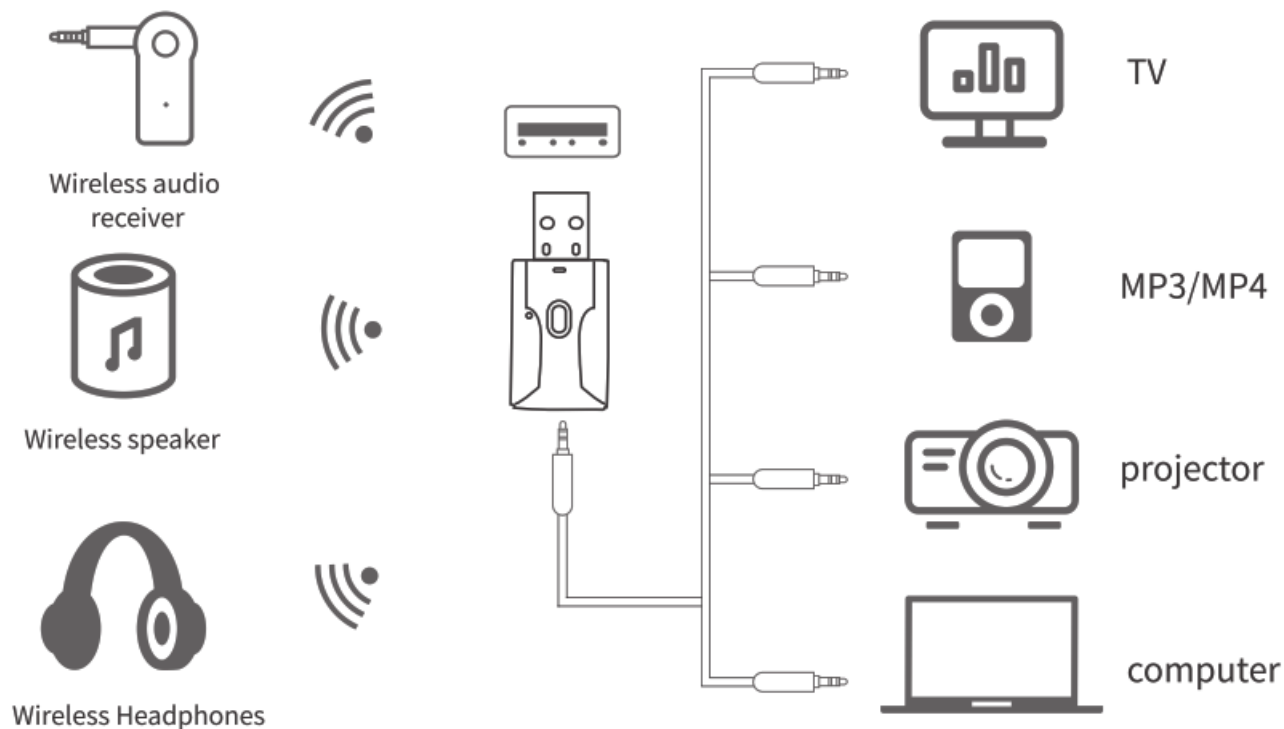


Receive mode display:

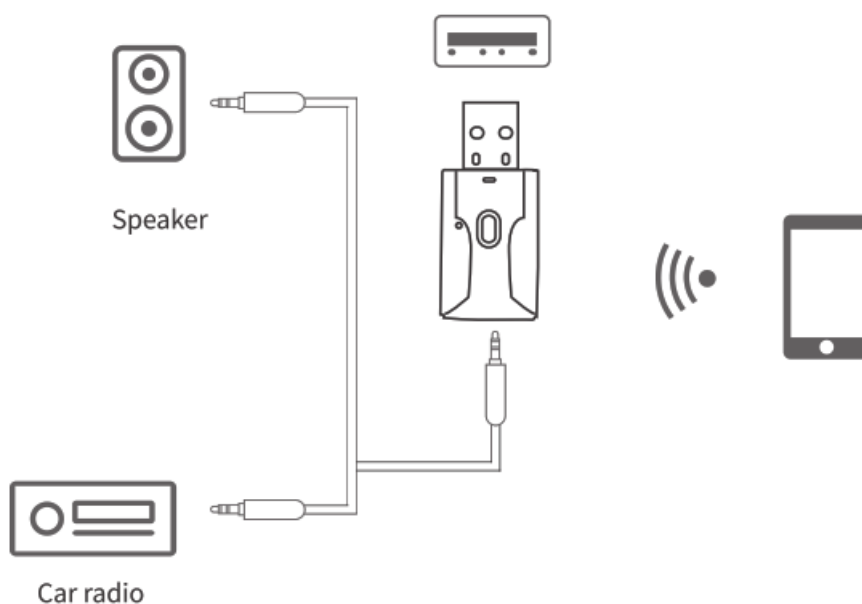 

Tips: USB wireless adapter power consumption is low, when using mobile power supply, some will automatically turn off the power, priority is to use USB charger power supply, some TV USB port power supply is insufficient, will cause the adapter can not work properly.

SKYPEarLL

 Documents / Resources

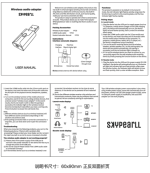

[skyppearII Wireless Audio Adapter](#) [pdf] User Manual
Wireless Audio Adapter, Wireless Adapter, Audio Adapter, Adapter