



# skytec Professional Dual USB/SD Player STC-50 User Manual

[Home](#) » [skytec](#) » skytec Professional Dual USB/SD Player STC-50 User Manual 

## skytec Professional Dual USB/SD Player STC-50 User Manual



Contents

1

Product Overview

2

Player Function

3

WARRANTY  
CONDITIONS

4

SPECIFICATIONS


5

Documents / Resources

6

Related Posts

### Product Overview

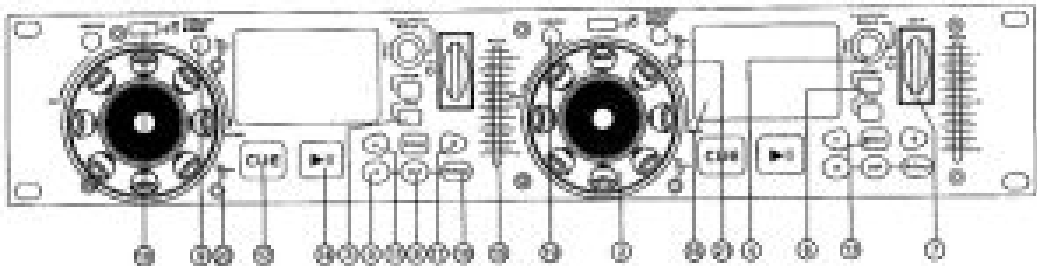

### IMPORTANT

Use of controls or adjustments or performance of procedures other than those specified herein may result in

hazardous radiation exposure.

## Player Function

### 1. POWER BUTTON

Press the power switch to turn the unit on. To switch the POWER off press the POWER switch again.

### 2. JOG & SHUTTLE WHEELS

**THE control values functions,as follows:**

**Speed control:** Rotating the wheel,in play mode,will change the playback speed according . While rotating clock wise,the player speed increase ,rotating counterclockwise the speed decrease .

**Searching:** Rotating the wheel in pause mode,the player will forward or backward to the desired point to start the searching speed change according to the dialing speed.It can be carried out by one frame increase.

### 3. TIME BUTTON

Used this knob to choose the time mode : Elapsed time, remaining time or total remaining time.

### 4. TRACK/FOLDER

Press the control to indicate the name of the folder currently select.

### 5. IN BUTTON ( LOOP SYSTEM )

This button sets the beginning of the loop. The Loop indicator on the display flashes.

### 6. CONT. / SINGLE BUTTON

Press these to switch between the SINGLE and CONTINUOUS play mode. The selected mode is indicated on the LCD. In SINGLE mode, after each track, the unit stops the reading. In CONTINUOUS mode, the unit reads all track and stops.

### 7. SD CARD SLOT

Slot for inserting SD/MMC card.The contacts of the card must point downwards.The unit cannot read cards with a capacity of more than 4GB.The unit is not compatible to SDHC cards and only supports the MP3 format.

### 8. OUT BUTTON ( LOOP BUTTON )

When you press this button, you set the end point of the seamless loop and you start the loop. To finish the loop, press again this button.

### 9. TRACK SELECT BUTTONS

Press the button to switch the function of jog dial to SEARCH and PITCH BEND and SCRATCH mode,when the indicator LED is off,dial the jog for pitch bend function. If the jog is unmoved for 8 seconds,the indicator is off and the jog is for pitch bend function. When the indicator LED is light, rotate the jog wheel you can enter the scratch mode,while the indicator LED is flash, dial the jog for quick search forward and backward.

### 10. RELOOP BUTTON ( LOOP SYSTEM )

This button is used to start the last saved loop. To finish the loop, press the reloop button.

### 11. PITCH BEND – BUTTON

The pitch will drop while the – button is pressed and return to the original pitch when it is released.

### 12. CUE BUTTON

Pressing the CUE button during play provides a return to the position at which play was started.

### 13. PITCH BUTTON

If you push this button, the adjustment of the pitch potentiometer is available.

### 14. PLAY/PAUSE BUTTON

Each time you press the PLAY/PAUSE button, the operation changes from play to pause or from pause to play.

### 15. PITCH CONTROL

Use this fader to increase or decrease the speed of the track.

#### 16. **DISPLAY LCD**

Display Indicate the Track/Numbers/Time/Remain/Pitch/Continue/Single.

#### 17. **PITCH BEND + BUTTON**

The pitch will automatically rise when the + button is pressed and return to the original pitch when it is released.

#### 18. **USB PORT**

Allows the connection of any USB memory stick.

#### 19. **USB/SD**

Selector switch USB/SD for selecting a storage media in pause or cue mode. The LCD will verify which storage media is active.


#### 20. **DSP/REVERSE**

Push the reverse button to play your track in reverse, push the reverse button again to cancel this feature.

#### 21. **DSP/BRAKE**

In play mode, push the brake button at first, and then push play/pause button, the operation changes is slowness from play to pause, push play/pause button again to cancel this feature.

#### **Connection**

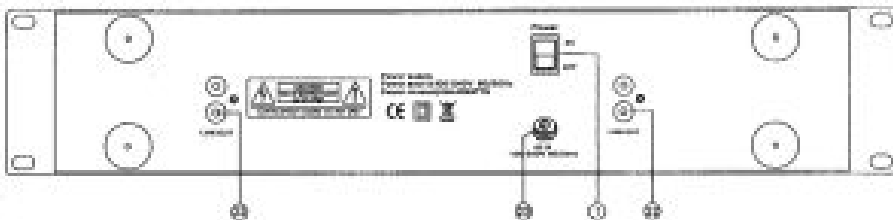

#### 22. **LINE OUT**

The audio for each SD player is output from these jacks. Connect to the line input of the mixer.

#### 23. **AC CORD**

Use this cable to connect power cord unit in AC wall outlet with the proper AC voltage.

## **WARRANTY CONDITIONS**

Skytec equipment is covered by a 1-year warranty on parts and labour except for faders (90 days). The following rules apply from the day the equipment leaves the factory:

The date on the invoice is considered to be the date the warranty begins.

Only companies approved by Skytec are allowed to work on the equipment. Warranty becomes void when other service technicians open the equipment.

During warranty period, defective equipment must be sent by pre-paid mail in the original box. Skytec will return the goods by pre-paid mail during the first year of warranty; thereafter the mailing cost is to be paid by the recipient.

Potentiometers have a limited lifetime and are not covered by the manufacturer for more than normal use.

For all service enquiries, refer to your local distributor, as he is best able to help you.

## **SPECIFICATIONS**

- **Anti-Shock Buffer Memory:** 40 seconds
- **Power supply:** —100-240V, 60/50Hz
- **Dimensions :** 482x260x122mm

Documents / Resources

	<p><a href="#">skytec Professional Dual USB/SD Player STC-50</a> [pdf] User Manual</p> <p>skytec, STC-50, Professional, Dual USB, SD, Player, STC-50</p>
---	--