

SKYZONE Steadyview X FPV Goggles Screen Receiver User Manual

Contents

1 5G

1.1 Steady View X USER MANUAL

1.1.1 Specification

1.1.2 BAND/CH Table

1.1.3 Package include

1.1.4 IO Port

1.1.4.1 Introduction

1.1.5 Quick Start

1.1.5.1 BAND/CH setting

1.1.5.2 Auto Search

1.1.5.3 Receiver Mode

1.1.5.4 Antenna Select

1.1.5.5 Stabilize Time

1.1.5.6 OSD Mode

1.1.5.7 MENU Style

1.1.5.8 Calibration

1.1.5.9 ELRS

1.1.5.10 Update Firmware

2 Documents / Resources


2.1 References

3 Related Posts

5G



Steady View X
USER MANUAL

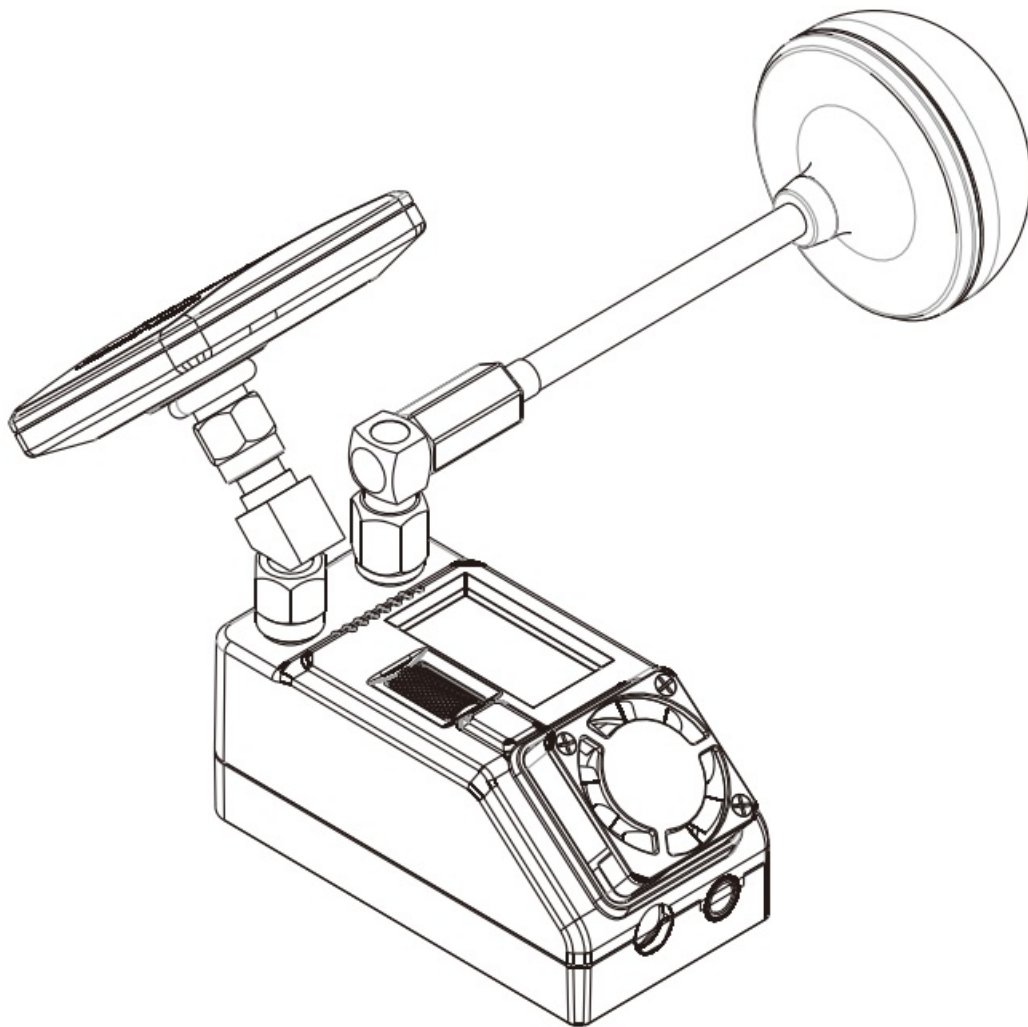



V1.1 20240607

Specification

Package include

1. SteadyView X Receiver*1
2. Patch Antenna 5.0G *1
3. Omni Antenna 4.9G *1
4. SKYZONE SKY04X Module Cover*1
5. FATSHARK Module Cover*1
6. XT60-DC Cable 5.5*2.1 *1
7. 3.5mm Video Cable*1 1.2m
8. USB-C Cable*1
9. User Manual*1

IO Port

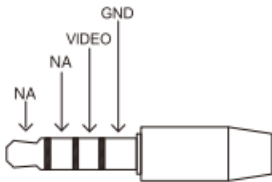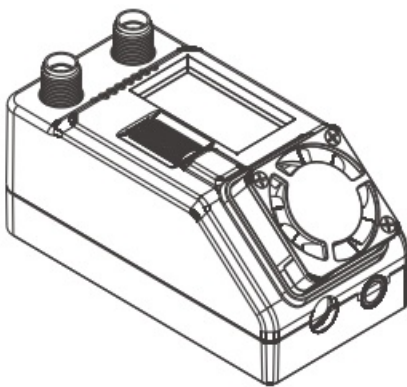

3.5mm Video port Pin out

Introduction

Steadyview X receiver is high performance receiver, unlike traditional diversity receiver, the Steadyview X have unique fusion technology and low band Filter hardware, also unique image reconstruction algorithm, the receiver merge two signals to one, avoid image tearing and rolling, make image more stable and clear in challenging condition. The receiver come with ground station kit and 3 module bay cover, use can use the receiver on SKYZONE 04 series or fatshark goggles, also on SKYZONE Cobra goggles, user can use the receiver on any goggles or monitors which have AV INPUT port.

Quick Start

BAND/CH setting

1. In preview mode, press the wheel to enable OH setting, roll the wheel to change Channel, press the wheel again to enable BAND setting, roll the wheel the change the BAND.
2. No movement for 3 seconds, the receiver will back to preview mode.
3. The front with switch from big front and small front in preview mode.

Auto Search

1. Hold the wheel to pop out search menu, press the wheel to enable search, the receiver will start search, after search, the receiver will change to strongest RSSI CH.
2. After search, the screen will show all rssi bar, use can roll the wheel to manually adjust the CH.
3. Press the wheel during the search to quit search.

Sometime the auto search is not accurate, user need manually adjust the CH.

Receiver Mode

Some camera on market didn't follow standard NTSC/PAI signal, cause the receiver confusing inM ix mode, It will cause image getting dark, color distortion, rolling image, user can switch to diversitymode to solve this issue. user can use these mode to get solve these issue.

2. Mix1 :this is basic mix mode, this mode provides basic fusion processing to reduce excessive interference of the circuit on the image.
3. Mix2 : this mode i improves synchronization stability, especially in weak signals to maximize synchronization and lock video.
4. Mix3: Enhance the synchronization signal on the basis of Mix2, maximize the stability of the video and maximize the compatibility with camera. In this mode, The brightness of the signal will be reduced
5. Mix Off: the receiver will turn off the MIX feature, the receiver will work in traditional diversity mode receiver or signal. receiver mode.

Antenna Select

In this menu, user can choose Diversity, A, B.

Diversity; in this mode, the two receiver will work same time, will choose the strongest signal to output.

A,B: this mode, there is only one receiver is working to save the power.

Stabilize Time

The parameter is only valid in the MIX mode. You can set the stable time after the receiver loses the synchronization signal. The default is 8 seconds. Mix1 is recommended to be set to 5 seconds or 8 seconds. The longer the setting, the longer the stabilization time, but Since the sync signal has been lost black bars may appear on the left or right side of the video, This is because the synchronization signal generated by the receiver and the VTX transmission the video synchronization signal sent is not synchronized, and the error is getting bigger and bigger. Once the signal is restored to sufficient strength, it will be synchronized immediately. If the time is stilt not synchronized, the receiver signal loses lock and automatically works in diversity or single receiving mode.

OSD Mode

USER can choose the OSD style in the Video. the OSD is on the top left of the image.

LockIconFreq : Lock Statues, formation of signal, RSSI bar, frequency.

LockIcon : Lock Statues, formation of signal, R551 bar.

LockFreq : Lock Statues, formation of signal, frequency.

Lock: Lock statues and Formation of Video Signal

OFF: OSD Turn off the OSD in the video.

MENU Style

User can change the menu style in this mode,

Style1 : White on a blue background

Style2: Blue on a yellow background

Style3: White on a black background

Calibration

1. Calibrating the RSSI helps the receiver to work better and show the RSSI strength more accurately
2. The calibration consists of two steps, both of which must be executed correctly to complete the calibration.
3. to calibrate the low rssi: make sure the receiver and VTX are working normal and matched , turn off the VTX power, calibrate the low rssi in the menu, when is done, turn on the power of VTX, then calibrate the high R551 of receiver, when its done, user can quit the calibration menu.

ELRS

The Steadyview x have ELRS VRX backpack build in, user can synchronize the VRX and VTX with TX backpack.

1. under ELRS menu, user can choose turn on or turn off the ELRS backpack.
2. If ELRS is turn on, user need go to bind mode under ELRS menu to bind the backpack to TX backpack. need Lua Script to bind the backpack, screen will show binding success after binding is done.
3. Upgrade the firmware, user can upgrade the VRX backpack firmware with ELRS configrator, plug the receiver to PC, and select upgrade under ELRS menu, then the ELRS will go to boot mode, go to ELRS configrator choose backpack, select the VRX backpack, target is Steadyview+ELRS, then choose the correct com port and start build and flash, also user can add binding phrase if the TX backpack already have binding phrase.


Update Firmware

1. Hold the wheel when connect the receiver to the computer.
2. Computer will automatically install the driver , computer will show a new removable storage .
3. Copy the steadyview x Firmware File to the folder, receiver will installing the update at the same time. when the copying is done, the firmware update is done.



Download latest menu at www.skyzonefpv.com

Documents / Resources

 The image shows the cover of the 'SteadyView X USER MANUAL'. It features the SKYZONE logo at the top, a small illustration of the FPV goggles and screen receiver, and the text 'SteadyView X USER MANUAL'.	<p>SKYZONE Steadyview X FPV Goggles Screen Receiver [pdf] User Manual V1.1 20240607, Steadyview X FPV Goggles Screen Receiver, Steadyview X, FPV Goggles Screen Receiver, Goggles Screen Receiver, Screen Receiver, Receiver</p>
---	---

References

-  [SKYZONE FPV Goggles Official Website-Best Analog FPV Goggles – SKYZONEFPV](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.