



SLOAN B-15-A Pedal Push and Pedal Handle Push Button Instructions

[Home](#) » [SLOAN](#) » SLOAN B-15-A Pedal Push and Pedal Handle Push Button Instructions 

Contents

- [1 SLOAN B-15-A Pedal Push and Pedal Handle Push Button](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 PARTS](#)
- [5 DIMENSION](#)
- [6 Documents / Resources](#)

SLOAN®

SLOAN B-15-A Pedal Push and Pedal Handle Push Button



Product Information

The Repair Parts and Maintenance Guide contains information about repair kits and repair parts for Push, Pull, Pedal Push, and Pedal Handle Push Button. The guide provides the part number, description, and code number for each item. Some parts are available only in the kit.

Product Usage Instructions

 
The Repair Parts and Maintenance Guide provides information about repair kits and repair parts for Push, Pull, Pedal Push, and Pedal Handle Push Button. The guide helps users identify the part number, description, and code number for each item.

To use the guide:

1. Identify the product you need to repair or replace parts for.
2. Refer to the Repair Kits or Repair Parts section of the guide.
3. Find the item number, code number, and part number for the required part.
4. Consult the factory if required.
5. If the part is available only in a kit, purchase the appropriate kit.
6. Use the Repair Parts section to assemble the parts according to their item numbers and descriptions.

PARTS


3" Push Button For Exposed Royal® & Crown®

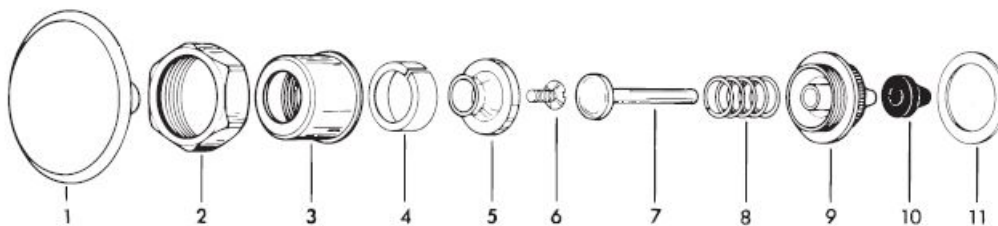

Item			
No.	Code No.	Part No.	Description
Repair Kits			
	3303396	C-64-A	Push Button Repair Kit contains item nos. 7-11
	3303347	C-1000-A	Replacement Kit contains item nos. 1,5 & 6
Repair Parts			
1-11.	0303351	C-42-A	Push Button Assembly
1.	*	C-42	3" Push Button CP
2.	0301082	A-6	CP Coupling
3-4.	0302109	B-7-A	Socket
5.	*	C-41	Shank Head
6.	*	C-43	Screw RB
7.	*	B-8-A	Plunger
8.	0303019	C-7	Spring
9.	*	B-49	Bushing
10.	5302297	B-39	Seal
11.	5301139	A-31	Gasket

*Available in kit only.

 
Push Button For Concealed Royal® & Crown®

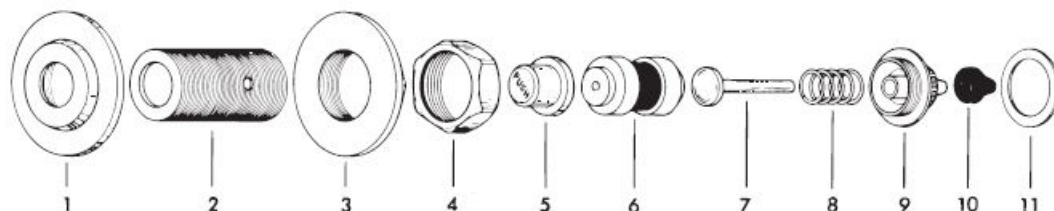

Item			
No.	Code No.	Part No.	Description
Repair Kits			
—		C-9-A	Complete Push Button Assembly. Items 1-11. Consult factory.
3303399		C-77-A	Push Button Repair Kit contains item nos. 7-11
Repair Parts			
1.	0302248 0302252	B-23 B-23	CP Wall Flange 2-3/4" O.D. CP Wall Flange 2-3/4" O.D. w/Set Screw for Wall Box Installation †
2.	—	B-6/B-6-A	In-Wall Sleeve. If required, consult factory.
3.	0302260	B-24	RB Locknut
4.	0301082PO	A-6	RB Coupling
5.	0303002	C-2	Index Push Button
6.	—	B-15-A	N/A. Multiple lengths available. Consult factory.
7.	*	B-8-A	Plunger
8.	*	C-7	Spring
9.	*	B-41	Bushing
10.	—	B-85	Permex® Seal
11.	5301139	A-31	Gasket

*Available in kit only. †Wall Box Assembly for C-43-AWB/C-9-AWB/B-12-AWB

 
3" Push Button For Concealed Royal® & Crown®

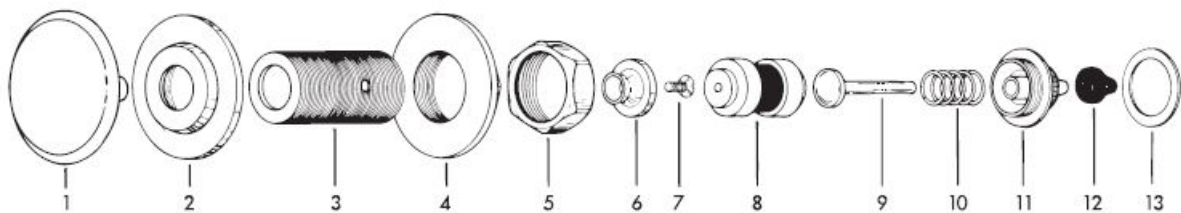

Item			
No.	Code No.	Part No.	Description
Repair Kits			
—		C-43-A	3" Push Button Assembly. Items 1-13. Consult factory.
	3303398	C-70-A	Push Button Repair Kit contains item nos. 9-13*
	3303399	C-77-A	Push Button Repair Kit contains item nos. 9-13 – Triple Seal Cone Seal*
	3303347	G-1000-A	Replacement Kit contains item nos. 1,6 & 7
Repair Parts			
1.	*	C-42	3" Push Button CP
2.	0302248	B-23	CP Wall Flange 2-3/4" O.D.
	0302252	B-23	CP Wall Flange 2-3/4" O.D. w/Set Screw for Wall Box Installation †
3.	—	B-6/B-6-A	In-Wall Sleeve. If required, consult factory.
4.	0302260	B-24	RB Locknut
5.	0301083	A-6	RB Coupling
6.	*	C-41	Shank Head
7.	*	C-43	RB Screw
8.	—	B-15-A	N/A. Multiple lengths available. Consult factory.
9.	*	B-8-A	Plunger
10.	0303019	C-7	Spring
11.	*	B-41	Bushing
12.	5302297	B-39	Seal
13.	5301139	A-31	Gasket

*Available in kit only.

 Pull Button For Exposed Royal® & Crown® (Seat Action)

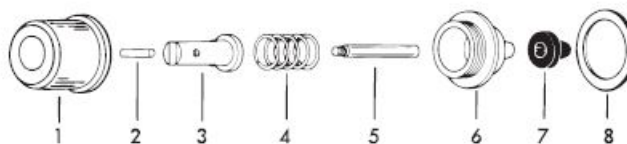


Item**No. Code No. Part No. Description****Repair Kit**

	3303393	C-61-A	Repair Kit contains item nos. 4-9
--	----------------	--------	-----------------------------------

Repair Parts

1.	0303174	C-25	Socket
2.	5303213	C-29	RB Pin
3.	0303155	C-23	CP Plunger Sleeve
4.	*	C-28	Spring
5.	*	C-24	Plunger Stem
6.	*	C-61	Bushing
7.	5302297	B-39	Seal
8.	5301139	A-31	Gasket

 
*Available in kit only.

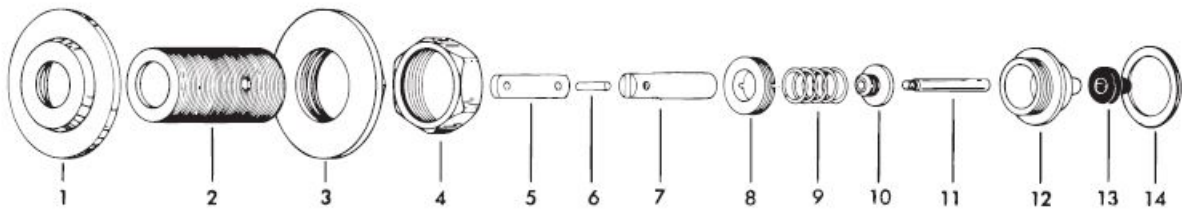Pull Button For Concealed Royal® & Crown® (Seat Action)

Item			
No.	Code No.	Part No.	Description
Repair Kit			
	3303394	C-62-A	Repair Kit contains item nos. 9-14
Repair Parts			
1.	0302248	B-23	CP Wall Flange 2-3/4" O.D.
2.	—	C-30	In-Wall Sleeve. If required, consult factory.
3.	0302260	B-24	RB Locknut
4.	0301083	A-6	RB Coupling
5.	—	C-27	Link Available in Multiple Lengths. Consult factory.
6.	5303213	C-29	RB Pin
7.	—	C-31	Sleeve Available in Multiple Lengths. Consult factory.
8.	0203013	C-48	RB Sleeve Guide
9.	*	C-28	Spring
10.	*	C-32	Plunger Head
11.	*	C-24	Plunger Stem
12.	*	C-61	Special Bushing
13.	5302297	B-39	Seal
14.	5301139	A-31	Gasket

*Available in kit only.

 Pedal Push Button For Exposed Royal® & Crown®

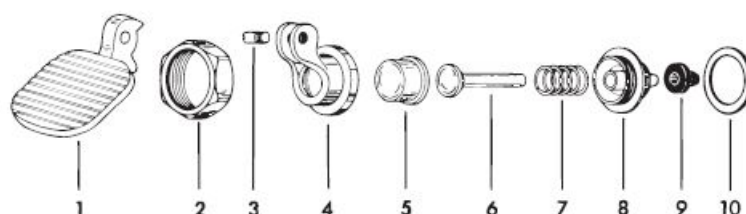

Item**No. Code No. Part No. Description****Repair Kit****3302304** B-40-A Repair Kit contains item nos. 4-10**Repair Parts**1-10. **0303289** C-33-A Pedal RB Assembly1. **0303293** C-34 CP Pedal2. **0301082** A-6 Coupling3. **5303298** C-35 CP Screw

4. * C-33 CP Socket

5. * C-37 CP Push Button

 
6. * B-8-A Plunger (Special)

7. **0303019** C-7 Spring

8. * B-49 Bushing

9. **5302297** B-39 Seal10. **5301140** A-31-P Gasket


*Available in kit only.

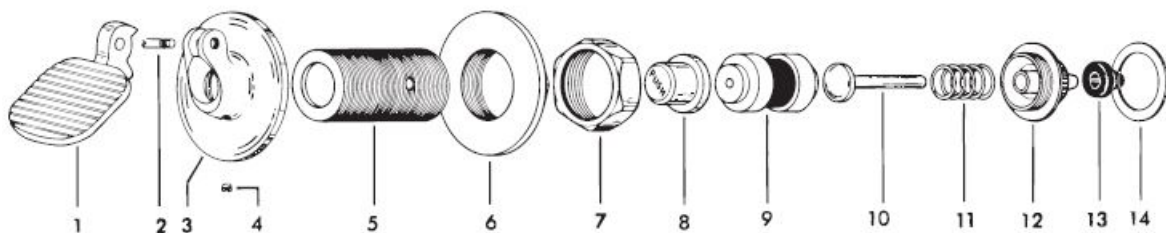Pedal Push Button For Concealed Royal® & Crown®

Item			
No.	Code No.	Part No.	Description
Repair Kit			
—		C-40-A	Complete Pedal Push Button Assembly item nos. 1-14 LDIM required
3303398		C-70-A	Push Button Repair Kit contains item nos. 10-14
3303399		C-77-A	Push Button Repair Kit contains item nos. 10-14 – Triple Seal Cone Seal
Repair Parts			
1.	0303293	C-34	CP Pedal
2.	5303298	C-35	CP Screw
3-4.	0303303	C-40	CP Flange w/Set Screw
5.	—	B-6	In-Wall Sleeve. If required, consult factory.
6.	0302260	B-24	RB Locknut
7.	0301082P0	A-6	RB Coupling
8.	0303002	C-2	Index Push Button
9.	—	B-15-A	N/A. Multiple lengths available. Consult factory.
10.	*	B-8-A	Plunger
11.	0303019	C-7	Spring
12.	*	B-41	Bushing
13.	5302297	B-39	Seal
14.	5301139	A-31	Gasket

*Available in kit only.

 
Pedal Handle Push Button For Exposed Royal® & Crown®

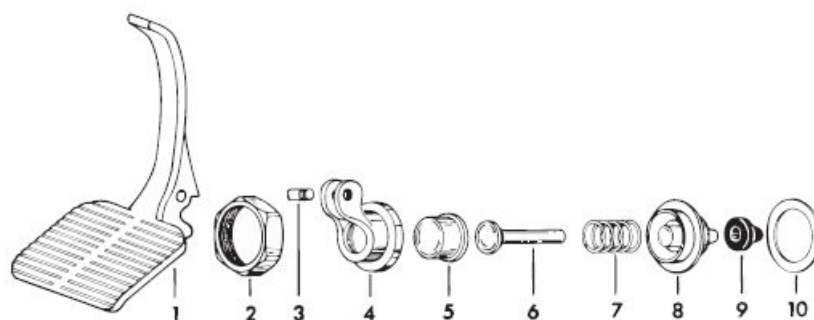

Item			
No.	Code No.	Part No.	Description
Repair Kit			
	3302304	B-40-A	Repair Kit contains item nos. 4-10
Repair Parts			
1-10.	0303290	C-33-A	Pedal Handle PB Assembly – OBSOLETE
1.	0303295	C-34	CP Pedal Handle – OBSOLETE
2.	0301082	A-6	Coupling
3.	5303298	C-35	CP Screw
4.	*	C-33	CP Socket
5.	*	C-37	CP Push Button
6.	*	B-8-A	Plunger (Special)
7.	0303019	C-7	Spring
8.	*	B-49	Bushing
9.	5302297	B-39	Seal
10.	5301140	A-31-P	Gasket

*Available in kit only.

 
Pedal Handle Push Button For Concealed Royal® & Crown®

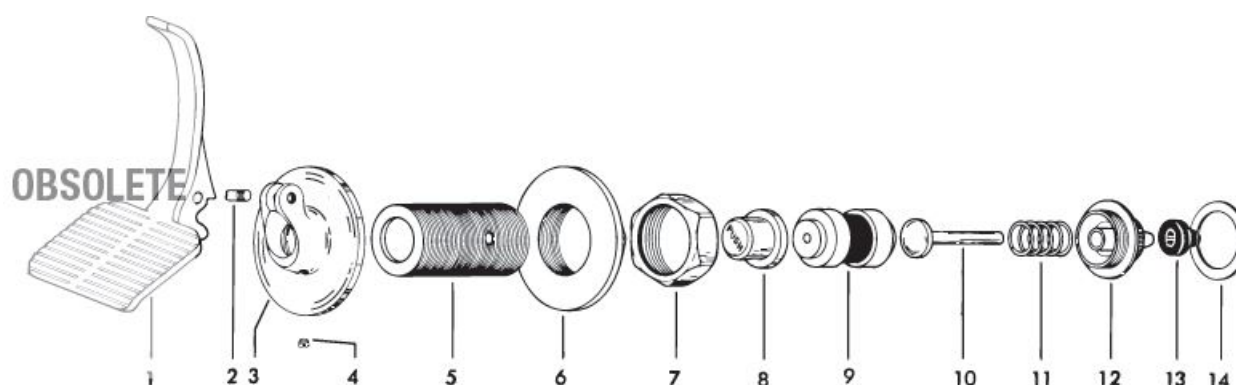

Item			
No.	Code No.	Part No.	Description
Repair Kit			
—		C-40-A	Complete Pedal Handle Push Button Assembly. Items 1-14. Consult factory – OBSOLETE
Repair Parts			
1.	0303295	C-34	CP Pedal Handle – OBSOLETE
2.	5303298	C-35	CP Screw
3-4.	0303303	C-40	CP Flange w/Set Screw
5.	—	B-6/B-6-A	In-Wall Sleeve. If required, consult factory.
6.	0302260	B-24	RB Locknut
7.	0301082PO	A-6	RB Coupling
8.	0303002	C-2	Index Push Button
9.	—	B-15	N/A. Multiple lengths available. Consult factory.
10.	*	B-8-A	Plunger
11.	0303019	C-7	Spring
12.	*	B-41	Bushing
13.	5302297	B-39	Seal
14.	5301139	A-31	Gasket

*Available in kit only.

 Handle For Concealed Royal® & Crown®

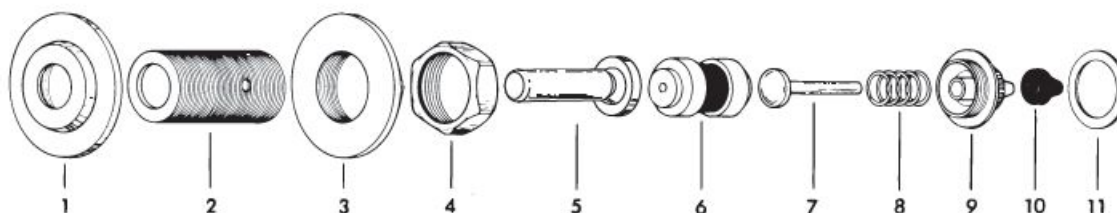


Item No.	Code No.	Part No.	Description
Repair Kit			
	3303398	C-70-A	CP ADA-Compliant Triple Seal Handle Assembly
Repair Parts			
1.	0302248	B-23	CP Wall Flange 2-3/4" O.D.
	0302252	B-23	CP Wall Flange 2-3/4" O.D. w/Set Screw for Wall Box Installation †
2.	—	B-6/B-6-A	In-Wall Sleeve. If required, consult factory.
3.	0302260	B-24	RB Locknut
4.	0301082PO	A-6	RB Coupling
5.	0302389	B-74-A	CP ADA-Compliant Handle
6.	—	B-15-A	N/A. Multiple lengths available. Consult factory.
7.	*	B-8-A	Plunger
8.	*	C-7	Spring
9.	*	B-41	Bushing
10.	5302297	B-39	Seal
11.	5301139	A-31	Gasket

*Available in kit only. †Wall Box Assembly for C-43-AWB/C-9-AWB/B-12-AWB

DIMENSION

“L” Dimension PUSH BUTTON ID CHART (All dimensions in inches)

Wall Thickness	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
“L” Dimension	3 3/4	4 3/4	5 3/4	6 3/4	7 3/4	8 3/4	9 3/4	10 3/4	11 3/4	12 3/4	13 3/4	14 3/4	15 3/4	16 3/4	17 3/4
“A” (B-15-A) Filler Rod	1 5/8	2 5/8	3 5/8	4 5/8	5 5/8	6 5/8	7 5/8	8 5/8	9 5/8	10 5/8	11 5/8	12 5/8	13 5/8	14 5/8	15 5/8
“B” (B-6-A) Socket Assembly	2 1/2	3 1/2	4 1/2	5 1/2	6 1/2	7 1/2	8 1/2	9 1/2	10 1/2	11 1/2	12 1/2	13 1/2	14 1/2	15 1/2	16 1/2

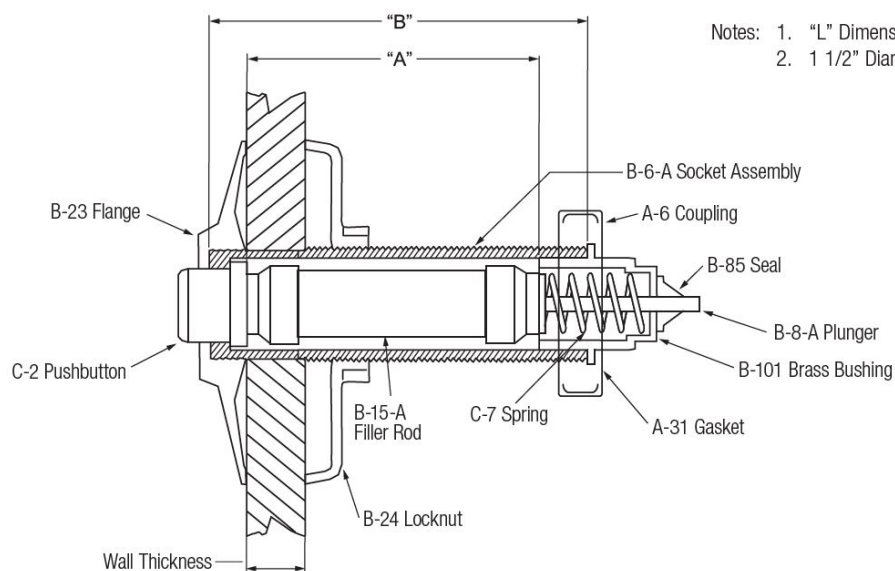 

- Notes: 1. "L" Dimension = Wall thickness (to nearest whole inch) + 2 3/4"
 2. 1 1/2" Diameter Hole Opening Required Through Wall



The information contained in this document is subject to change without notice.

Documents / Resources

	SLOAN B-15-A Pedal Push and Pedal Handle Push Button [pdf] Instructions B-15-A Pedal Push and Pedal Handle Push Button, B-15-A, Pedal Push and Pedal Handle Push Button, Pedal Handle Push Button, Handle Push Button, Push Button, Button
--	--