

SM Tek Group SB38 PRISMA X LED Wireless Speaker



SM Tek Group SB38 PRISMA X LED Wireless Speaker User Manual

[Home](#) » [SM Tek Group](#) » SM Tek Group SB38 PRISMA X LED Wireless Speaker User Manual 

Contents

- [1 SM Tek Group SB38 PRISMA X LED Wireless Speaker](#)
- [2 INTRODUCTION](#)
- [3 PACKAGE CONTENTS](#)
- [4 FEATURES](#)
- [5 PRODUCT OVERVIEW](#)
- [6 SPECIFICATIONS](#)
- [7 HOW TO USE](#)
- [8 CARE AND SAFETY](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)



SM Tek Group SB38 PRISMA X LED Wireless Speaker



INTRODUCTION

Do you like your music colorful and with a good beat? Then we have the speaker for you! Prisma-X is one of top quality speakers that brings the life of the party with you. This upbeat speaker has an HD sound like never before. The color and lights are incredibly vibrant and stylish. Now you can always carry your music with you no problem.

PACKAGE CONTENTS

- 1x Prisma-X Speaker
- 1x Charging Cable

FEATURES



360° LED LIGHT



PORTABLE




HD SOUND



5HR PLAYTIME

PRODUCT OVERVIEW

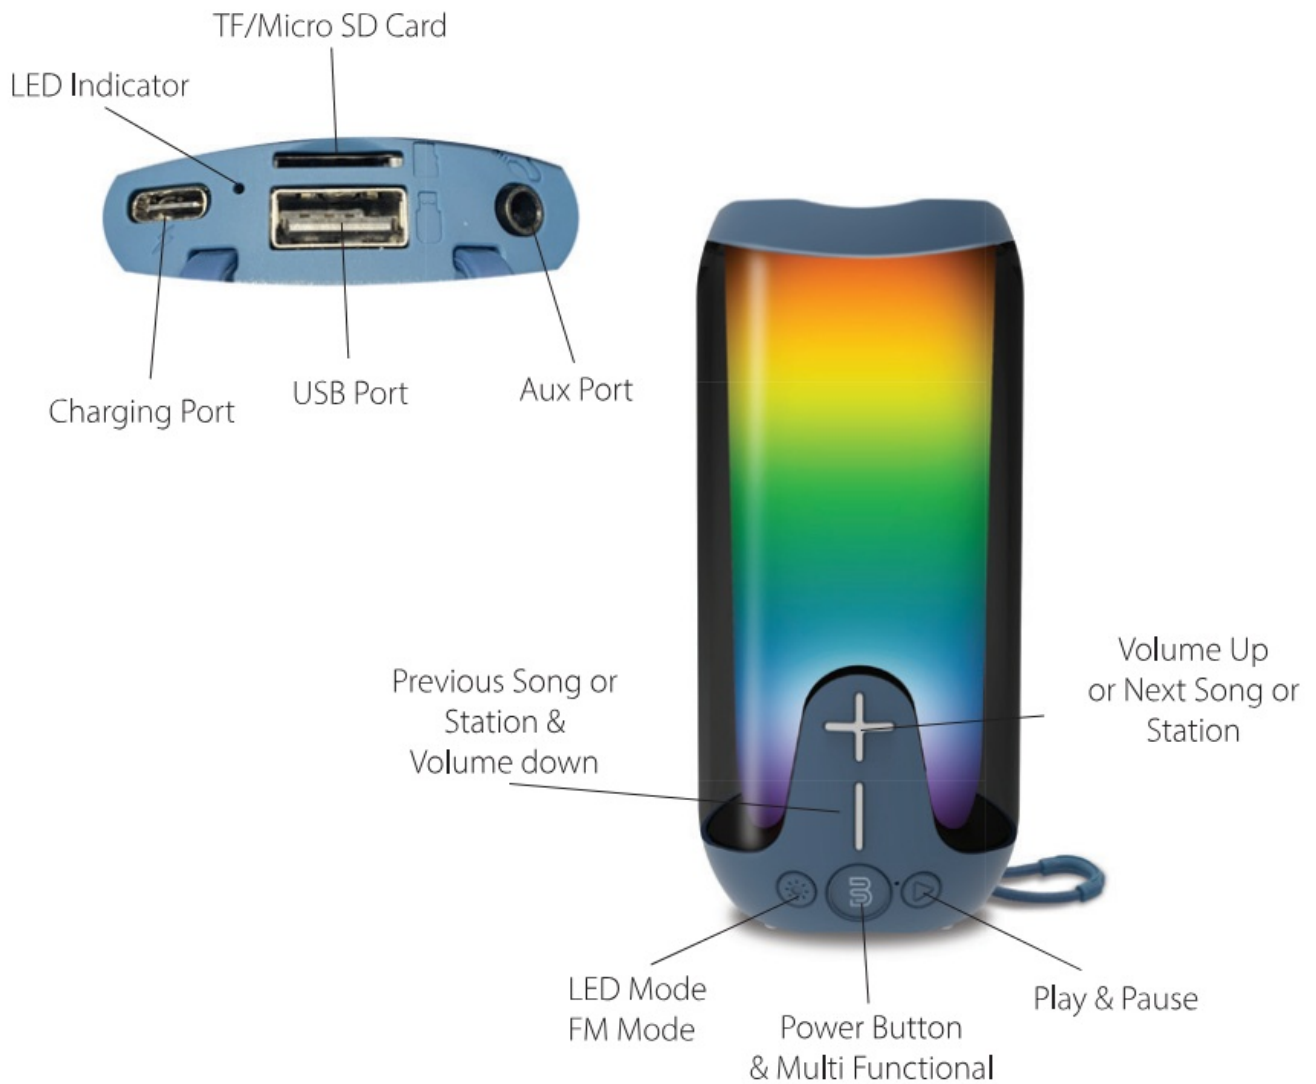

SPECIFICATIONS

- Bluetooth V5.3
- Captivating LED Projection
- Bluetooth Range: 33 ft
- Battery Capacity: 1200mAh
- Playtime: Up to 5 hours of play
- Input: AUX/TF/USB
- Charge with Type C
- FM Radio

HOW TO USE

B Button

1. Hold the B button at the same time as hitting another button
2. It will perform a different action than when not pressing it at same time
3. Make Sure not to hold it or the power will shut down

Using MicroSD (TF) Card Slot – Max Capacity is 16GB

1. Insert the Micro SD (TF) Card or USB Drive preloaded with songs.
2. Speaker will automatically start playing songs
3. During playback, short press the Previous button to go back to the previous track, press the Next button to skip to the next track.

Using Bluetooth

1. Power on the product to enter into BT mode.
2. Search for and select "Prisma-X" on your external Bluetooth device.
3. The speaker will issue an indication tone after a successful connection.

Using Radio

1. Press the mode button and choose FM mode.
2. Short press Play/Pause button to begin scanning for all available stations.
3. Short-press it again to stop searching.
4. Press Next button to select the next stations.

CARE AND SAFETY

- Do not use this unit for anything other than its intended use.
- Keep the unit away from heat sources, direct sunlight, humidity, water or any other liquid.
- Do not expose the device to extremely high or low temperatures, as it may damage the battery.
- Do not operate the unit if it has been wet or moist to prevent against electric shock and/or injury to yourself and damage to the unit.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Keep the unit out of reach of children.
- This unit is not a toy.

BATTERY DISPOSAL:

This product contains a lithium polymer battery. Lithium polymer batteries are environmentally safe when fully discharged. Please refer to your local and state laws for battery disposal procedures.

@SM TEK GROUP INC., All rights reserved. MicroTech is a trademark of SM TEK GROUP INC. All trade names are the registered trademarks of the manufacturers listed. New York, NY 10001 | www.smtelgroup.com

Documents / Resources



[SM Tek Group SB38 PRISMA X LED Wireless Speaker \[pdf\] User Manual](#)
SB38, SB38 PRISMA X LED Wireless Speaker, SB38 PRISMA X, LED Wireless Speaker, Wireless Speaker, Speaker

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.