



# Smart-AVI SDX-XT Series Advanced XT/XT-2P/XT-4P Extender User Manual

[Home](#) » [Smart-AVI](#) » Smart-AVI SDX-XT Series Advanced XT/XT-2P/XT-4P Extender User Manual 

## Contents

- 1 Smart-AVI SDX-XT Series Advanced XT/XT-2P/XT-4P Extender
- 2 Technical Specifications
- 3 What's in the box?
- 4 Installation
- 5 Application diagram SDX-XT
- 6 Application diagram SDX-XT-2P
- 7 Application diagram SDX-XT-4P
- 8 LED CONTROL
- 9 Troubleshooting
- 10 Technical support
- 11 Limited warranty statement
- 12 Documents / Resources
- 13 Related Posts



## Smart-AVI SDX-XT Series Advanced XT/XT-2P/XT-4P Extender



## Technical Specifications

VIDEO		
Format	DVI-D (HDMI-ready with adapter)	
Video Resolution	Resolution: high definition 1920 x 1200; Color Depth: 24-bit color depth; Latency: less than 1 ms	
Video Bandwidth	Single-link 340 MHz (10.2 Gbps)	
Input Interface (TX)	SDX-XT	(1) DVI-I 29-pin
	SDX-XT-2P	(2) DVI-I 29-pin
	SDX-XT-4P	(4) DVI-I 29-pin
Output Interface (RX)	SDX-XT	(1) DVI-I 29-pin
	SDX-XT-2P	(2) DVI-I 29-pin
	SDX-XT-4P	(4) DVI-I 29-pin
Max Output Distance	Up to 1920 x 1200 @ 60 Hz	
Equalization	Automatic	
Input TMDS Signal	1.2 Volts [peak-to-peak]	
Input DDC Signal	5 Volts [peak-to-peak, TTL]	
Data Rate	1.65 Gbps per color	
AUDIO		
Format	Stereo	
Input Interface	3.5 mm Jack Socket (female)	
Output Interface	3.5 mm Jack Socket (female)	
USB		
Input Interface (TX)	(1) USB Type B	
Output Interface (RX)	(2) USB 1.1 Type A for KM Devices; (2) USB 2.0 Type A Transparent	
Keyboard and mouse	Keyboard and mouse emulation	
SYSTEM		
Interface	RJ-45	
Cable Requirements	CAT5/5e/6	
Maximum Length	500 ft	
OTHER		
Power	100-240 VAC/ 5VDC @ 3A/15W	
Approvals	UL, CE, ROHS Compliant	

Operating Temp.	+32 to +104°F (0 to +40°C)
Storage Temp.	-4 to 140°F (-20 to +60°C)
Humidity	Up to 95% (No Condensation)
Compliance EMC	FCC (Class A), CE (Class A), ICES-003
Envr. Compliance	RoHS2 (CE)
Support Warranty	1-year

## What's in the box?

SDX-XT Unit	Single/Dual/Quad Head DVI-D, USB 2.0, Audio, CAT5/5e/6 Extender.
PS5VD3A-WLLMNT	5V DC, 3A (minimum) power adapter with center-pin positive polarity.
User Manual	

## SDX-xT Transmitter rear



## SDX-XT transmitter front



## SDX-XT receiver rear



## SDX-XT receiver front




## Installation

1. Ensure that power is turned off or disconnected from the unit and the computers.
2. Use a DVI cable to connect the DVI output port from each computer to the corresponding DVI-I IN ports of the unit.
3. Use a USB cable (Type-A to Type-B) to connect a USB port on each computer to the respective USB ports of the unit.
4. Optionally connect a stereo audio cable (3.5mm to 3.5mm) to connect the audio output of the computers to the AUDIO IN ports of the unit.
5. Connect a monitor to the DVI-I OUT console port of the unit using a DVI cable.
6. Connect a USB keyboard and mouse in the two USB console ports.
7. Optionally connect stereo speakers to the AUDIO OUT port of the unit.
8. Finally, power on the KVM by connecting a 12VDC power supply to the power connector, and then turn on all the computers.

## Application diagram SDX-XT


The SDX-XT is a Single Head DVI-D (1920×1200), USB 2.0, USB keyboard-mouse and stereo audio extender, sending signals up to 500ft (152m) away over a single conventional and inexpensive CAT5/5e/6 cable.

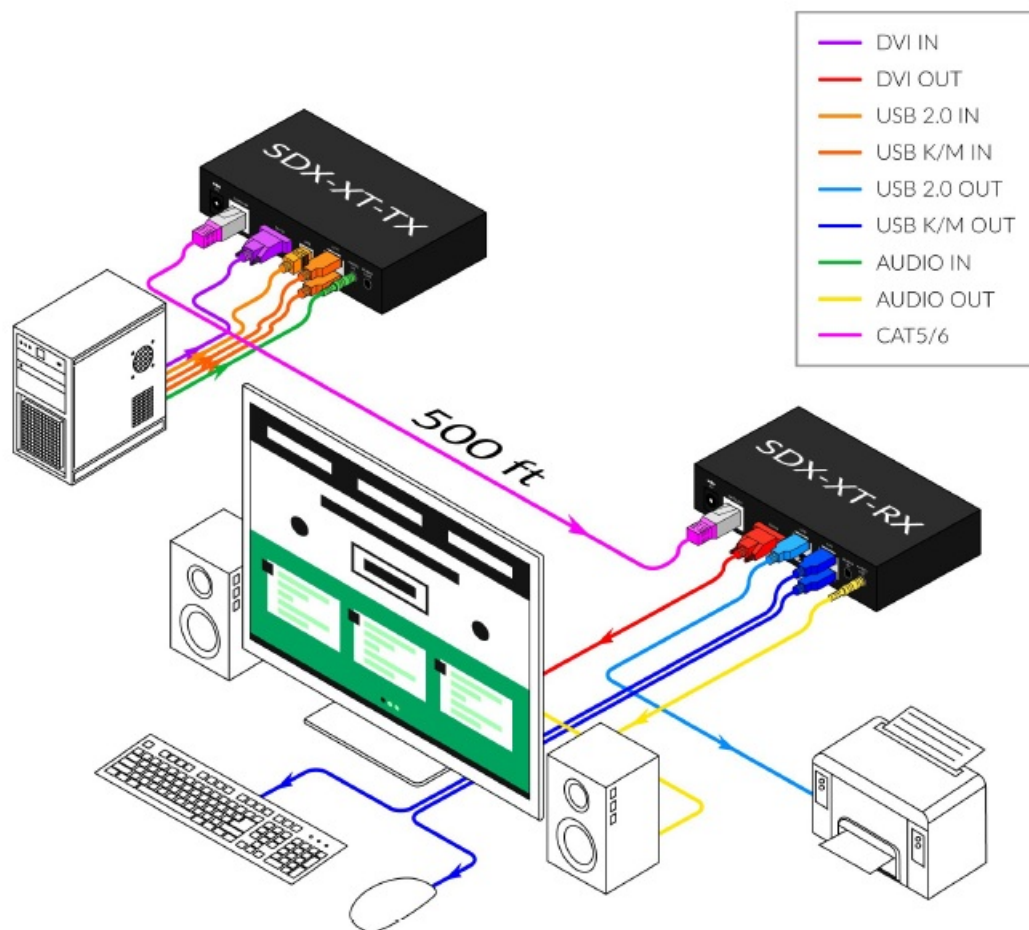

Part No.	Description
SDX-XT-S	DVI-D, USB 2.0, Audio, CAT5/5e/6 Extender. Includes: [SDX-XT-TX-S, SDX-XT-RX-S, 2x (PS5VD3A)]
SDX-XT-TX-S	DVI-D, USB 2.0, Audio, CAT5/5e/6 Transmitter. Includes: [SDX-XT-TX-S, PS5VD3A-WLLMNT]
SDX-XT-RX-S	DVI-D, USB 2.0, Audio, CAT5/5e/6 Receiver. Includes: [SDX-XT-RX-S, PS5VD3A-WLLMNT]

### Application diagram SDX-XT-2P


The SDX-XT-2P is Dual Head DVI-D (1920×1200), USB 2.0, USB keyboard-mouse and stereo audio extender, sending signals up to 500ft (152m) away over two conventional and inexpensive CAT5/5e/6 cables.

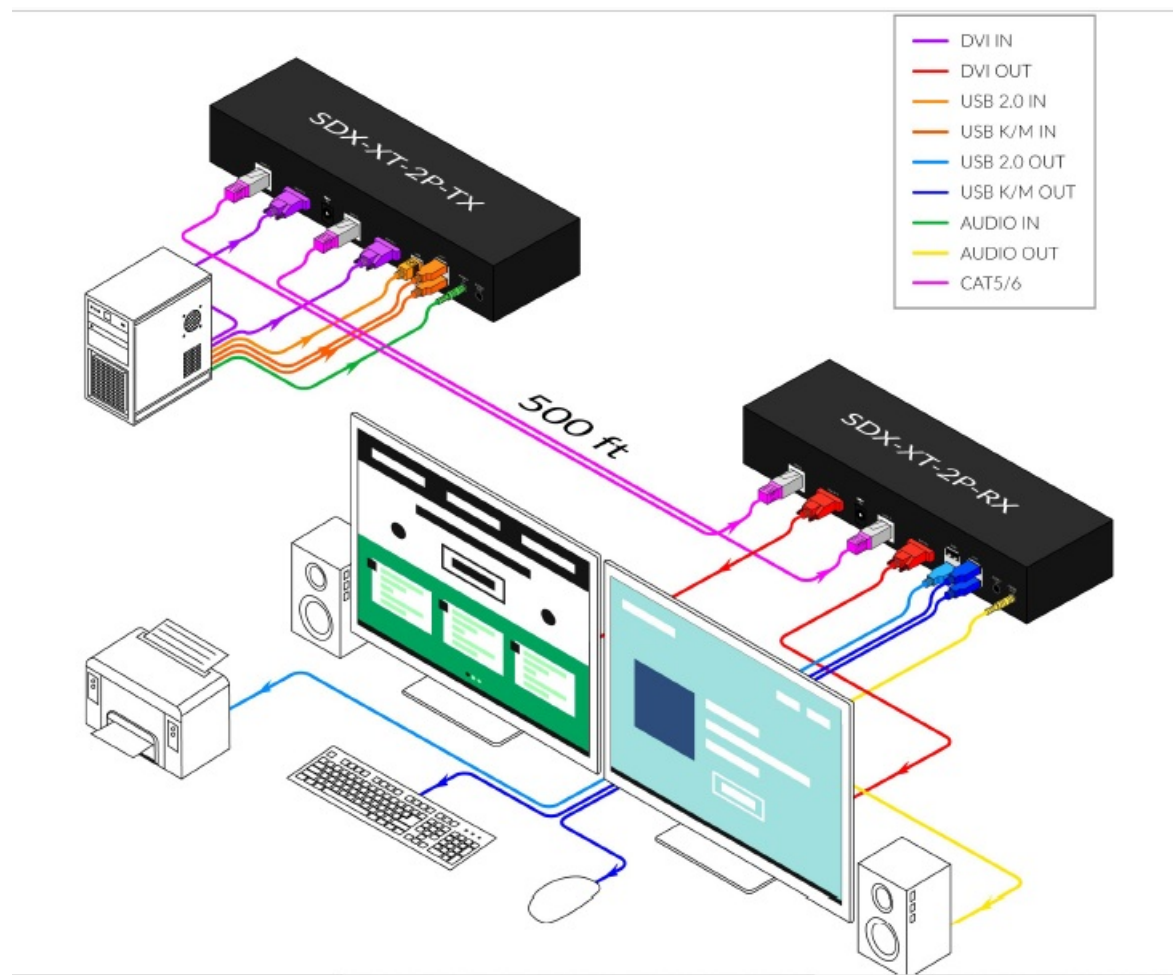

Part No.	Description
SDX-Xt-2P-S	Dual Head DVI-D, USB 2.0, Audio, CAT5/5e/6 Extender. Includes: [SDX-Xt-2P-TX-S, SDX-Xt-2P-RX-S, 2x (PS5VD3A)]
SDX-Xt-2P-TX-S	Dual Head DVI-D, USB 2.0, Audio, CAT5/5e/6 Transmitter. Includes: [SDX-Xt-2P-TX-S, PS5VD3A-WLLMNT]
SDX-Xt-2P-RX-S	Dual Head DVI-D, USB 2.0, Audio, CAT5/5e/6 Receiver. Includes: [SDX-Xt-2P-RX-S, PS5VD3A-WLLMNT]

### Application diagram SDX-Xt-4P

The SDX-Xt-4P is Quad Head DVI-D (1920×1200), USB 2.0, USB keyboard-mouse and stereo audio extender, sending signals up to 500ft (152m) away over four conventional and inexpensive CAT5/5e/6 cables.

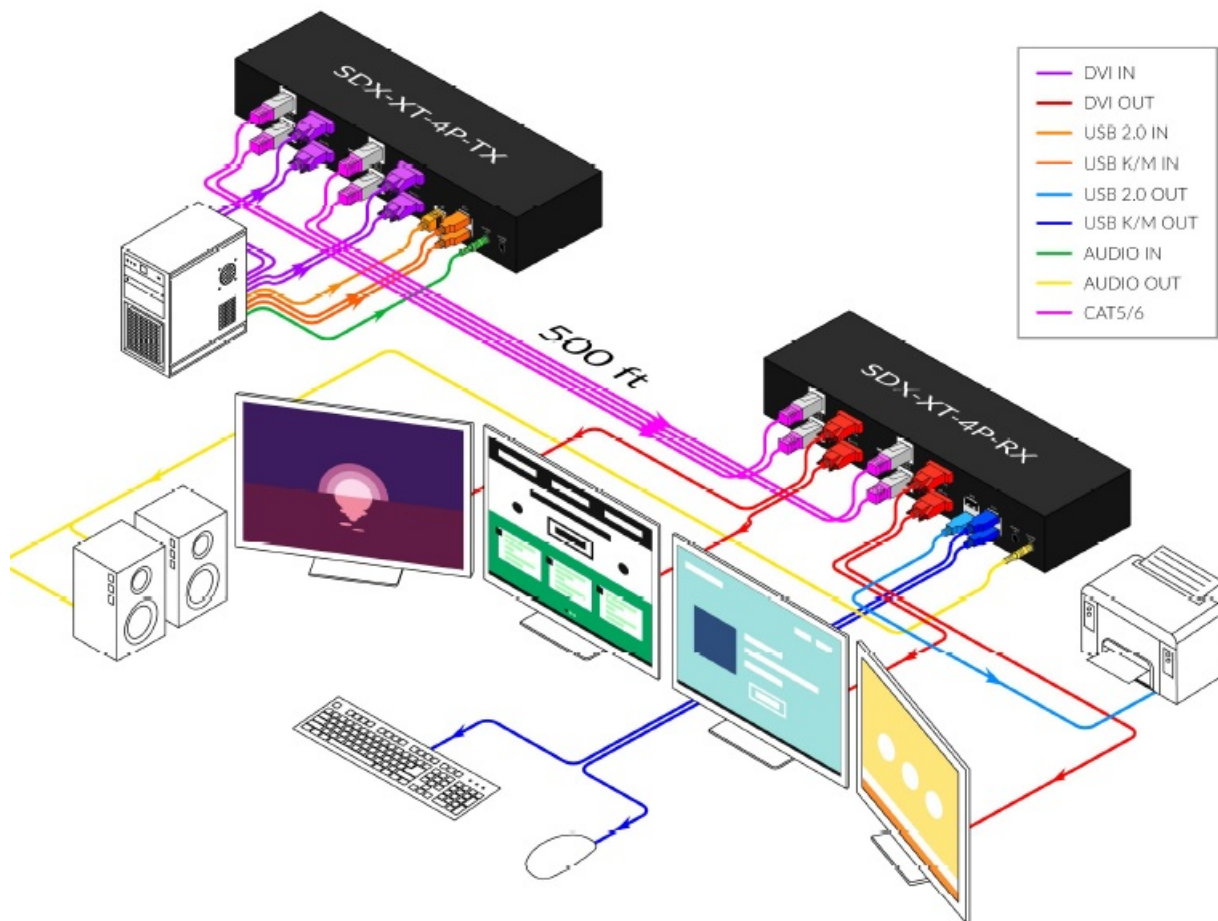

Part No.	Description
SDX-XT-4P-S	Quad Head DVI-D, USB 2.0, Audio, CAT5/5e/6 Extender. Includes: [SDX-XT-4P-TX-S, SDX-XT-4P-RX-S, 2x (PS5VD3A)]
SDX-XT-4P-TX-S	Quad Head DVI-D, USB 2.0, Audio, CAT5/5e/6 Transmitter. Includes: [SDX-XT-4P-TX-S, PS5VD3A-WLLMNT]
SDX-XT-4P-RX-S	Quad Head DVI-D, USB 2.0, Audio, CAT5/5e/6 Receiver. Includes: [SDX-XT-4P-RX-S, PS5VD3A-WLLMNT]

## LED CONTROL



<b>SDX-XT</b>	
PWR	Solid red LED when power is connected
Link	Solid green LED when cat5 is connected
FW	Blinking green LED when transferring information between unit and computer
<b>SDX-XT-2P</b>	
PWR	Solid red LED when power is connected
Link	Solid green LED when cat5 is connected
FW	Blinking green LED when transferring information between unit and computer
<b>SDX-XT-4P</b>	
PWR	Solid red LED when power is connected
Link	Solid green LED when cat5 is connected
FW	Blinking green LED when transferring information between unit and computer

## Troubleshooting

### No Power

- Make sure that the power adapter is securely connected to the power connector of the unit.
- Check the output voltage of the power supply and make sure that the voltage value is around 12VDC.
- Replace the power supply.

### No Video

- Check if all the video cables are connected properly.
- Connect the computer directly to the monitor to verify that your monitor and computer are functioning properly.
- Restart the computers Keyboard is not working
- Check if the keyboard is properly connected to the unit.
- Check if the USB cables connecting the unit and the computers are properly connected.
- Try connecting the USB on the computer to a different port.
- Make sure that the keyboard works when directly connected to the computer.
- Replace the keyboard.

### Mouse is not working

- Check if the mouse is properly connected to the unit.
- Try connecting the USB on the computer to a different port.
- Make sure that the mouse works when directly connected to the computer.
- Replace the mouse.

### No Audio



- Check if all the audio cables are connected properly.
- Connect the speakers directly to the computer to verify that the speakers and the computer audio are functioning properly.
- Check the audio settings of the computer and verify that the audio output is through the speakers.

## **Technical support**

For product inquiries, warranty questions, or technical questions, please contact [info@smartavi.com](mailto:info@smartavi.com).

## **Limited warranty statement**

### **Extent of limited warranty**

SmartAVI, Inc. warrants to the end-user customers that the SmartAVI product specified above will be free from defects in materials and workmanship for the duration of 1 year, which duration begins on the date of purchase by the customer. Customer is responsible for maintaining proof of date of purchase.

SmartAVI limited warranty covers only those defects which arise as a result of normal use of the product, and do not apply to any:

- Improper or inadequate maintenance or modifications
- Operations outside product specifications
- Mechanical abuse and exposure to severe conditions

If SmartAVI receives, during applicable warranty period, a notice of defect, SmartAVI will at its discretion replace or repair defective product. If SmartAVI is unable to replace or repair defective product covered by the SmartAVI warranty within reasonable period of time, SmartAVI shall refund the cost of the product.

SmartAVI shall have no obligation to repair, replace or refund unit until customer returns defective product to SmartAVI.

Any replacement product could be new or like new, provided that it has functionality at least equal to that of the product being replaced.

SmartAVI limited warranty is valid in any country where the covered product is distributed by SmartAVI.

### **Limitations of warranty**

To the extent allowed by local law, neither SmartAVI nor its third party suppliers make any other warranty or condition of any kind whether expressed or implied with respect to the SmartAVI product, and specifically disclaim implied warranties or conditions of merchantability, satisfactory quality, and fitness for a particular purpose.

### **Limitations of liability**

To the extent allowed by local law the remedies provided in this warranty statement are the customers sole and exclusive remedies.

To the extent allowed by local law, except for the obligations specifically set forth in this warranty statement, in no event will SmartAVI or its third party suppliers be liable for direct, indirect, special, incidental, or consequential damages whether based on contract, tort or any other legal theory and whether advised of the possibility of such damages.

### **Local law**


To the extent that this warranty statement is inconsistent with local law, this warranty statement shall be considered modified to be consistent with such law.

### **NOTICE**

The information contained in this document is subject to change without notice. SmartAVI makes no warranty of any kind with regard to this material, including but not limited to, implied warranties of merchantability and fitness for particular purpose. SmartAVI will not be liable for errors contained herein or for incidental or consequential

damages in connection with the furnishing, performance or use of this material. No part of this document may be photocopied, reproduced, or translated into another language without prior written consent from SmartAVI, Inc.

**Documents / Resources**

	<p><a href="#">Smart-AVI SDX-XT Series Advanced XT/XT-2P/XT-4P Extender</a> [pdf] User Manual SDX-XT Series, Advanced XT XT-2P XT-4P Extender, XT-4P Extender, Extender</p>
---	---