

# Smart Life TH05 Wi-Fi Temperature And Humidity Sensor with **Backlight User Guide**

Home » Smart Life » Smart Life TH05 Wi-Fi Temperature And Humidity Sensor with Backlight User Guide 🖫

#### **Contents**

- 1 Smart Life TH05 Wi-Fi Temperature And Humidity Sensor with **Backlight**
- 2 Product parameter
- 3 Appearance introduction
- 4 How to set up
- **5 Documents / Resources** 
  - **5.1 References**
- **6 Related Posts**



Smart Life TH05 Wi-Fi Temperature And Humidity Sensor with Backlight



Please read this manual carefully before use and keep it for future reference.

## **Product parameter**

1. **Size:** 60\*63\*25mm

2. **Input voltage:** DC4.5V LR03\*3


3. Quiescent current: ≤30uA

4. Low power undervoltage: ≤3.5V

5. **WiFi:** 802.11b/g/n 2.4GHz

6. Working temperature: -10°C~55°C7. Working humidity: 10%~90%RH

## **Appearance introduction**

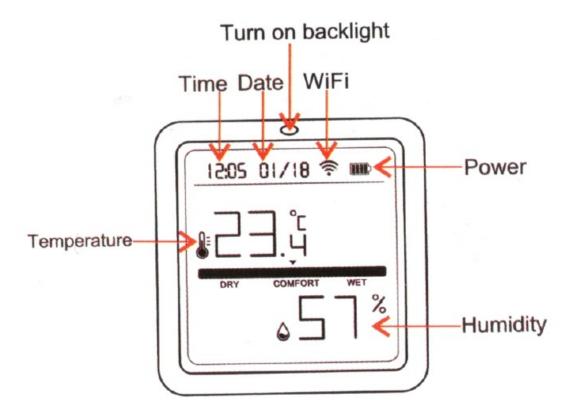

### How to set up

- First, scan the QR code with your smartphone, or search the "Smart Life" app in the Google Play Store or APP Store to download and install the app.
- Register the app with your email address.



Bluetooth mode: First turn on the Bluetooth in your mobile phone → open the smart life app and choose "+" → press and hold the sensor for 5 seconds → The WiFi icon will indicate on the sensor display. Then will see "Devices to be added: 1" on the mobile app. Finally, press "Go to add", it will connect to the Wi-Fi network automatically.




- 2. After connecting to WiFi successfully, click the sensor icon to enter the app interface and do some settings.
  - 1. Temperature unit switching
  - 2. **Temperature/humidity sensitivity:** Sensor temperature/humidity value will synchronize to app when upper/lower preset temperature/ humidity value. For example, now the temperature is 28°C and the humidity is 70%, the temperature/ humidity sensitivity is ±0.6/6%, then the sensor temperature/humidity value will synchronization to app when the temperature/humidity is 28.6°C or 27.4°C /76% or 64%. (Factory default: temperature sensitivity is 0.6°C, humidity sensitivity is 6%).




3. Alarm Management

Temperature/Humidity upper and lower limits are set: The setting of the temperature/humidity range

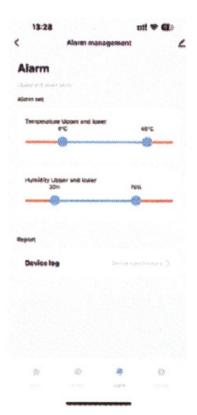

#### 4. Intelligent Linkage

When the ambient environment changes, you can do intelligent linkage. For example, the air conditioner will be on automatically when the room temperature surpasses 35°C. The humidifier will spray when the humidity is lower than 20% RH.

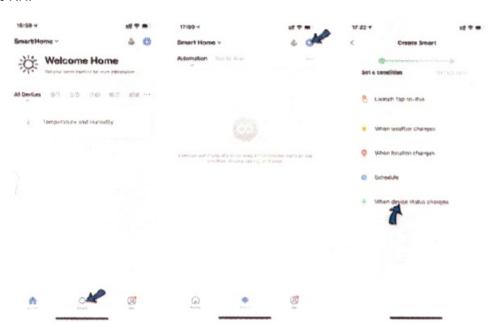

#### 5. Share devices

You can share your added devices with your family members, so they can also monitor the ambient environment.

## 6. Temperature Unit Selection in APP

You can choose °C or °F as the temperature unit through the app.

### 7. Third-party Voice Control

Works with amazon alexa and Google Assistant.

#### **Documents / Resources**



Smart Life TH05 Wi-Fi Temperature And Humidity Sensor with Backlight [pdf] User Guide TH05 Wi-Fi Temperature And Humidity Sensor with Backlight, TH05, Wi-Fi Temperature And Humidity Sensor with Backlight, Temperature And Humidity Sensor with Backlight, Humidity Sensor with Backlight, Sensor with Backlight, Backlight

#### References

• User Manual

Manuals+, Privacy Policy