



SMART SRT2 Retro Radio Toaster Instruction Manual

[Home](#) » [Smart](#) » SMART SRT2 Retro Radio Toaster Instruction Manual 



SRT2 SMART Retro Radio Toaster Instruction Manual



Contents

- 1 SRT2 Retro Radio Toaster
- 2 SAFETY
- 3 IMPORTANT PRECAUTIONS
- 4 INTRODUCTION
- 5 FEATURES & OPERATIONS
- 6 Browning control
- 7 USER MAINTENANCE & CARE
- 8 RECYCLING
- 9 SPECIFICATION
- 10 RETURNS & WARRANTY
- 11 Documents / Resources
 - 11.1 References
- 12 Related Posts

SRT2 Retro Radio Toaster

THE SMART CHOICE

Visit www.smartworldwidefun.com for more fun products.

SAFETY

Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not **followed**. **Appliance Specifications:**

220-240V~, 50/60 Hz, 770-920W



IMPORTANT PRECAUTIONS

Please read the entire user manual before using the product and then save it for future reference.

For household use only.

- Please keep these instructions and the guarantee slip. Also keep the receipt and if possible the box with inner packaging in a safe place!

This appliance is intended exclusively for private and not for commercial use.

- Always remove the plug from the socket when the appliance is not in use or when you are attaching accessories, cleaning it or in the event of a malfunction. Switch off the appliance. Do not pull the cable, pull the plug.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical,

sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.

- Children should be supervised to ensure that they do not play with the appliance.
- Keep the appliance and its cord out of reach of children.
- Ensure that the cable does not hang down.
- Check the cable and the appliance regularly for damage. Do not switch on the appliance if it is damaged.
- Do not repair the appliance yourself, but consult an authorised professional instead.
- Keep the appliance and the cable away from heat, direct sunlight, moisture, sharp edges and such like.
- Never leave the appliance unsupervised if it is in use! Always switch off the appliance if you are not using it, even if only for a brief period.
- Only use original parts.
- Never use the appliance outdoors.
- Never submerge the appliance in water or any other liquid. Do not allow the appliance to come into contact with water or other liquids. Do not use the appliance with wet or moist hands.
- Remove the plug from the socket immediately if it is moist or wet. Do not touch the water!
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Only use the appliance for its intended purpose.
- The appliances are not intended to be operated by means of an external timer or separate remote-control system.
- After you finish using this product, please recycle the product for disposal in accordance with local regulations.
- The outer surface may get hot when the appliance is operating.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- The appliance shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the appliance.
- The appliance shall be connected to a MAINS socket outlet with a protective earthing connection.
- Only use the appliance if supervised (very dry bread may catch fire if toasted).
- Do not insert any forks, knives or such like in the toasting slot.
- Do not place the appliance anywhere near inflammable objects (e.g. curtains, wood, etc.)!
- The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains or kitchen cupboards.
- Keep minimum distances 20 cm around the apparatus for sufficient ventilation. Also, the ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.

INTRODUCTION

 
Congratulation on your purchase of the SMART Retro Radio Toaster. For a better use of your new device, we recommend you to read carefully this user manual and keep it safe for your record.




FEATURES & OPERATIONS

Radio Control Panel Instructions

- **Button 1** is the On / off key and volume control button.

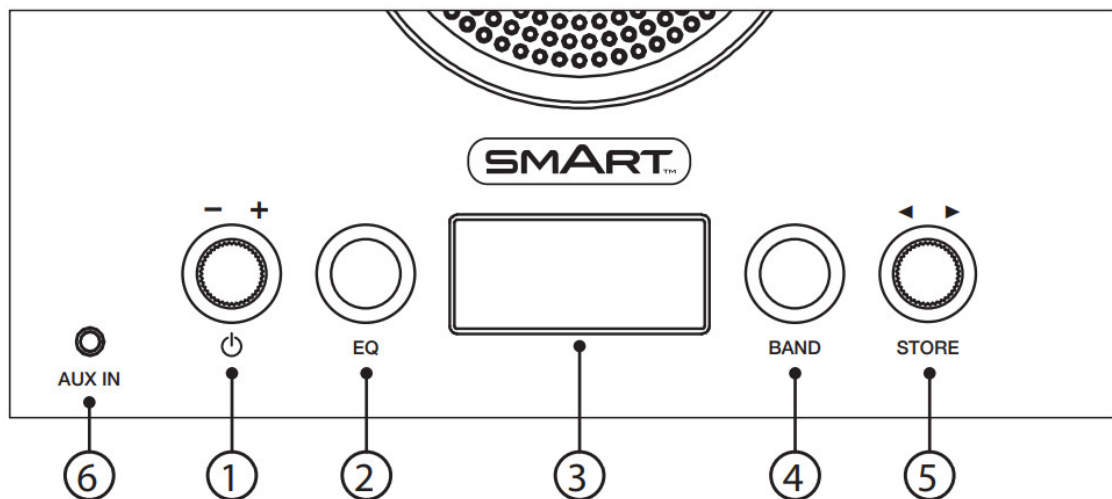


Button 2 is the EQ key.

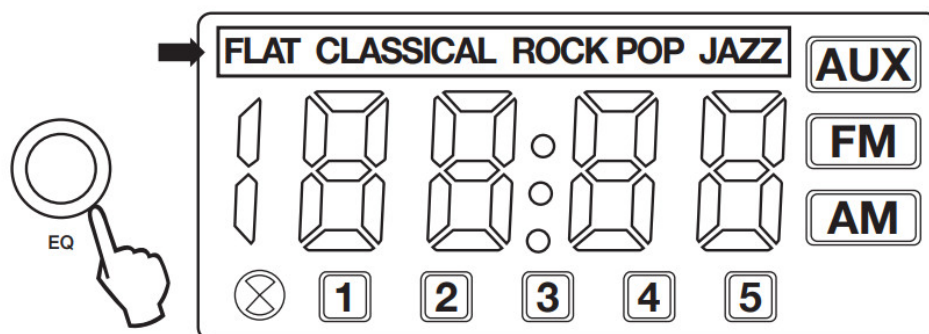 

On 1st time use, the default display is FLAT. The EQ can be adjusted by pressing button 2. (i.e. FLAT => CLASSICAL => ROCK => POP => JAZZ).


The SMART Radio has a memory. It will recall the last choice you made before most recent switch off for all levels explained herein.

 - **Button 3** is the LCD display.

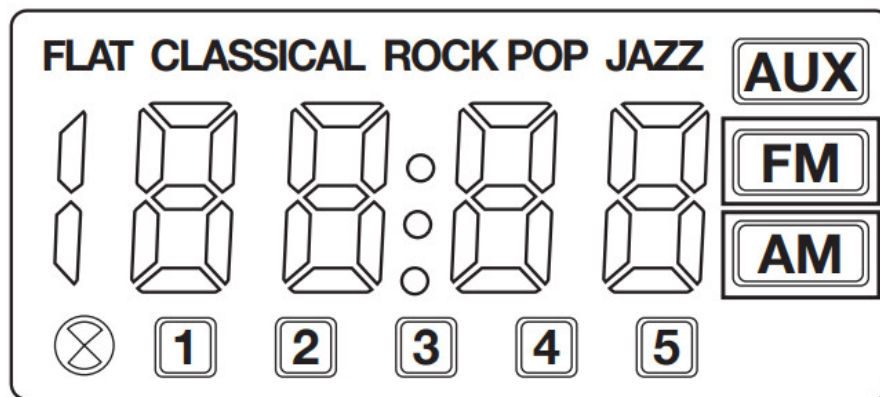


It shows the relevant content according to the actual operation.

 - **Button 4** is the radio mode select key.

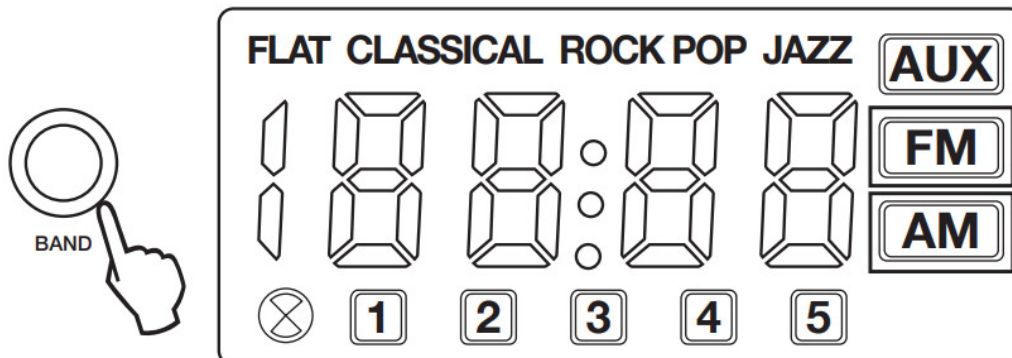

For 1st time use, the default is FM, press it and choose AM & AUX.

 - **Button 5** is the FM/AM frequency modulation and fixed frequency fixed amplitude selection.

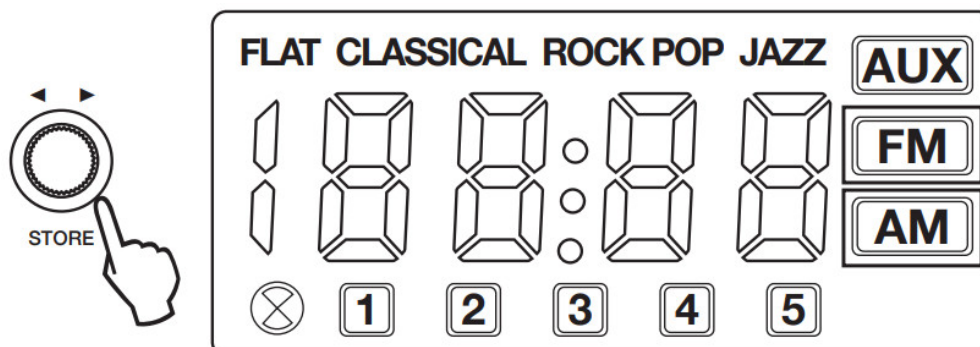


For 1st time use, the default is 87.5/FM or 526.5/AM, frequency modulation can be adjustable by rotating button 5.

- **Button 6** is an AUX IN jack, which lets you play external CD, MD, or MP3 audio sources.
Customers can keep their own chosen frequency, constant amplitude, storage and selection.

Browsing control

 The browsing control enables the adjustment of toasting time and has the following settings:

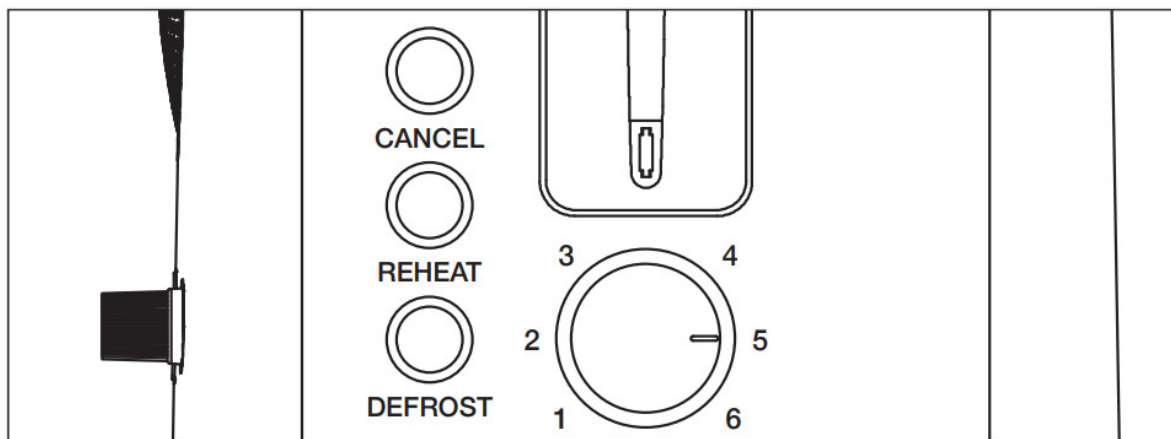

CANCEL FUNCTION:

Press the CANCEL button if you desire to stop the operation. The CANCEL button can be pressed at any time during toasting to interrupt the toasting cycle.

REHEAT FUNCTION:

Your toaster can reheat bread if it has cooled too quickly.

1. Place the bread in the toaster.
2. Set the browning control to the lowest setting, the slider should be positioned directly under the reheat icon.
3. Press the loading lever down.
4. The loading lever will rise automatically when reheating is finished.

DEFROST FUNCTION:

Your toaster can defrost frozen bread.

1. Place the bread in the toaster.
2. Turn the selector switch clockwise to set the toasting level from the lightest level 1 to the darkest level 6 (from left – to right). If in any doubt, start with the lower setting (the black mark on the selector switch shows you the setting).
3. Press the toast lever down.
4. Press the defrost button.
5. The loading lever will rise automatically once finished.

USER MAINTENANCE & CARE

Before cleaning, remove the plug from the socket and allow the appliance to cool down.

- Use a moderately damp cloth to clean the outside of the appliance.
- Do not use any corrosive or scrubbing detergents.
- Pull the crumb tray out, remove the bread residue and place the tray back in.
- Any other servicing should be performed by an authorised service representative.



RECYCLING


Disposal of electric and electronic equipment at the end of their service life (applicable in member countries of the European Union and other European countries operating a selective waste collection system) is mandatory in the

UK.

This symbol, affixed to the product or its packaging, indicates that the product must not be disposed of with household waste. It must be brought to an electric and electronic waste collection point for recycling and disposal. By ensuring the appropriate disposal of this product you also help in preventing potentially negative consequences for the environment and human health. The recycling of materials helps preserve our natural resources. For further information regarding the recycling of this product, please contact your municipality, local waste disposal centre or the store where the product was purchased.

SPECIFICATION

Rated Voltage:	220-240V~ 50/60Hz
Rated Power:	770-920W
Frequency band:	87.5MHz ~ 108 MHz for FM 526.5KHz ~1605 KHz for AM
Net Weight:	1.8kg

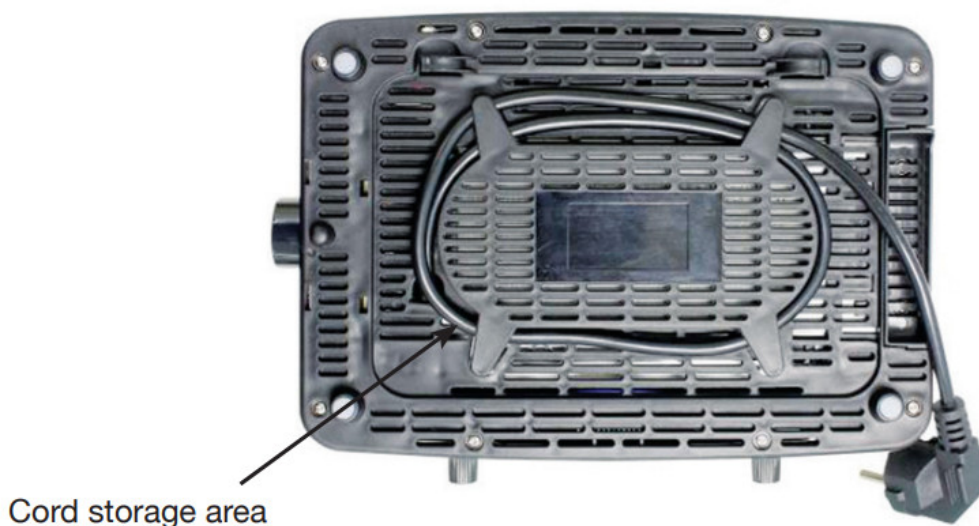 

RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IF DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY WITH THE PROOF OF PURCHASE.

SMART Retro Radio Toaster/ SRT2.

Should you have any questions, please contact the retailer where you purchased the item.

Exclusively Manufactured and Distributed by:

SMART Worldwide

(an SMA Worldwide Ltd. Company)

SMA House, Langley Waters, Home Park Kings Langley, WD4 8LZ, Hertfordshire, United Kingdom.

Phone: Please see website for details.



Web: www.smartworldwidefun.com

Email: sma@smagm.com

Customer Service Enquiry

To submit a Customer Service enquiry, go to www.smartworldwidefun.com and fill out the Customer Service enquiry form and click the Submit button.

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our option. Our pledge does not apply to damages caused by shipping, mishandling or unit being dropped. A product deemed defective either from manufacturing or being mishandled is up to the distributor's discretion. In order to obtain service under this warranty, please contact the seller as the first port of call.

This warranty does not apply to re-manufactured merchandise.

Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and is being made in place of all other expressed warranties.

For more information visit us online at www.smartworldwidefun.com



@SMARTWorldwide1



@SMARTWorldwide



smart choice 007



Smart Worldwide Fun



Exclusively Manufactured & Distributed by:

SMART Worldwide

(an SMA Worldwide Ltd. Company) SMA House, Langley Waters, Home Park Kings Langley, Hertfordshire, WD4 8LZ

SMART Worldwide Ltd 2021 ©

Design patent registered product

www.smartworldwidefun.com



Model: SRT2

 
SMART Worldwide (an SMA Worldwide Ltd. Company) have a policy of continuous improvement and we reserve the right to change specifications without notice.

SMART is a registered trademark of SMA Worldwide Ltd. London, England.

www.smartworldwidefun.com

© SMART Worldwide 2021

Documents / Resources

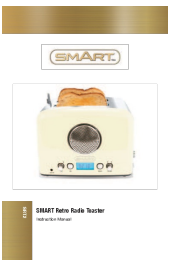	<p>SMART SRT2 Retro Radio Toaster [pdf] Instruction Manual</p> <p>SRT2 Retro Radio Toaster, SRT2, Retro Radio Toaster, Radio Toaster, Toaster</p>
---	---

References

- [Smart – worldwide](#)

