

SmartAVI SM-D2H-4D Advanced KVM Switch User Guide

Home » SmartAVI » SmartAVI SM-D2H-4D Advanced KVM Switch User Guide 1



Contents

- 1 SmartAVI SM-D2H-4D Advanced KVM Switch User Guide
- **2 WHAT'S IN THE BOX**
- **3 TECHNICAL SPECIFICATIONS**
- **4 HARDWARE INSTALLATION**
- 5 Documents / Resources
 - **5.1 References**

SmartAVI SM-D2H-4D Advanced KVM Switch User Guide



WHAT'S IN THE BOX

PART NO. QTY DESCRIPTION				
SM-D2H-4D	1	Dual Head 4-Port DP-to-HDMI KVM Switch with Audio and USB 2.0 Support		
PS12VDC2A	1	12V DC, 2A power adapter with center-pin positive polarity		
	1	Quick Start Guide		

NOTICE

The information contained in this document is subject to change without notice. SMART-AVI makes no war-ranty of any kind with regard to this material, includ-ing but not limited to, implied warranties of merchant-ability and fitness for particular purpose. SMART-AVI will not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance or use of this materi-al. No part of this document may be photocopied, reproduced, or translated into another language with-out prior written consent from SMART-AVI, Inc.



Toll Free: (800) AVI-2123 Phone: (702) 800-0005

2455 W. Cheyenne Ave, Suite 112 North Las Vegas, NV 89032

smartavi.com

TECHNICAL SPECIFICATIONS

VIDEO		
Format	DisplayPort, HDMI	
Maximum Pixel Clock	165 MHz	
Input Interface	(8) DisplayPort	
Output Interface	(2) HDMI	
Resolution	3840 x 2160 @ 30 Hz	
DDC	5 volts p-p (TTL)	
Input Equalization	Automatic	
Input Cable Length	Up to 20 ft.	
Output Cable Length	Up to 20 ft.	
USB		
Signal Type	USB 2.0, 1.1, and 1.0 w/ internal hub	
Input Interface	(4) USB Type B	
Output Interface	(2) USB 1.1 Type A for KVM Devices (2) USB 2.0 Type A Transparent	
AUDIO		
Input	(4) 3.5 mm Stereo Audio	
Output	(1) 3.5 mm Stereo Audio	

The section of the se	+	
POWER		
Power Requirements	12V DC, 2A power adapter with center-pin positive polarity	
ENVIRONMENT		
Operating Temp	32° to 104° F (0° to 40° C)	
Storage Temp	-4° to 140° F (-20° to 60° C)	
<mark>Humidity</mark>	0-80% RH, non-condensing	
CONTROL		
Front Panel	Push Buttons with LED indicators	
RS-232 Via Serial @ 115200 bps		
Hot Keys	Via Keyboard	
OTHER		
Emulation	Keyboard, Mouse and Video	

EDID LEARN

The KVM is designed to learn a connected monitor's EDID upon power up. In the event of connecting a new monitor to the KVM, a power re-cycle is required.

There are three ways to control the SM-DPN: Keyboard HotKeys, RS-232 Serial Com-mands, and Front Panel Buttons.

The settings for the serial connection are as follows: Baud rate: 115200; Data Bits: 8; Parity: None; Stop Bits: 1; Flow Control: None.

Command	HotKey	RS-232
Switch KVM	[CT][CT][#] <cr></cr>	//m[#] <cr></cr>
Audio Only	[CT][CT] a [#] <cr></cr>	//a[#] <cr></cr>
KM Only	[CT] [CT] C [#] <cr></cr>	//c[#] <cr></cr>
USB Only	[CT][CT] u [#] <cr></cr>	//u[#] <cr></cr>
Learn EDID	[CT][CT] e <cr></cr>	//e <cr></cr>
SW Reset	[CT] [CT] r	// r <cr></cr>
Status Query	N/A	//?? <cr></cr>
Current HK Trigger	[Alt][Alt][Alt] k 0 <cr></cr>	// hk <cr></cr>
Update HK Trigger	[HK][HK] k [1 2 3] <cr></cr>	N/A

Chart Key

[CT] = Ctrl

<CR> = Carriage Return (Enter Key)

[HK] = Current Hot Key Trigger


1 = Ctrl (Default) | 2 = Shift | 3 = Scroll Lock

HARDWARE INSTALLATION

- 1. Ensure that power is turned off or disconnected from the unit and the computers.
- 2. Use DP cables to connect the DP output ports from each computer to the corresponding DP IN ports of the unit.
- 3. Use a USB cable (Type-A to Type-B) to connect a USB port on each computer to the respective USB ports of the unit.
- 4. Optionally connect a stereo audio cable (3.5mm to 3.5mm) to connect the audio output of the computers to the AUDIO IN ports of the unit.
- 5. Connect monitors to the HDMI OUT console ports of the unit using HDMI cables.
- 6. Connect a USB keyboard and mouse in the two USB console ports.
- 7. Optionally connect stereo speakers to the AUDIO OUT port of the unit.

8. Finally, power on the KVM by connecting a 12VDC power supply to the power connector, and then turn on all the computers.

Note: You can connect up to 4 computers to the 4 port KVM.

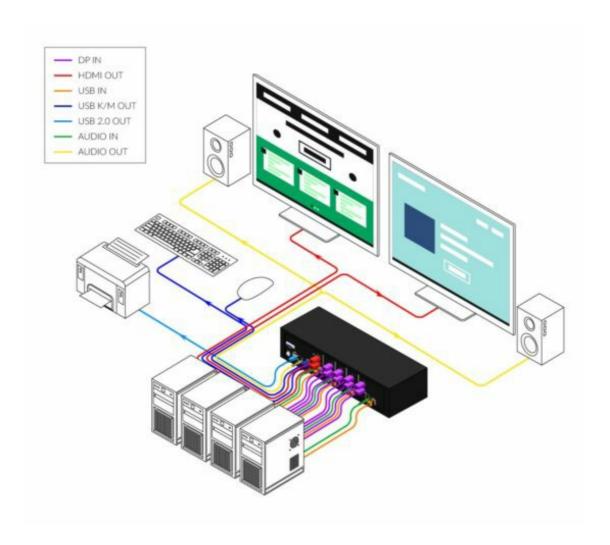

Read More About This Manual & Download PDF:

Documents / Resources



SmartAVI SM-D2H-4D Advanced KVM Switch [pdf] User Guide

SM-D2H-4D Advanced KVM Switch, SM-D2H-4D, Advanced KVM Switch, KVM Switch, Switch

References

- MI Home SmartAVI
- MI SM-D2H-4D SmartAVI

User Manual

Manuals+,