



# SMARTAVI SM-DPN-4S 4 Port Display Port KVM Switch User Guide

[Home](#) » [SmartAVI](#) » SMARTAVI SM-DPN-4S 4 Port Display Port KVM Switch User Guide 

## SMARTAVI SM-DPN-4S 4 Port Display Port KVM Switch User Guide



### Contents

- [1 Product Instruction](#)
- [2 WHAT'S IN THE BOX](#)
- [3 EDID LEARN](#)
- [4 SYSTEM CONTROL](#)
- [5 HARDWARE INSTALLATION](#)
- [6 TECHNICAL SPECIFICATIONS](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)
- [8 Related Posts](#)

## Product Instruction

### NOTICE

The information contained in this document is subject to change without notice. SMART-AVI makes no warranty of any kind with regard to this material, including but not limited to, implied warranties of merchantability and fitness for particular purpose. SMART-AVI will not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance or use of this material. No part of this document may be photocopied, reproduced, or translated into another language without prior written consent from SMART-AVI, Inc.

## WHAT'S IN THE BOX

WHAT'S IN THE BOX		
<i><b>PART NO.</b></i>	<i><b>QTY</b></i>	<i><b>DESCRIPTION</b></i>
SM-DPN-4S-S	1	4-Port DisplayPort KVM Switch with Audio and USB 2.0 Support.
PS12VDC2A	1	12V DC, 2A power adapter with center-pin positive polarity.
	1	Quick Start Guide

## EDID LEARN

The KVM is designed to learn a connected monitor's EDID upon power up. In the event of connecting a new monitor to the KVM, a power re-cycle is required.

## SYSTEM CONTROL

**There are three ways to control the SM-DPN:** Keyboard HotKeys, RS-232 Serial Commands, and Front Panel Buttons.

The settings for the serial connection are as follows: Baud rate: **115200**; Data Bits: **8**;

**Parity: None**; Stop **Bits: 1**;

**Flow Control: None.**

The following commands can be used:

<b>Command</b>	<b>HotKey</b>	<b>RS-232</b>
Switch KVM	[CT][CT][#]<CR>	//m[#]<CR>
Audio Only	[CT][CT]a[#]<CR>	//a[#]<CR>
KM Only	[CT][CT]c[#]<CR>	//c[#]<CR>
USB Only	[CT][CT]u[#]<CR>	//u[#]<CR>
Learn EDID	[CT][CT]e <CR>	//e <CR>
SW Reset	[CT][CT]r	//r <CR>
Status Query	N/A	//?? <CR>
Current HK Trigger	[Alt][Alt][Alt]x 0 <CR>	//hk <CR>
Update HK Trigger	[HK][HK] x[1 2 3] <CR>	N/A

## Chart Key

[CT] =

Ctrl = Carriage Return (Enter Key) [HK] = Current Hot Key Trigger

1. = Ctrl (Default) |


2. = Shift |

3. = Scroll Lock

## HARDWARE INSTALLATION

1. Ensure that power is turned off or disconnected from the unit and the computers.
2. Use DP cables to connect the DP output ports from each computer to the corresponding DP IN ports of the unit.
3. Use a USB cable (Type-A to Type-B) to connect a USB port on each computer to the respective USB ports of the unit.
4. Optionally connect a stereo audio cable (3.5mm to 3.5mm) to connect the audio output of the computers to the AUDIO IN ports of the unit.
5. Connect monitors to the DP OUT console ports of the unit using DP cables.
6. Connect a USB keyboard and mouse in the two USB console ports.
7. Optionally connect stereo speakers to the AUDIO OUT port of the unit.
8. Finally, power on the KVM by connecting a 12VDC power supply to the power connector, and then turn on all the computers.

**Note:** You can connect up to 4 computers to the 4 port KVM.

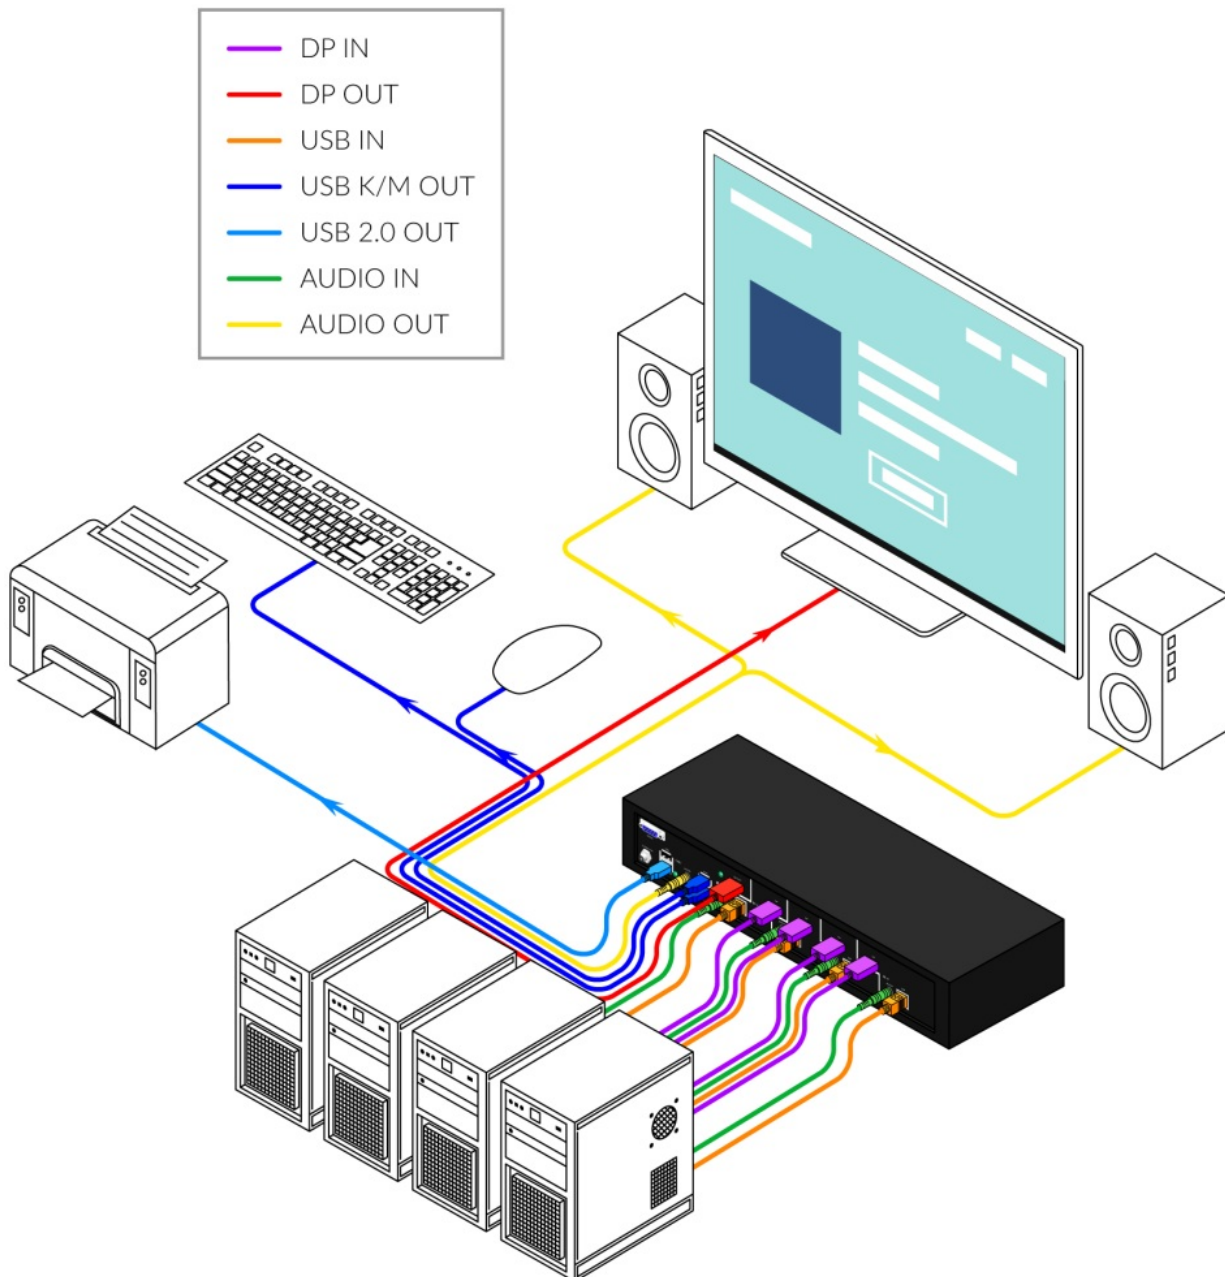

## TECHNICAL SPECIFICATIONS

VIDEO	
Format	DisplayPort
Maximum Pixel Clock	165 MHz
Input Interface	(4) DisplayPort
Output Interface	(1) DisplayPort
Resolution	3840 x 2160 @ 30 Hz
DDC	5 volts p-p (TTL)
Input Equalization	Automatic
Input Cable Length	Up to 20 ft.
Output Cable Length	Up to 20 ft.
USB	
Signal Type	USB 2.0, 1.1, and 1.0 w/ internal hub
Input Interface	(4) USB Type B
Output Interface	(2) USB 1.1 Type A for KVM Devices(2) USB 2.0 Type A Transparent
AUDIO	
Input	(4) 3.5 mm Stereo Audio
Output	(1) 3.5 mm Stereo Audio
POWER	
Power Requirements	12V DC, 2A power adapter with center-pin positive polarity
ENVIRONMENT	
Operating Temp	32° to 104° F (0° to 40° C)
Storage Temp	-4° to 140° F (-20° to 60° C)
Humidity	0-80% RH, non-condensing
CONTROL	
Front Panel	Push Buttons with LED indicators
RS-232	Via Serial @ 115200 bps
Hot Keys	Via Keyboard
OTHER	
Emulation	Keyboard, Mouse and Video

**Toll Free:** (800) AVI-2123  
**Phone:** (702) 800-0005  
2455 W. Cheyenne Ave, Suite 112

North Las Vegas, NV 89032

[smartavi.com](http://smartavi.com)


A full Manual can be downloaded from

[www.smartavi.com/SM-DPN-4S/](http://www.smartavi.com/SM-DPN-4S/)



---

## Documents / Resources

	<p><a href="#">SMARTAVI SM-DPN-4S 4 Port Display Port KVM Switch</a> [pdf] User Guide SM-DPN-4S 4 Port Display Port KVM Switch, SM-DPN-4S, 4 Port Display Port KVM Switch, Port Display Port KVM Switch, Display Port KVM Switch, Port KVM Switch, KVM Switch, Switch</p>
---	---

## References

- [Home - SmartAVI](#)
- [SM-DPN-4S - SmartAVI](#)
- [User Manual](#)