

SMARTPEAK
QR70 Android
POS Display



SMARTPEAK QR70 Android POS Display User Manual

[Home](#) » [SMARTPEAK](#) » SMARTPEAK QR70 Android POS Display User Manual 

Contents

- [1 SMARTPEAK QR70 Android POS Display](#)
- [2 Specifications](#)
- [3 Product overview](#)
- [4 Function operation instructions](#)
- [5 Precautions and after-sales service](#)
- [6 FAQ](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)



SMARTPEAK QR70 Android POS Display




Specifications

- **Product:** QR70 Display
- **Version:** V1.1
- **Interface:** Button interface
- **Indicator Type:** Order indicator, Charging indicator, Low battery indicator, Network LEDs

Please read this manual before installation.

Product overview

Product button interface description

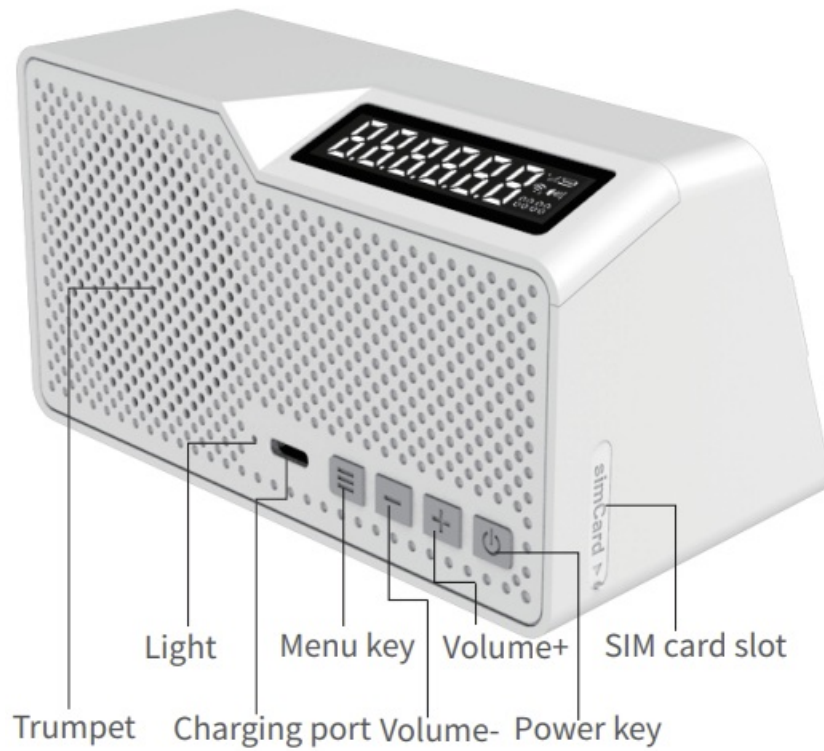

Function operation instructions

Description of key functions

Key description		Function description
Volume“+”	Short press	Press it to increase the volume
	Long press	Play latest transaction audio
Volume“-”	Short press	Press it to decrease the volume
	Long press	Switch between Mobile data and Wi-Fi network connection
Menu key	Short press	Play battery value and network status
	Long press	Long Press and hold 3sec to enter Wi-Fi connection settings *
Power key	Long press	Press and hold 3sec to Power on/off device

Description of the indicator

Type	Illustrate
Order indicator	The green light flashes
Charging indicator	Shutdown and charging: charging red light on, full red light off, green light on; The green light goes off after unplugging the USB charging cable
	Charging at startup: charging red light on, full red light off, green light on; The green light goes off after unplugging the USB charging cable.
	After that, the network indicator is lit (the indicator status is not broken during charging.)
Low battery	The battery level is less than 10%, the red light flashes, and every 3 minutes it announces "Low battery, please charge"
Network LEDs	During the network connection, the green light flashes; During the server connection, the blue light flashes; The blue light is solid after the server connection is successful

Network Settings *

Long press "Volume-" key to switch between Mobile Data or Wi-Fi connection (optional).

Steps for wifi mode configuration

Steps

1. Long-press press "Volume-" key to switch work on Wi-Fi connection when listening to an audio of "Wi-Fi connection model".
2. Long press "Menu" key to enter AP connection setup mode when listening to the audio of "AP connection setting".
3. Use a smart mobile phone, open the Wi-Fi, and connect to QR70_SN xxxxxx. xxxxxx is the last 6 bits of the DSN code devices.)
4. Mobile phone scan the QR code(Figure 1) or input: <http://192.168.1.1:80/> on browser to open setting surface.
5. Input Wi-Fi connection name, and password and confirm it(Figure 2). if connection success, it will get below Figure 3).



Figure 1

AP network description

Figure 2

**WiFi network distribution
is successful**

Figure 3

Precautions and after-sales service

Use Notes

The operating environment

- Please do not use this device in thunderstorm weather, because thunderstorm weather may result in the equipment failure, or click the danger.
- Please put the equipment from rain, moisture, and liquids containing acidic substances, or it will cause the electronic circuit boards to corrode.
- Don't store the device in overheating, high temperatures, or it will shorten the life of the electronic devices.
- Don't store the device in a too cold place, because when the device's temperature rises, moisture can form inside, and it might damage the circuit board.
- Do not attempt to disassemble the device; non-professional personnel handling can damage it.
- Do not throw, beat, or intense crash the device, because rough treatment will destroy the device's parts, and it may cause the device failure. Children's health
- Please put the device, its components, and accessories in the place where children can't touch.
- This device is not toys, so children should be under adult supervision to use it.

The charger safety

- The rated charge voltage and current of QR70 are DC 5V/1A. Please select the power adapter of appropriate specifications when charging the product.
- To buy a power adapter, choose an adapter that is BIS certified and meets the device specifications.

- When charging the device, power sockets should be installed near the device and should be easy to hit. And the areas must be far away from the debris, flammable or chemicals.
- Please do not fall or crash the charger. When the charger shell is damaged, please ask the vendor for replacement.
- If the charger or the power cord is damaged, please do not continue to use, so as to avoid electric shock or fire.
- Please do not fall or crash the charger. When the charger shell is damaged, please ask the vendor for a replacement.
- Please do not use wet hand to touch the power cord, or with power supply cable way out the charger.

Maintenance

- Don't use strong chemicals or powerful detergents to clean the device. If it is dirty, please use a soft cloth to clean the surface with a very dilute solution of glass cleaner.
- Damage caused by water, unauthorized dismantling of the device or external forces will cause the equipment not to be repaired.

E-waste Disposal Declaration

E-Waste refers to discarded electronics and electronic equipment (WEEE). Ensure that an authorized agency repairs devices when needed. Do not dismantle the device on your own. Always discard used electronic products, batteries, and accessories at the end of their life cycle; use an authorized collection point or collection center. Do not dispose of e-waste in garbage bins. Do not dispose of batteries into household waste. Some waste contains hazardous chemicals if not disposed of properly. Improper disposal of waste may prevent natural resources from being reused, as well as release toxins and greenhouse gases into the environment. Technical support is provided by the Company's regional Partners.


- www.vizpay.in
- contact@vizpay.in

FAQ

Q: How do I know if the battery is low?

A: When the battery level is less than 10%, the red light will flash, and every 3 minutes, it will announce "Low battery, please charge."

Documents / Resources

	<p>SMARTPEAK QR70 Android POS Display [pdf] User Manual QR70, QR70 Android POS Display, QR70, Android POS Display, POS Display, Display</p>
---	---

References

- [User Manual](#)