



SMARTRO SC31B Digital Projection Alarm Clock Instruction Manual

[Home](#) » [SMARTRO](#) » SMARTRO SC31B Digital Projection Alarm Clock Instruction Manual

Contents [[hide](#)]

- 1 SMARTER SC31B Digital Projection Alarm Clock
- 2 Preface
- 3 Attention
- 4 Package Content
- 5 Product Specification
- 6 Function Introduction
- 7 Getting Start
- 8 Manual Setting
- 9 Alarm Function Setting
- 10 Projection Setting
 - 10.1 Temporary Time & Temp Projection
- 11 Backlit Adjustment
- 12 Wireless Outdoor Temperature Sensor
- 13 Temperature
- 14 Weather Forecast
- 15 Troubleshooting
- 16 After-sales Support
- 17 Waste Disposal
- 18 Download Resources
- 19 FAQ'S
- 20 VIDEO
- 21 Documents / Resources
- 22 Related Posts

SMARTRO

SMARTER SC31B Digital Projection Alarm Clock



SMARTER SC31B Digital Projection Alarm Clock

Preface

Thanks for choosing this device from SMARTRO.

Before You Start Using It

- Make sure to read the instruction manual carefully. This information will help you to familiarize yourself with your new device, to learn all of its functions, and to get advice in the event of problems.
- Following the instructions will prevent damage to your device.
- We shall not be liable for any damage occurring as a result of not-following of these instructions.
- Please keep this instruction manual for future reference.

Attention

- Please follow the instructions for operation.
- Please use the original or manufacturer-specified attachments or accessories.
- Do not disassemble the product, so as not to cause trouble or safety hazards.
- Do not place any items on top of the product or damage the product.
- Do not place the product near water source or in a damp place.
- Please terminate use immediately upon damage which is caused as a result of improper use or repair by a nonfactoryapproved technician.
- Do not place the product in direct sunlight and high temperature places (radiator, electric heater, stove, etc.).
- Keep the product away from strong electromagnetic waves, strong static electricity, or moisture and

condensation.

- Use by children below 10 years old should be supervised by an adult.
- Clean your device with a soft damp cloth. Do not use solvents or scouring agents.


Package Content

- Projection alarm clock
- Instruction manual
- DC power adapter
- Wireless remote sensor


Product Specification

- Projection time and temperature onto a wall or ceiling (digital)
- Two alarms with Snooze function
- Calendar (up to the year of 2099)
- 12/24 hour format is alternative
- Multiple color backlit
- Temperature: Indoor temperature: -9.9°C -50°C (14 °F -122 °F) Outdoor temperature: -40°C -70°C (-40 °F - 158 °F) Temperature alternatively in°C or °F
- Wireless remote sensor Wall mounting or table stand 200 ft transmission range in an open area
- Weather forecast
- Battery: LR03 AAA battery x2 (not included)
- DC power adapter: 5V 1.2A
- USB charger function

Function Introduction

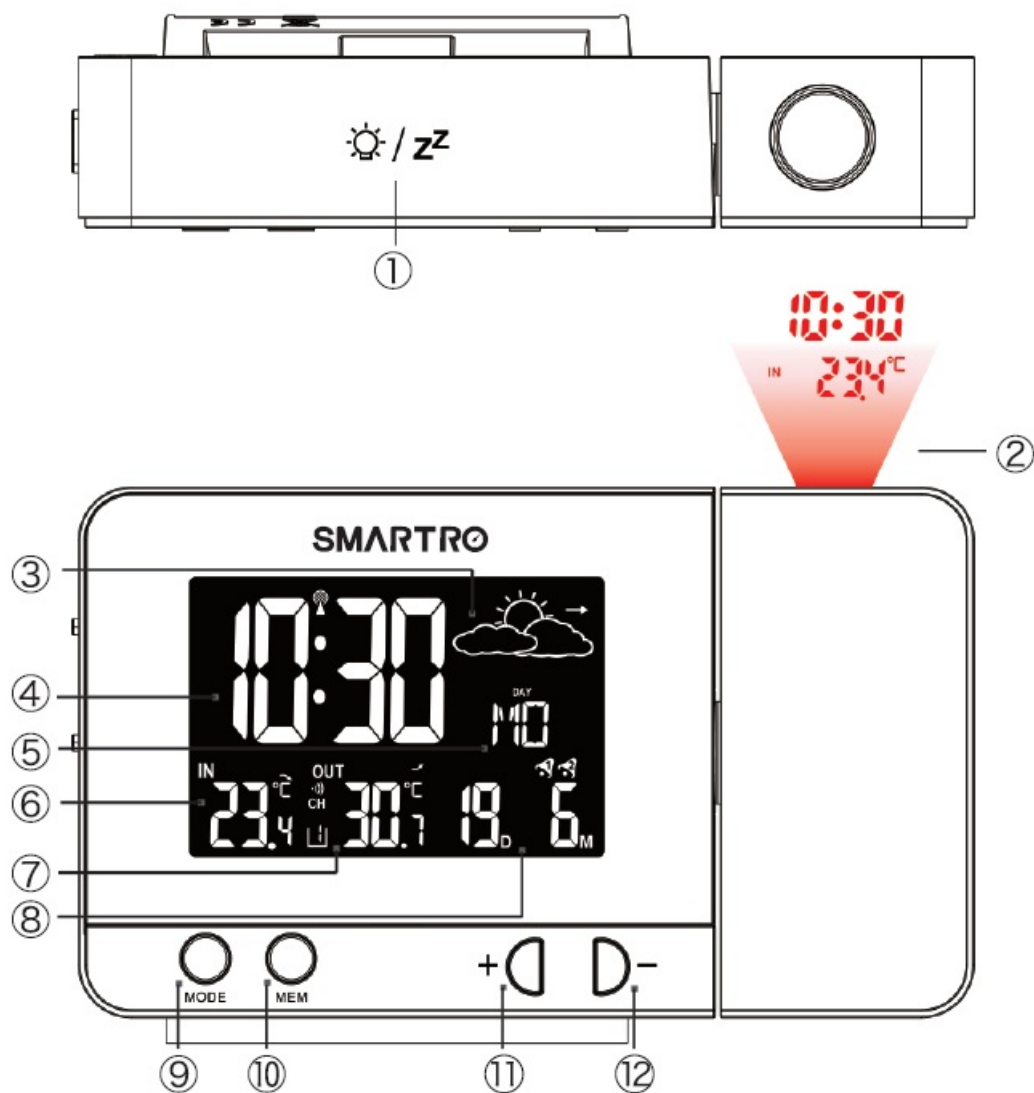

1. CD " - / zZ " Snooze touch button @ Projection display
2. Weather forecasting
3. Time
4. Week
5. Indoor temperature
6. Outdoor temperature
7. Month and date
8. "MODE" button
9. "MEM" button
10. "+" button
11. "-" button

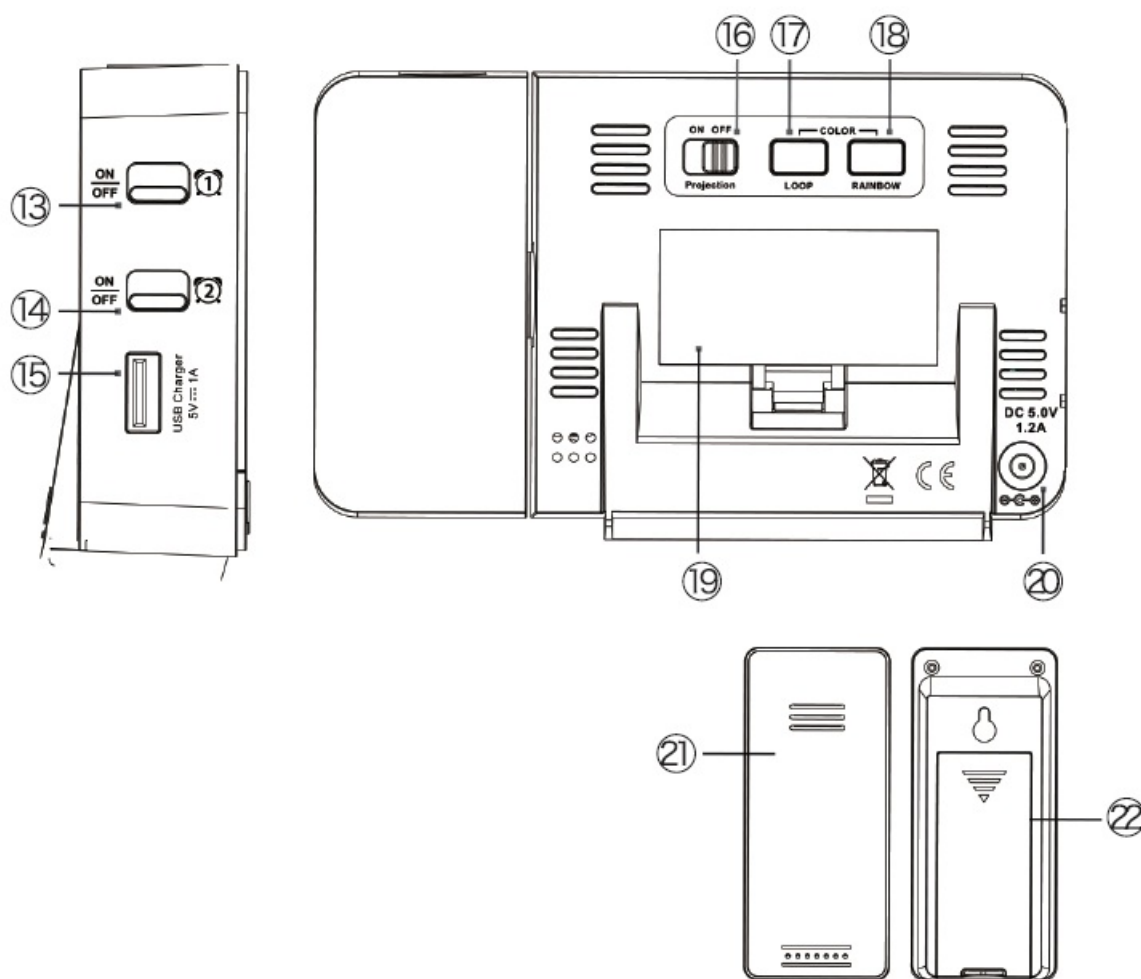

12. Alarm I on/off switch
13. Alarm 2 on/off switch
14. USB charging port
15. Projection on/off switch
16. "LOOP" button
17. "RAINBOW" button
18. Battery compartment
19. DC power interface
20. Wireless remote sensor
21. Wireless remote sensor battery compartment

Getting Start

- Open the battery compartment and insert two new 1.5V AAA batteries into the clock. Ensure that the battery polarities ["+" and "-"] are correct. Close the battery compartment.
- When insert the batteries, all the symbols on the LCD display will light up for 3 seconds. You will hear a "di di di" sound. The projection clock starts to detect indoor temperature. Connect the clock with DC power adapter at the same time.
- Insert 2 new 1.5V AAA batteries to wireless remote sensor. Ensure that the battery polarities ["+" and "-"] are correct. Close the battery compartment.

- The projection clock starts to make a connection with the outdoor remote sensor, displayed by a flashing)))))symbol in the “OUT” display area on the LCD screen. This procedure will take about 3 minutes.

Manual Setting

- Long press “MODE” button, the Year display starts to flash. Press “+” / “-” button to adjust year. Press “MODE” button to confirm the setting.
- The Month display starts to flash. Press “+” / “-” button to adjust month. Press “MODE” button to confirm the setting.
- The Date display starts to flash. Press “+” / “-” button to adjust date. Press “MODE” button to confirm the setting.
- The symbol of Month and Date starts to flash. Press “+” / “-” button to choose between Month/Date and Date/Month. Press “MODE” button to confirm the setting.
- The language selection of the Weekday starts to flash. Press “+”/ “-”button to select a language. Press “MODE” to confirm the setting.
- Language abbreviations change from one language to another: German (GE), English (EN), French (FR), Italian (IT), Spanish (SP), and Dutch (DU), and Danish (DA).

Language	Sunday	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday
German, GE	so	MO	01	MI	DO	FR	SA
English, EN	SU	MO	TU	WE	TH	FR	SA
French, FR	DI	LU	MA	ME	JE	VE	SA
Italian, IT	DO	LU	MA	ME	GI	VE	SA
Spanish, SP	DO	LU	MA	MI	JU	VI	SA
Dutch, DU	zo	MA	DI	WO	DO	VR	ZA
Danish, DA	so	MA	TI	ON	TO	FR	LO

- The symbol of 12H or 24H starts to flash. Press “+” / “-” button to choose 12H or 24H system. Press “MODE” to confirm the setting.
- The Hour display starts to flash. Press “+” / “-” button to I O adjust hour. Press “MODE” to confirm the setting.
- The Minute display starts to flash. Press “+” / “-” button o adjust minute. Press “MODE” button to confirm the setting.
- The symbol of temperature unit starts to flash. Press “+” The symbol of 12H or 24H starts to flash. Press “+” / “-” button to choose 12H or 24H system. Press “MODE” to confirm the setting.
- The Hour display starts to flash. Press “+” / “-” button to I O adjust hour. Press “MODE” to confirm the setting.
- The Minute display starts to flash. Press “+” / “-” button to adjust minute. Press “MODE” button to confirm the setting.
- The symbol of temperature unit starts to flash. Press “+” I”-” button to choose the temperature unit (C| °F). Press “MODE” button to confirm the setting.
- The symbol of weather forecast pattern starts to flash. Press “+”/”-” button to select the current weather pattern.

Press "MODE" to confirm the setting and end the setting procedure.





- Short press "MODE" button to switch the display of calendar/ Alarm 1 / Alarm 2.

Please take note of the following

- The clock will automatically quit the manual setting mode o clock mode if no button is pressed within 20 seconds.
- Any restart or power break will cause a loss of the previous manual setting, please insert batteries in the clock to keep the setting.

Alarm Function Setting

Activate/Deactivate the Alarm Function

- When the switch of alarm 1 or alarm 2 is moved to the "ON" position, the symbol of " ~ "  or " ~ "  appears on the LCD display. The alarm function will be activated.
- When the switch of alarm 1 or alarm 2 is moved to the "OFF" position, the symbol of " ~ "  or " ~ "  disappears. The alarm function will be deactivated.

Manual Setting of the Alarm

- Long press "MEM" button, the hour display of Alarm starts to flash. Press "+" / "-" button to set the hour. Press "MEM" button to confirm the setting.
- The minute display of the Alarm 1 starts to flash. Press "+" / "-" button to set the minute. Press "MEM" button to confirm the setting.
- The hour display of the Alarm 2 starts to flash. Press "+" / "-" button to set the hour. Press "MEM" button to confirm the setting.

The minute display of the Alarm 2 starts to flash. Press "+" / "-" button to set the minute. Press "MEM" button to confirm the setting and end the manual setting procedure. Please take note of the following: The clock will automatically switch from setting mode to normal mode if no button is pressed within 20 seconds.

Turn off the Alarm Tone

- Alarm tone will automatically turn off after 2 minutes or you can press any button except the "·0· / zZ" to turn off the alarm tone. The alarm will repeat automatically at the same time of the next day.

Snooze Function

- You can activate the Snooze function by touching the "·O· / zZ" when the the alarm is ringing. The symbol of "·:?" or " ~ " starts to flash, then alarm will ring again in 5 minutes.
- Under the Snooze function activated status. Press any button except the "·O· / zZ" to turn off the Snooze function.

- If one alarm in Snooze function, the other alarm rings, it automatically stops the Snooze function of the first alarm. Please take note of the following:
- The alarm will keep ringing for 2 minutes if you do not deactivate it by pressing any button. In this case the alarm will repeat automatically after 24 hours.
- The ring of the alarm changes 4 times in total during the past 2 minutes.

Projection Setting

Note: Switch on the projection button for further operation.

Temporary Time & Temp Projection

- When the clock is powered by batteries (not included), by touching "·O· / zZ", the projection will stay on for a few seconds, then the projection will turn out automatically.

Permanent Time & Temp Projection

- When the clock is powered by power adapter, the projection will always light up.
- Long press "-" button to adjust the projection angle by 180°.
- The suggested distance of projection is 3.3 – 9.8 ft (1 – 3 m). When there is no light at night, the clock can clearly display the time and temp on the wall or ceiling.
- If you want to turn off the projection, switch off the button ounted on the back. Please take note of the following:
- The power is not enough when using an old battery, please connect the power adapter or replace with new batteries as soon as possible.

Backlit Adjustment

Backlit Dimmer

- When the clock is powered by batteries, touch "·g-/ zZ" to light up the backlit for a few seconds.
- When the clock is powered by DC power adapter, the battery will automatically disconnect the power supply, the backlit will always light up.
- Press "-" button to adjust 4 backlit brightness, light – medium-low – out.
- Touch "-:Q.-/ zZ" to light up the backlit for a few seconds in out status. Please take note of the following:
- The power is not enough when using an old battery, please connect the power adapter or replace with new batteries as soon as possible.

Multiple Color Backlit

- When the clock is powered by a power adapter, press the "LOOP" button once, the backlight will change the color gradually. Press "LOOP" button again to select a backlit color.
- Press and hold the "LOOP" button for more than 2 seconds, the color of the backlight will change fast. Release the "LOOP" button when you have selected your favorite color.
- When the backlit is on, press the "RAINBOW" button to change the color. There are 8 colors selectable: white, red, orange, yellow, green, cyan, blue, and purple.

Wireless Outdoor Temperature Sensor

- When the clock weather station receives signals from the wireless sensor successfully, outdoor temperature will display on the screen.
- Press the “+” button to switch different channel to channel 1.
- If the clock weather station fails to receive signal from wireless remote sensor (“-“ will be displayed on the LCD), long press “+” button to receive transmission manually. The outdoor temperature will show a flashing RF antenna symbol, the clock weather station will try to receive signals from the wireless remote sensor again. Please take note of the following:
- If the outdoor temperature displayed a “-“, please switch the transmission channel to channel

Temperature

The Display of the Temperature and Temperature Trend

- The current indoor temperature and the temperature trend (indoor) are shown on the LCD display.
- After connected with the wireless remote sensor successfully, the outdoor temperature and the temperature

trend (outdoor) can be shown on the LCD display. You may see the following symbols:



- The temperature is rising.
- The temperature remains constant.
- The temperature is falling.

Maximum/Minimum Temperature Records

- To change the data of indoor/outdoor maximum, minimum temperature, press the “MEM” button.
- Press “MEM” button once to show the maximum temperature values.
- Press “MEM” button twice to show the minimum temperature values.
- Press “MEM” button three times to return to the current temperature levels.
- To reset the maximum and minimum temperature values, press and hold the “-” button for more than 2 seconds during checking the maximum/minimum temperature. “-” will be displayed on both indoor and outdoor temperature columns, which indicates the maximum and minimum temperature records were reset successfully. Please take note of the following:
- If the temperature reading is below the set point, the LL.L will be displayed.
- If the temperature reading is above the set point, the HH.H will be displayed.

Outdoor Temperature Frost Alarm

- When the outdoor temperature is between $-1\text{ }^{\circ}\text{C} - 3\text{ }^{\circ}\text{C}$ ($30\text{ }^{\circ}\text{F} - 37\text{ }^{\circ}\text{F}$) , the frost alarm function will be



activated and a flashing “!

Weather Forecast

Weather Forecast Statement

- The clock weather station calculates weather forecast for the next 12 hours based on the barometric pressure trend.
- The clock weather forecast can't be compared with the professional weather services supported by satellites and high-performance computers. It provides an approximate indication of current developments.
- Please take the weather forecast from local weather station as authoritative.

The Symbols of Weather Forecast



sunny	slightly cloudy	cloudy	rainy	heavy rainy	snowy

The Weather Station Can Display the Barometric Pressure Trend

You may see the following symbols:

- The barometric pressure will rise.
- The barometric pressure will remain constant.
- The barometric pressure will fall.

Low Battery

- If the LCD display shows a symbol of “!_”  ... at “IN” column, please replace the projection clock battery as soon as possible.
- If the LCD display shows a symbol of “!_”  ... , at “OUT” column, please replace the wireless remote sensor battery as soon as possible.

USB Charger

- When the clock is powered by DC power adapter, the USB socket can be used for charging smart phone and

other devices.

Troubleshooting

No projection	<ol style="list-style-type: none">1. Switch on the projection on the clock back.2. Connect the clock with DC power adapter.
Projection not clear.	<ol style="list-style-type: none">1. Keep the projection distance to 3.3 – 9.8 ft (1 – 3m) .2. Clear projection is only visible at dark night.

Projection or the backlit does not stay on continuously.	Connect the clock with DC power adapter.
Backlit too bright or too dark.	Press “-” to adjust 4 brightness, light – medium – low – out.

Can't receive the outdoor temperature.	<ol style="list-style-type: none"> 1. Replace battery for outdoor remote sensor. 2. Switch the transmission channel to channel 1 . 3. Long press “+” button to receive transmission manually.
<p>Fuzzy projection</p> <p>/ Missing pixels</p> <p>• t . . /</p> <p>proJec lOn image</p> <p>USB charger does not</p> <p>work/Have trouble with manual setting.</p>	<p>Contact after-sales . .</p> <p>· service</p> <p>Email: support@smartrostore.com Phone Number. 323-287-5798</p>

After-sales Support

Please contact us if your device fails to work despite these measures or your experience with us is less than perfect in anyway. Or Join our Instagram or Facebook group for more support and discount information.

- support@smartro.co
- LI: + I (323)287-5798
- Group: <http://bit.ly/smartro>
- smartro_OI

Waste Disposal

- This product has been manufactured using high-grade materials and components which can be recycled and reused.
- As a consumer, you are legally required to take them to your retail store or to an appropriate collection site

depending on national or local regulations in order to protect the environment.

- The symbols for the heavy metals contained are: Cd=cadmium, Hg=mercury, Pb=lead.
- Please do not dispose of this instrument in household waste. The user is obligated to take end-of-life devices to a designated collection point for the disposal of electrical and electronic equipment, in order to ensure environmentally compatible disposal.

Download Resources

- [SMARTRO SC31B Digital Projection Alarm Clock](#) [pdf] Instruction Manual SC31B, 2AY3B-SC31B, 2AY3BSC31B, SC31B Digital Projection Alarm Clock, SC31B, Digital Projection Alarm Clock
- Read more: <https://manuals.plus/smartro/sc31b-digital-projection-alarm-clock-manual#ixzz7kSAdRkJu>

FAQ'S

How do you set a Smartro alarm clock?

So very simply we'll hold the alarm button down and now it's going to flash for that. So i'll set this to let's say about 210 p.m and press alarm to get to the next thing.

Is there a way to check the backup battery's charge level?

Yes, there is a way to check it. Press and hold the "Mode" button for about 3 seconds until "BATT" appears on the screen. The display will show you how much charge is left in the backup battery.

What is the difference between "Time" and "Date"?

When you set up your alarm clock, you can choose whether you want to set up your alarm clock based on time or date. If you choose "Time", you will be able to set up your alarm clock based on time only (e.g., 7:00 AM). If you choose "Date", you will be able to set up your alarm clock based on date only (e.g., January 1). You can also choose both "Time" and "Date". In this case, your alarm clock will sound at 7:00 AM on January 1st every year.

How do I change my settings?

You can change your settings by pressing and holding the "Mode" button for about 3 seconds until "SETUP" appears on the screen. The display will show you how much charge is left in the backup battery. Then press any button except for the "Mode" button so that other settings appear on the screen (e.g., Time/Date). You can then change your settings by pressing any button except for the "Mode" button again so that other settings appear on the screen (e.g., Alarm Volume). Finally, press and hold the "Mode" button for about 3 seconds until "SETUP" disappears from the screen so that your changes are saved and exit from Setup Mode.

How do you turn off the alarm on a projection clock?

ACTIVATE/DEACTIVATE TIME ALARM

Press the ALARM button once to view alarm time. Press the ALARM button again to activate the alarm. Bell icon appears. Press the ALARM button again to deactivate the alarm.

Why does my alarm vibrate but not sound?

To fix: Open the Clock App > Click the three dots menu > Settings > make sure that "VIBRATE FOR ALARMS AND TIMERS" is toggled off.

Why are my projection alarm clocks not working?

To clear the cache and data for the Clock app, tap on Settings > Apps > Clock. Alternatively, long-pressing the Clock app on your phone screen and selecting App Info also does the trick. Whichever way you decide, your next move is to select Storage > Clear Cache, and this should ensure your Android alarm works again.

How do I set the date and time on my alarm panel?

System. Now you just press the pound key and that's pound out then give it a second and the time will display. So here is how you set your time. Notice it's showing p.m. if I didn't put in military.

Can I replace projection alarm battery?

Alarm batteries need to be changed every 3 to 5 years. Your home's security system should alert you when the battery needs to be changed. It's normal for the keypad to state "low battery" or it will chirp daily to alert you.

What is the point of a projection alarm clock?

The genius behind the projection alarm clock is that you can read the time on the clock face, or you can simply look up at your wall or ceiling to see the time projected in a clearly visible image.

How do I change my projection settings?

While holding down the Windows Logo key, Press P key once.
Continue holding the Windows Logo key, press P repeatedly until the desired option is selected.
Release the Windows Logo key, click on the desired option with mouse cursor.


Why is my projection not working?

Ensure the projector is properly plugged into a working outlet. Check the temperature lights to make sure the device hasn't overheated and shut down. If you are using a remote control to turn on the projector, check the batteries. Be sure all of the projector latches are closed.



SMARTER SC31B Digital Projection Alarm Clock
www://smartro.co/

Documents / Resources

	<p>SMARTRO SC31B Digital Projection Alarm Clock [pdf] Instruction Manual SC31B, 2AY3B-SC31B, 2AY3BSC31B, SC31B Digital Projection Alarm Clock, SC31B, Digital P rojection Alarm Clock</p>
---	---