



smartwares FCL-76015 LED Work Light with Bluetooth Speaker User Guide

[Home](#) » [smartwares](#) » smartwares FCL-76015 LED Work Light with Bluetooth Speaker User Guide 




FCL-76015 LED Work Light with Bluetooth Speaker
User Guide

Contents

- [1 FCL-76015 LED Work Light with Bluetooth Speaker](#)
- [2 SPECIFICATIONS](#)
- [3 PARTS DESCRIPTION](#)
- [4 OPERATE THE LIGHT](#)
- [5 BLUETOOTH PAIRING](#)
- [6 CUSTOMER SERVICE](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

FCL-76015 LED Work Light with Bluetooth Speaker

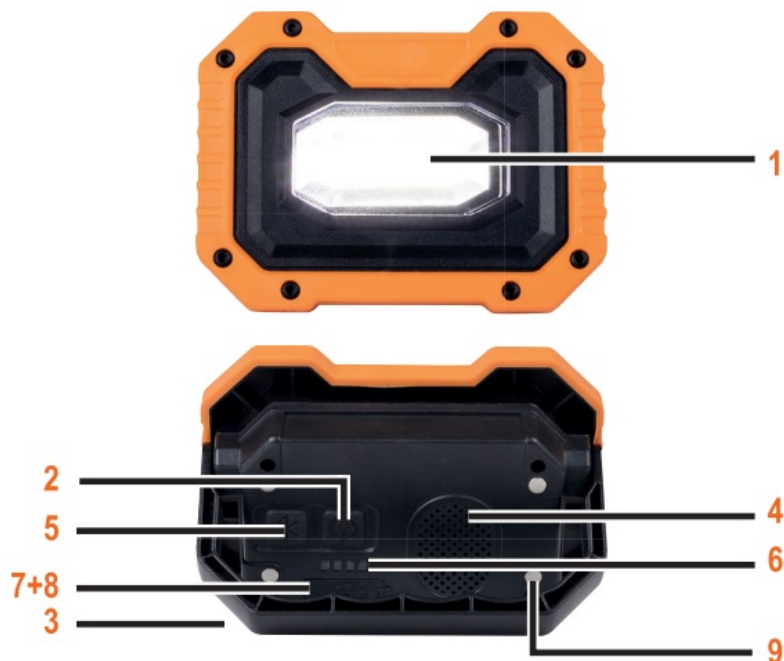

SPECIFICATIONS

RF Transmitter power: 4dBm

RF Power Control Range: 20dB

20dB Bandwidth: 950KHz

Adjacent Channel +2: -40dBm | -2: -38dBm

Transmit Power +3: -44dBm | -3: -35dBm

PARTS DESCRIPTION

1. LED light
2. Switch on/off LED light
3. Bracket
4. Thumb screws
5. Bluetooth speaker
6. Battery indication
7. Charging port (micro USB input)
8. USB output (power bank)
9. Magnets

OPERATE THE LIGHT

1. Loosen thumb screws on the side of the work light to adjust the angel of the bracket to one of the three possible positions.
2. Tighten the thumb screws to stabilize.
3. Use the switch to turn the LED light on and/or off

BLUETOOTH PAIRING

1. To activate Bluetooth on the work light plug it into the mains supply and turn the switch for Bluetooth to “on.

2. You will now hear a bleep sound.
3. Open Bluetooth settings on your audio device and pair with “Smartcards BT work light”.
4. You will hear a sound through the speaker that indicates the connection is successful.
5. You can now start your Bluetooth music streaming operation via your audio device.
6. To end the connection, you can turn the switch for Bluetooth to “off”, or un-plug the work light from the mains power.

NOTE: The speaker and LED light work separately. Therefore, you do not need to switch on the LED light if you want to play music via the work light.

Hereby, Smartcards Europe declares that the radio equipment type FCL-76011 is in compliance with Directive 2014/53/EU

The full text of the EU declaration of conformity is available at the following internet address:

www.smartwares.eu/doc

CUSTOMER SERVICE



smartwares® Europe	NL: 088 5940501 Lokaal tarief
	BE: 078 481094(NL) Lokaal tarief Europe BE: 078 481540(FR) Tarif local
Jules Verneweg 87 5015 BH Tilburg The Netherlands	FR: 0825 560 650 18ct/min
	DE: +49 (0) 1805 010762 14Ct./Min. dt. Festnetz, Mobil max. 42Ct./Min
www.smartwares.eu	UK: +44 (0) 345 230 1231
	ES: +34 938427589



Documents / Resources

	smartwares FCL-76015 LED Work Light with Bluetooth Speaker [pdf] User Guide FCL-76015, LED Work Light with Bluetooth Speaker, FCL-76015 LED Work Light with Bluetooth Speaker, FCL-76015 LED Work Light, LED Work Light, Work Light, Light, 936506
--	---

