



## smartwares SH4-99565AT Remote Controlled Socket Set Instruction Manual

[Home](#) » [smartwares](#) » smartwares SH4-99565AT Remote Controlled Socket Set Instruction Manual 



### SH4-99565AT Remote Controlled Socket Set Instruction Manual



SH4-99565AT  
Remote controlled socket set

 
#### Contents

- [1 PREPARATION BEFORE USE](#)
- [2 PAIRING THE REMOTE TO THE RECEIVER](#)
- [3 OPERATING RECEIVERS](#)
- [4 COIN / BUTTON CELL BATTERIES](#)
- [5 Specifications:](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

## PREPARATION BEFORE USE

### Insert battery


1

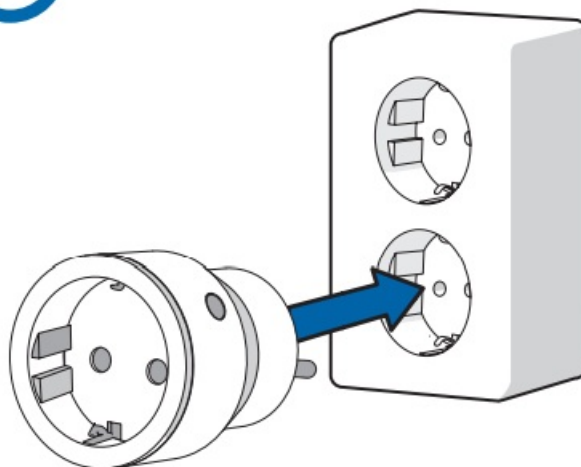

- Open the battery lid at the back of the remote (1) by turning it counter clockwise.
- Insert the battery with the negative polarity downward.  
To check if the battery is inserted correctly, briefly press a button on the remote. If the LED flashes, then the battery is inserted successful.
- Insert the receiver into the wall outlet.

## PAIRING THE REMOTE TO THE RECEIVER

2

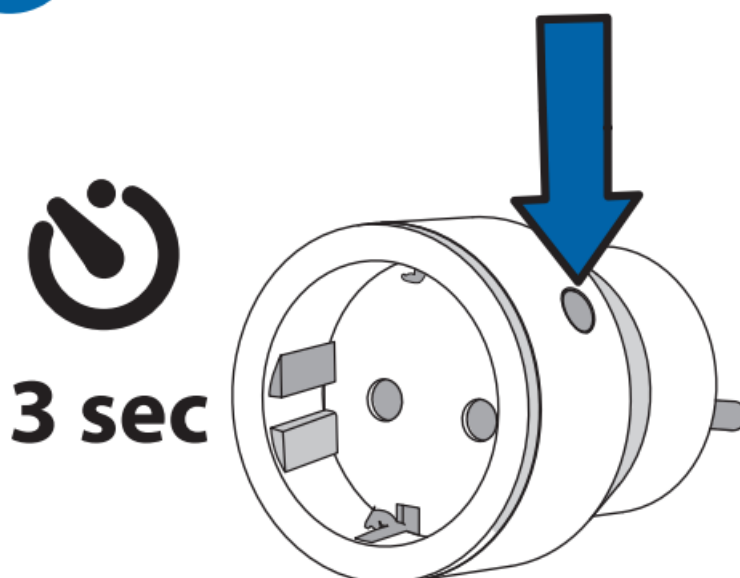


- Press the button on the receiver (2) for 3 seconds. When the LED starts to blink, the receiver is in pairing mode.

- Press any of the ON buttons on the remote. If the LED stops blinking and is constantly lit, the pairing was successful.

## OPERATING RECEIVERS

3


Flash

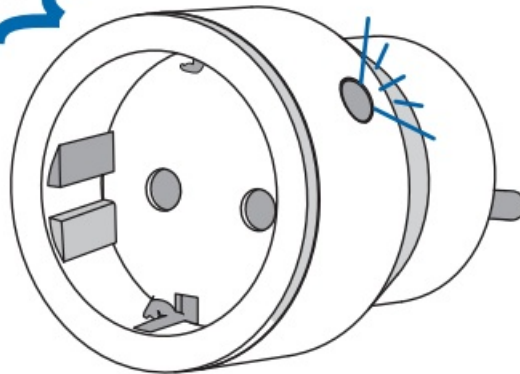

- A. Press the "ON" button on the remote control to turn on the receiver.
- B. Press the "OFF" button on the remote control to turn off the receiver.
- C. Press the "ON" button beneath ALL (on the remote control) to turn on all paired devices at the same time.
- D. Press the "OFF" button beneath ALL (on the remote control) to turn off all paired devices at the same time.

### Disconnecting a remote


4

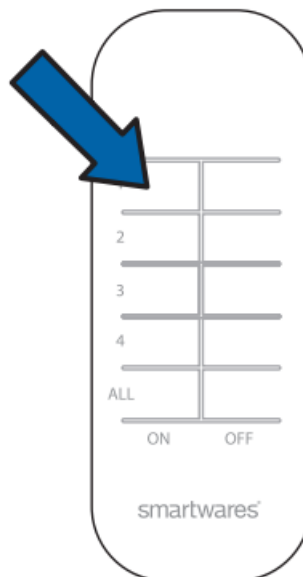

- A. Press and hold the button on the receiver for 3 seconds (3) and then release it. During this operation the LED starts to blink. Your receiver is now switched into the pairing mode. Attention: the LED should blink only after releasing the button. If the LED starts to blink while holding the button, there will be no pairing.
- B. Perform one of the following steps:
  - Press an "OFF" button on the row on the remote you wish to disconnect from a receiver. During this operation the LED on the receiver blinks quickly and then turns off.
  - Press the "OFF" button next to ALL (on the remote) to disconnect all links. During this operation the LED on the

receiver turns off.

To remove all pairing memories on the receiver:

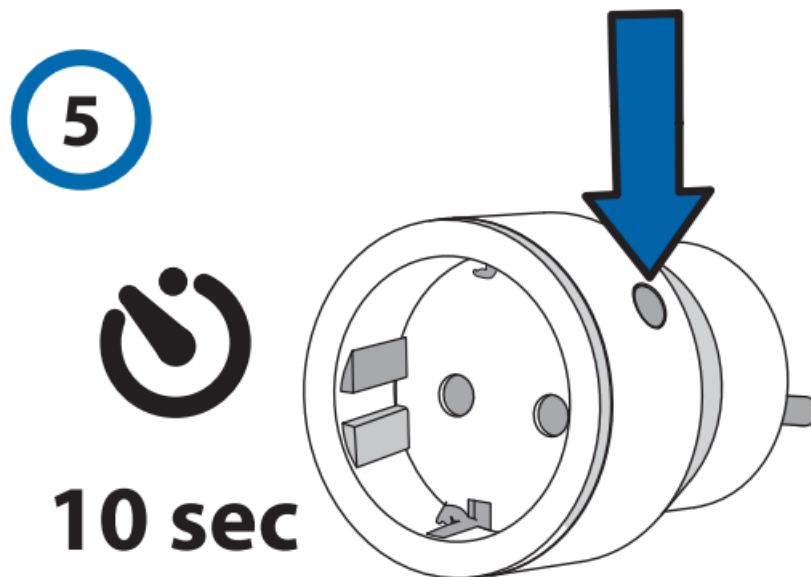

- Press and hold the button for more than 6 seconds (3).

### COIN / BUTTON CELL BATTERIES

**!** Do not ingest battery, risk of Chemical Burn Hazard. This product contains a coin / button cell battery. If the coin / button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.


- Keep new and used batteries away from children.
- If the battery compartment does not close securely stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

### Specifications:


- Remote control (SH4-90152)
- Battery: 3VDC, type CR 2032 (incl.)
- Radio Frequency: 433.92Mhz
- Maximum output: 0dBm
- Maximum range: 30m
- EU plug (SH4-90268)
- Maximum power: 2300 W
- AC input Voltage: 230V ~ 50Hz



smartwares° Europe  
Jules Verneweg 87 5015 BH Tilburg  
The Netherlands  
[www.smartwares.eu](http://www.smartwares.eu)

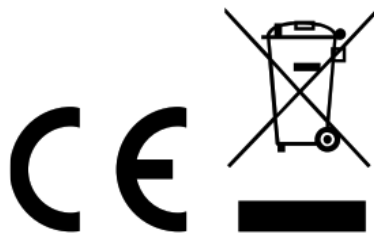

## Documents / Resources

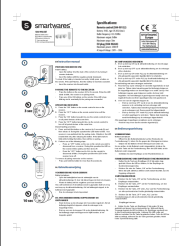	<p><a href="#">smartwares SH4-99565AT Remote Controlled Socket Set</a> [pdf] Instruction Manual SH4-99565AT Remote Controlled Socket Set, SH4-99565AT, Remote Controlled Socket Set, Controlled Socket Set, Socket Set, Set</p>
---	---

[Manuals+.](#)