



## Smoby OUT2915 Toboggan KS Slides Installation Guide

[Home](#) » [Smoby](#) » Smoby OUT2915 Toboggan KS Slides Installation Guide 

### Contents

- [1 Smoby OUT2915 Toboggan KS Slides](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 PARTS](#)
- [5 ASSEMBLY INSTRUCTION](#)
- [6 FAQ](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)
- [8 Related Posts](#)



**Smoby OUT2915 Toboggan KS Slides**



## Product Information

### Specifications

- **Brand:** Smoby Toys S.A.S.
- **Model:** Toboggan KS
- **Weight Capacity:** 50KG
- **Country of Origin:** France

### Product Usage Instructions

#### Assembly

1. Ensure adult supervision during assembly.
2. Use the provided parts and follow the assembly manual step by step.
3. Use a sharp tool if needed, while being cautious of hazardous points or edges.

#### Warnings

**WARNING:** Never allow a child to play without adult supervision.

**WARNING:** Toy must be assembled by an adult, as it contains hazardous points or edges. A sharp tool shall be used.


#### Contact Information

Importer: Lidl Srbija KD, Prva juzna radna 3, 22330 Nova Pazova, Republika Srbija


Email: [kontakt@lidl.rs](mailto:kontakt@lidl.rs)

Phone: 0800 300 199


 


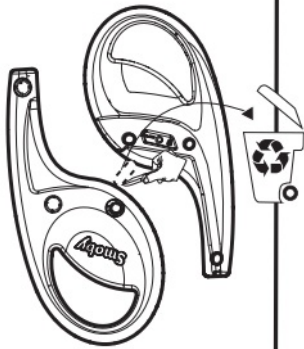


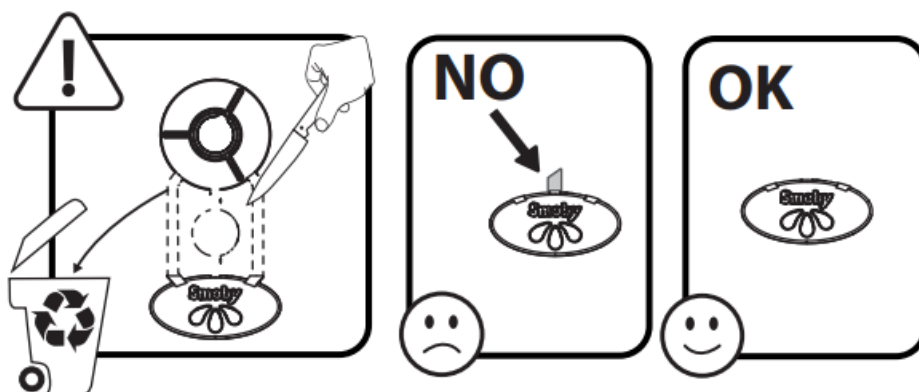

 


## WARNING

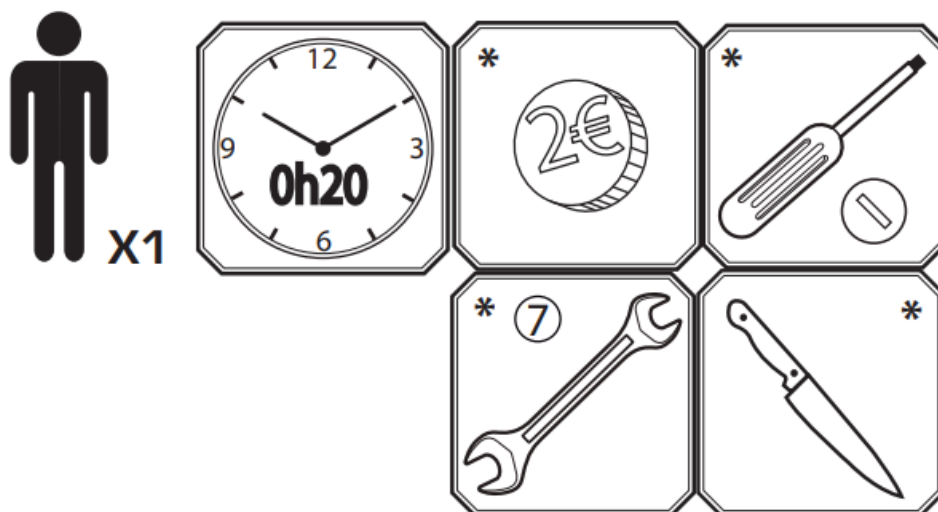




## NEED

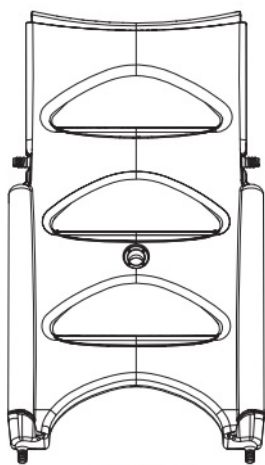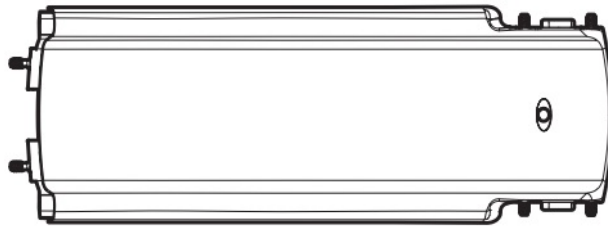

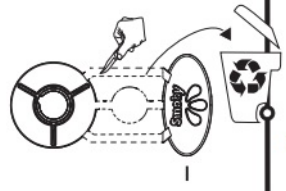
## PARTS




A		x1	D		OUT2915	x1			
	E			I14023	x1				
B		x1	F		S14008	x1			
C		x1							
			G			H		x1	
						J	I19073		
						K		I17019	x11
						L		Ø4x60 A2415000430	x1
						M		M4 A2415000431	x1
			N		A2415000432	x1			

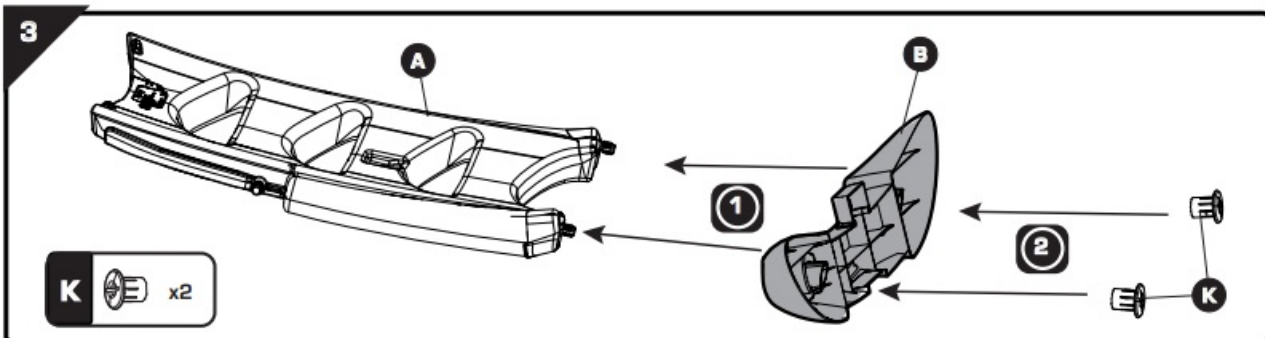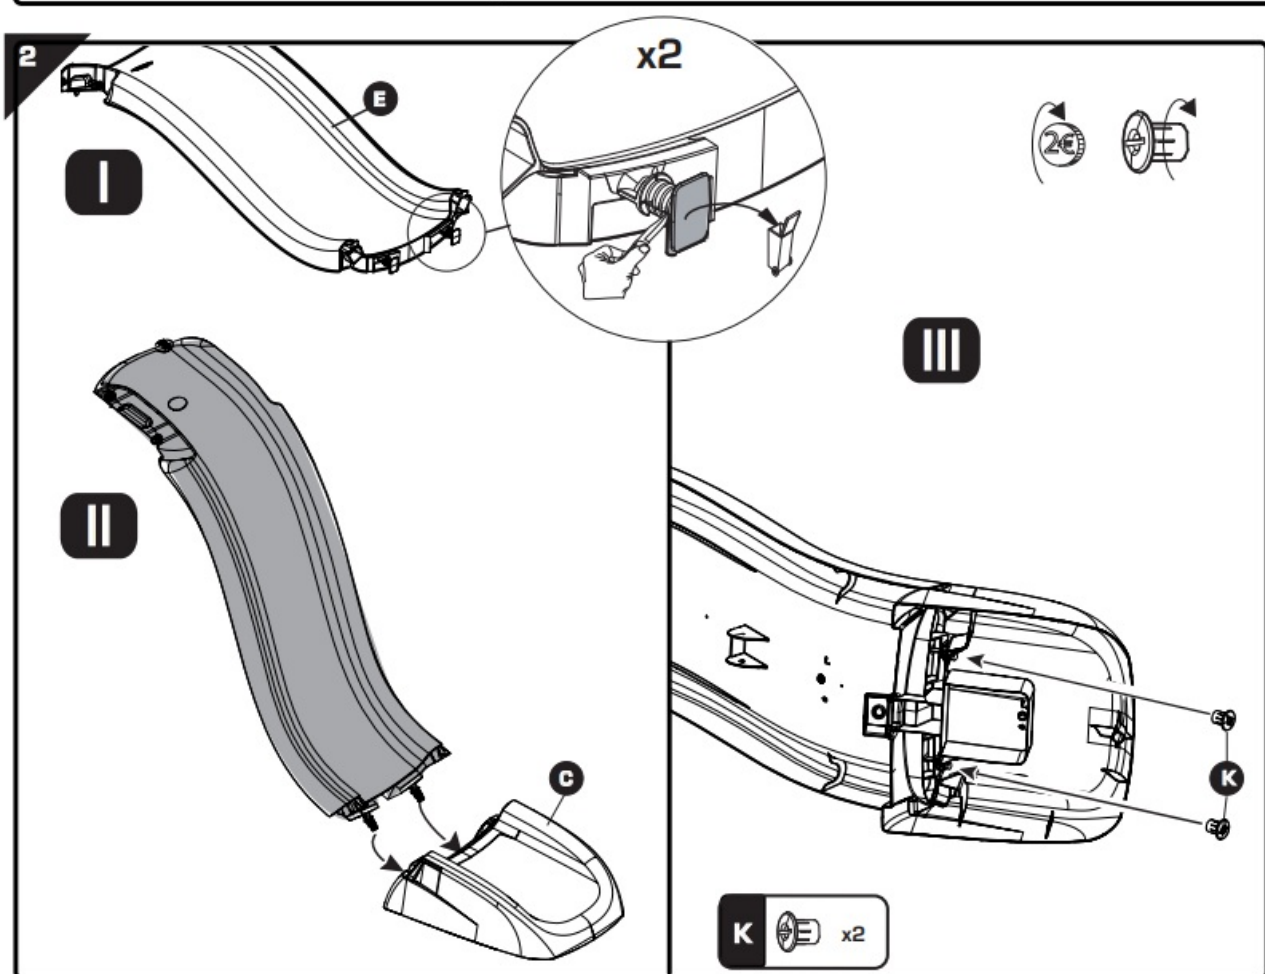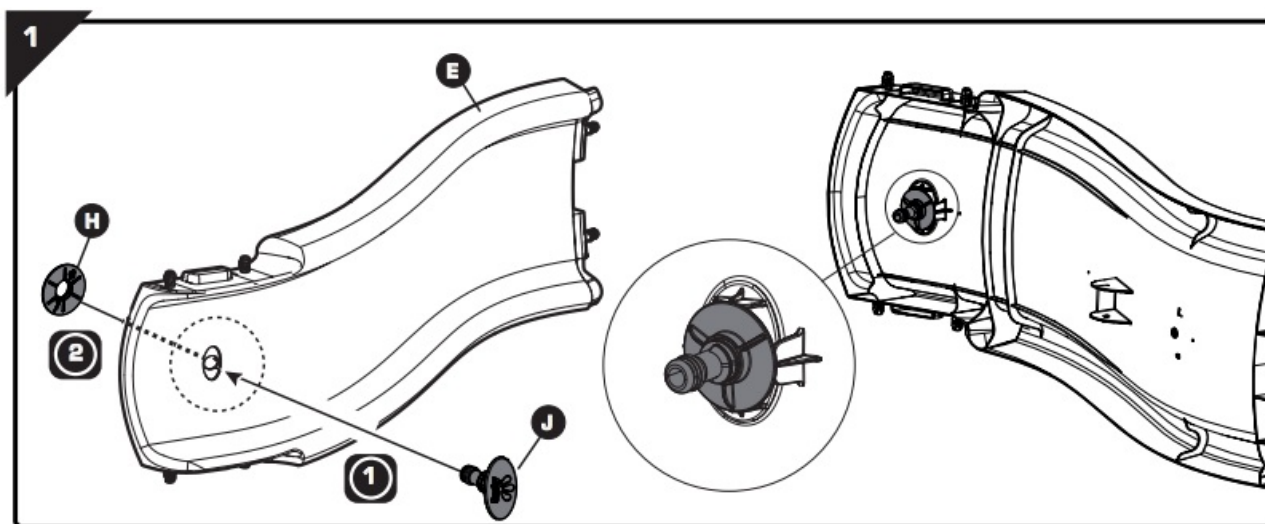ASSEMBLY INSTRUCTION

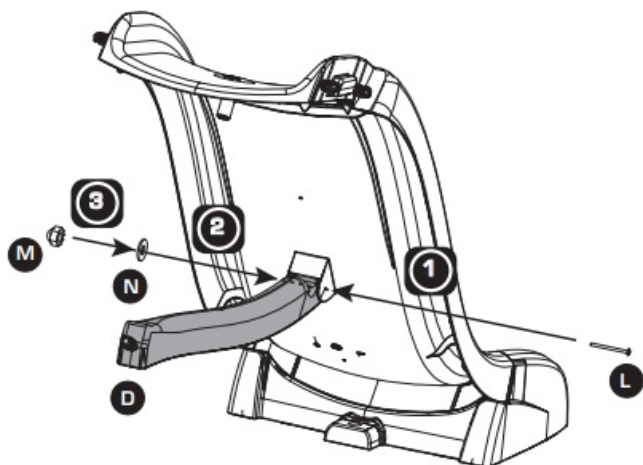


4




L		x1
M		x1
N		x1

5

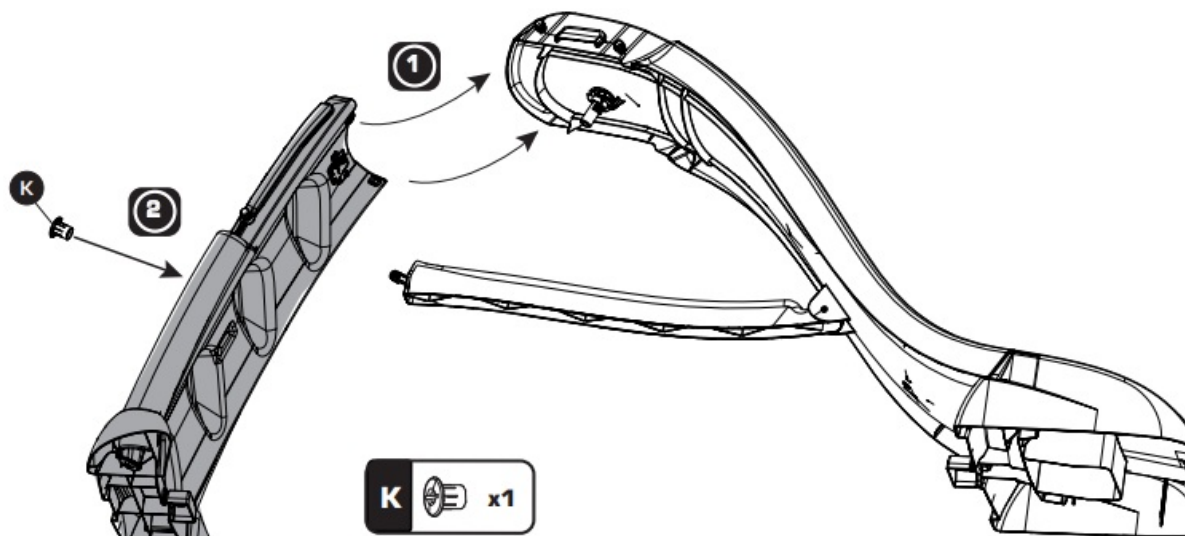


K		x1
---	---	----

6

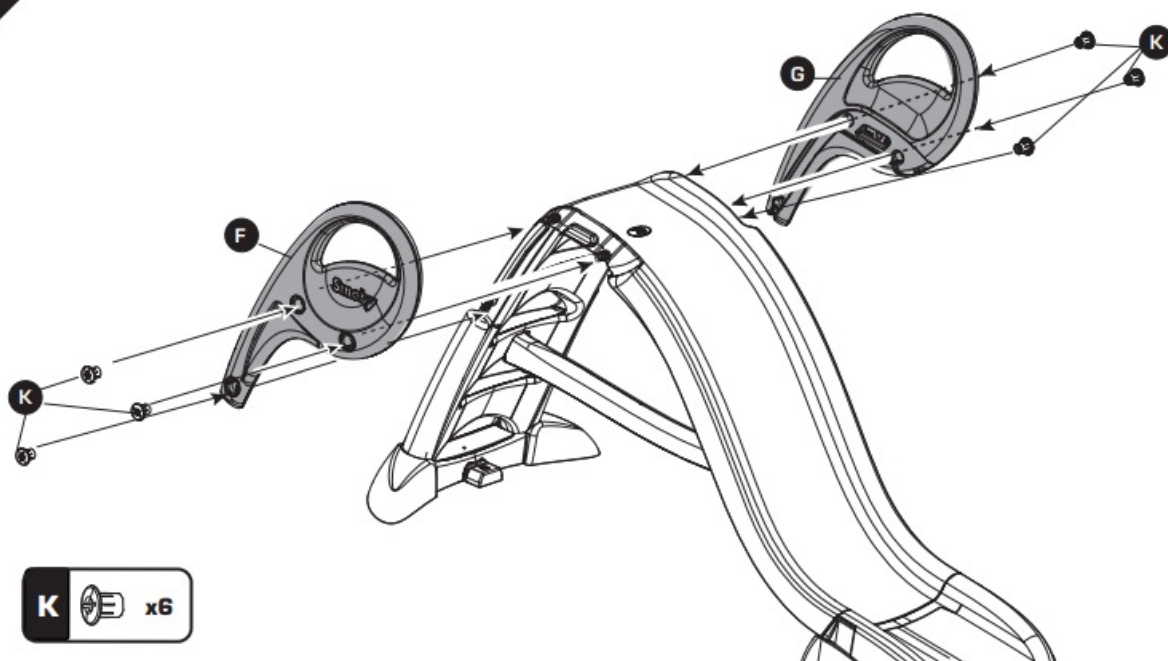


K		x6
---	---	----



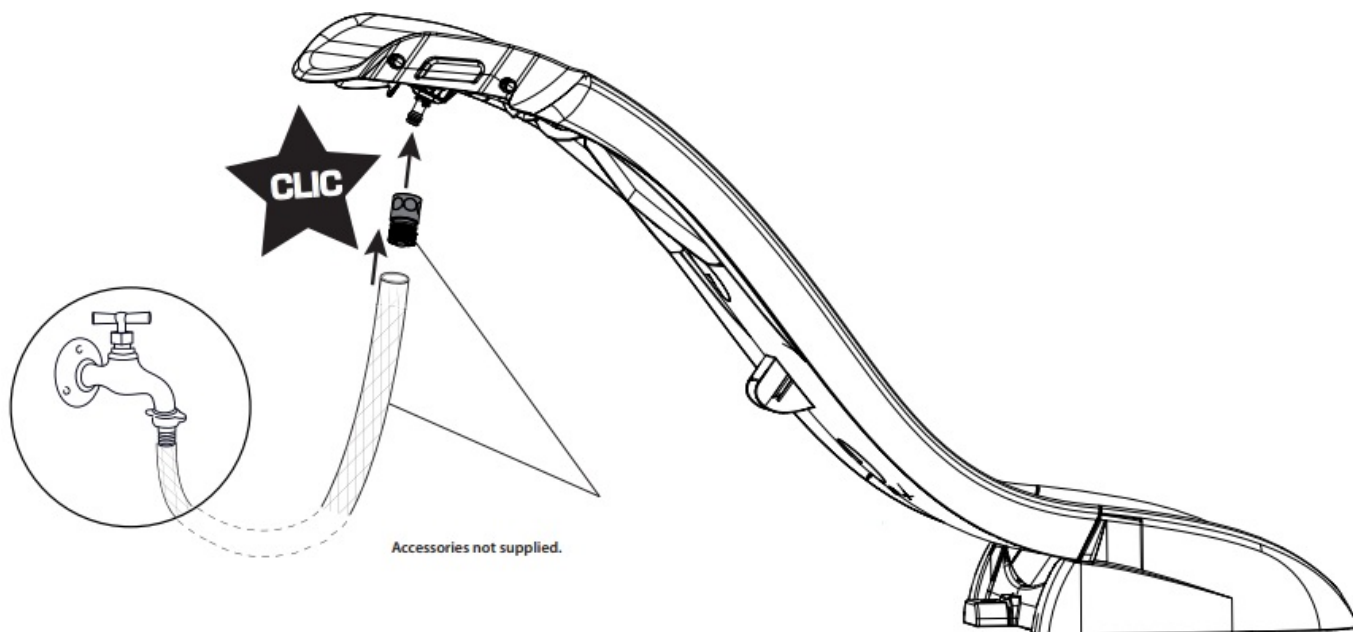

Uvoznik: Lidl Srbija KD, Prva južna radna 3,22330 Nova Pazova, Republika [Srbija,kontakt@lidl.rs](mailto:Srbija,kontakt@lidl.rs), 0800 300 199

Zemlja porekla: Francuska

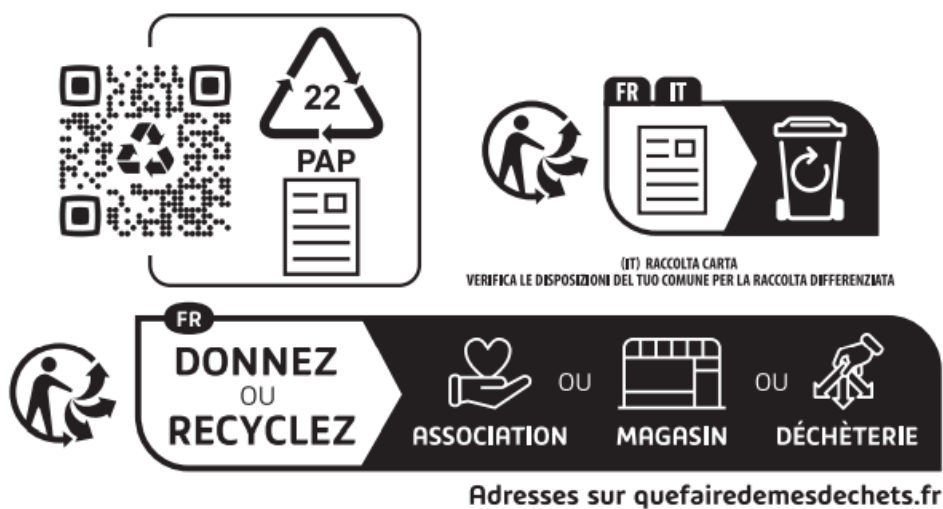

**SMOBY TOYS S.A.S.**

After-sales service : [www.smoby.fr](http://www.smoby.fr)

95 route du Haut Jura – 39170 Lavans-lès-Saint-Claude

Consumer assistance: for any problems, return this card

Toboggan KS

**SMOBY TOYS S.A.S.**

**Service après vente / After sales service : [www.smoby.fr](http://www.smoby.fr)  
95 route du Haut Jura - 39170 Lavans-lès-Saint-Claude / France.**

**Smoby**

**Assistance consommateurs à nous retourner en cas de problèmes / Consumer assistance: for any problems, return this card /**  
Verbraucher-Info: Für weitere Auskünfte, senden Sie diese Karte bitte an / Klantenservice : voor inlichtingen, deze kaart naar ons terugsturen/  
Atención al consumidor : para cualquier información, enviar esta tarjeta. / Assistenza per il consumatore : per informazioni, rispedire la presente cartolina.

**NOM / NAME :** \_\_\_\_\_

**PRENOM / SURNAME :** \_\_\_\_\_

**RUE / STREET :** \_\_\_\_\_

**VILLE / TOWN :** \_\_\_\_\_

**CODE POSTAL / POSTAL CODE :** \_\_\_\_\_

**PAYS / COUNTRY :** \_\_\_\_\_

**N°TEL :** \_\_\_\_\_

**EMAIL :** \_\_\_\_\_

**Description du motif de la réclamation / Cause for complaint / Grund der Beanstandung /**  
Omschrijving van de reden van de klacht / Detalle el motivo de su reclamación / Descizione del  
motivo del reclamo:

☐ **Manquant / Missing / Fehlende Teile / Tekort / Faltante / Mancante.**

☐ **Cassé / Broken / Gebrochen / Gebroken / Rotura / Rotto.**

☐ **Commentaires / Comments / Bemerkung / Opmerkingen**  
/ Comentarios / Commenti.

Ref:

Couleurs/Colors:

**76A3166032155**

N°: ☐ N°: ☐ N°: ☐ N°: ☐ N°: ☐ N°: ☐ N°: ☐  
Qté: ..... Qté: ..... Qté: ..... Qté: ..... Qté: ..... Qté: ..... Qté: .....



Important information to be kept. Do not use the slide near a swimming pool. Drowning hazard!.

## Warning!

- To avoid any hazards related to the packaging (tags, plastic film, inflation nozzle, assembly tools, etc.), remove all of the parts that are not part of the product. Toy to be assembled by a responsible adult.
- Never allow a child to play without adult supervision. Any complaint must be accompanied by the proof of purchase (receipt). The plastic or metal links between parts should be removed by an adult using a cutting tool to avoid sharp edges.
- The unit must be installed on flat, horizontal ground. Do not install on hard ground, for instance concrete or asphalt, without laying a shock-absorbing surface. Choose an area free of any obstacle (2 mts minimum from the product) that do not interfere the playing functions and do not damage the security, such as fences, swimming pool, garages, houses, hanging branches, pipes or electrical wires. Check regularly at the start of each game session the condition of the product (assembly, protection, plastic parts and/or electric parts).
- Tighten or re-fix the safety elements and the main parts if necessary. If a defect is noted, do not use the product until it has been repaired. The non-respect of instructions could provoke falling, tipping over or various types of deterioration. During the winter period, do not hit the product violently, as this may damage it. Any modification made to the original product (for example, the addition of an accessory) must be made according to the instructions supplied by the original product retailer. Defective parts must be replaced according to the manufacturer's instructions.
- Only for domestic use. Designed for interior or exterior use. It is recommended that you store the product indoors in bad weather or during the winter to ensure that the colours last longer.
- The slide must be placed in such a way that the child is not blinded by the sun. Frequently clean the slide with soapy water to limit static electricity. Only use soapy water. Damage due to a weather event (strong winds, storms, hail, snow, etc.) are not covered by the manufacturer's warranty. Please contact your insurer to take this risk into account. Do not use the product before it is properly installed. Adult supervision is necessary for children under 4 years of age.
- Never allow a child to play without adult supervision.



- Toy must be assembled by an adult, as it contains hazardous points or edges. A sharp tool shall be used.

## FAQ

**Q: What is the weight capacity of the product?**

**A:** The weight capacity of the product is 50KG.

**Q: Where is the product manufactured?**

**A:** The product is manufactured in France.

**Q: What are some important warnings regarding product usage?**

**A:** It is important to never allow a child to play without adult supervision and to assemble the toy with caution as it contains hazardous points or edges.

## Documents / Resources

	<p><a href="#">Smoby OUT2915 Toboggan KS Slides</a> [pdf] Installation Guide OUT2915, A2415000430, A2415000431, A2415000432, OUT2915 Toboggan KS Slides, OUT2915, Toboggan KS Slides, KS Slides</p>
---	---

## References

- [SIMBA DICKIE GROUP – We love to make toys](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.