



snakebyte BVB-PRO Wireless Controller Instruction Manual

[Home](#) » [snakebyte](#) » snakebyte BVB-PRO Wireless Controller Instruction Manual 



snakebyte

BVB-PRO Wireless Controller
Instruction Manual




Contents

- 1 BVB-PRO Wireless Controller
- 2 BVB-PRO CONTROLLER for Nintendo Switch™
- 3 INFORMATION
- 4 SAFETY PRECAUTIONS
- 5 HEALTH PRECAUTIONS
- 6 CLEANING
- 7 CUSTOMER SUPPORT / TECHNICAL SUPPORT
- 8 Documents / Resources
 - 8.1 References
- 9 Related Posts

BVB-PRO Wireless Controller

1.

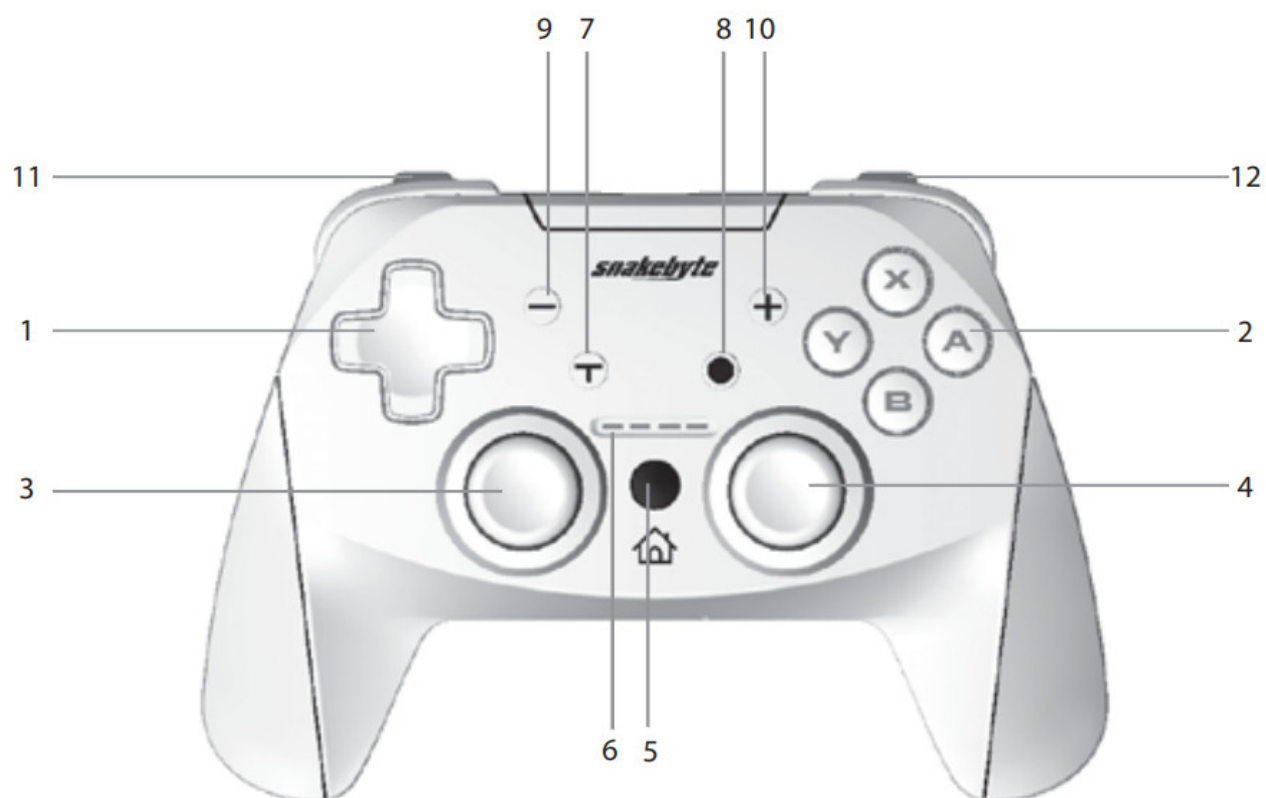



Direction Pad

2. Action Buttons
3. Left Analog stick(L)
4. Right Analog stick(R)
5. HOME button(Power on/off)
6. LED indicator
7. Turbo button
8. Capture button
9. Menu selection
10. Menu selection
11. L/ZL Buttons
12. R/ZR Buttons
13. Power off /Reset

BVB-PRO CONTROLLER for Nintendo Switch™

PRODUCT INFORMATION

Thank you for choosing snakebyte's BVB-PRO CONTROLLER. Please read this guide for important safety and health information and retain it for future reference.

OPERATING INSTRUCTION BVB-PRO CONTROLLER SB913877

PAIRING WITH CONSOLE

1. Enter System Settings on the Home Screen of the Console.
2. Select Change Grip/Order under Controllers and Sensors.
3. Press and hold Home on BVB-PRO CONTROLLER for approximately 5 seconds, until the red LED's starts flashing fast.

4. Wait for the Gamepad-Icon to show up under the connected controllers (this may take up to 10 seconds). The red LED will be illuminated to indicate that connection has been established.
5. Press A to finish pairing procedure.
6. To use vibration control combination buttons, you should turn on the vibration setting in the console, then simultaneously press "L3" & "-" to turn on or turn off the vibration function.

RECONNECTING PAIRED BVB-PRO CONTROLLER

- Press Home on BVB-PRO CONTROLLER at anytime, when the Console is switched on.
- An illuminated LED indicates that the connection has been established.

IMPORTANT

Please note that, while the Console can be put to Sleep Mode using BVB-PRO CONTROLLER, it cannot be woken up with it and needs to be switched on manually using its POWER-Button.

TURBO FEATURE

1. Press & hold any button you want to program it as turbo feature.
2. Press Turbo button to active turbo feature for the button you hold at step 1.
3. You can program all buttons in turbo feature except ZR & ZL.

Press & hold the programmed button then press turbo button again to cancel the turbo feature.

INFORMATION

If you experience functional issues using BVB-PRO CONTROLLER, please download the latest firmware installer from www.mysnakebyte.com, then run the installer program and follow the on screen instructions.

SAFETY PRECAUTIONS

- Do not expose the product to extremely hot, or cold temperatures, high humidity or direct sunlight.
- Do not use the product close to any heat sources.
- Do not subject the product to any liquids and never use it when the product is wet
- Do not put heavy objects on the product.
- Do not throw or drop the product.
- Do not attempt to take apart, open, service or modify the product. Doing so could present the risk of electronic shock, damage, fire, or other hazard.

HEALTH PRECAUTIONS

- If you feel tired, experience any discomfort or pain in your arms, or hands, stop using the product immediately
- and consult a doctor, if the conditions persist.
- Avoid prolonged use of this product and take a break about every 30 minutes.

CLEANING

- Clean only with a soft, dry cloth. Avoid cleaning solutions, solvents or other chemicals and do not attempt to

clean connectors as this may damage the product.

CUSTOMER SUPPORT / TECHNICAL SUPPORT

snakebyte distribution GmbH
Konrad-Zuse-Strasse 13
58239 Schwerte / Germany
Email: Support@mysnakebyte.com
Website: www.mysnakebyte.com

RADIO FREQUENCY BAND AND TRANSMISSION POWER

Operating Temperature: 10-50°C
Frequency range..... 2402 – 2480 MHz Bluetooth
Max. transmission power/dBm..... <10 dBm

The product comply with the US portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual.

COPYRIGHT INFORMATION

©2018. All rights reserved. This document may not in whole or in part be reproduced, stored in a retrieval system, transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, or reduced to any electronic medium or machine-readable form without prior consent, in writing, from snakebyte distribution GmbH. snakebyte is a registered trademark of snakebyte distribution GmbH.



Disposal of batteries/rechargeable batteries

Please follow regional guidelines for the disposal of rechargeable batteries or contact local authorities, your household waste disposal service or the shop where you purchased the product. Batteries/rechargeable batteries must not be disposed of into the normal household garbage. Please use a rechargeable battery disposal in your neighborhood or community, if available.

Battery information

- Immediately stop using the product if fluid leaks from the battery.
- In the event contact of battery fluid with the eyes, rinse them thoroughly with water and seek medical attention immediately.
- In the event of skin contact, wash with water immediately.
- Do not dispose batteries into fire. Risk of explosion!
- Please dispose of batteries according to local regulations.
- Do not dispose of batteries in domestic waste.

Batteries and rechargeable batteries must not be disposed of with household waste. Consumers are legally obliged to dispose of batteries and accumulators separately. Batteries and rechargeable batteries can be handed in free of charge at a collection point in your municipality/district or in shops so that they can be disposed of in an environmentally friendly way and valuable raw materials can be recovered. Improper disposal can result in toxic substances being released into the environment, which can have harmful effects on humans, animals and plants. Batteries and rechargeable batteries contained in electrical appliances must be disposed of separately from them whenever possible. Only dispose of batteries and rechargeable batteries when they are discharged. If possible, use rechargeable batteries instead of disposable batteries. Batteries with increased pollutant content are also marked with the following signs: Cd = cadmium, Hg = mercury, Pb = lead

CAUTION RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.



WEEE (Waste Electrical and Electronic Equipment Directive) If you eventually want to dispose of this product at a later time, please observe the following instructions: Electronic equipment should not be disposed of together with household waste. Please recycle the device if the appropriate recycling ways are available to you.

Please contact your local authority or retailer and ask them for advice on recycling.

RoHS

This product has been certified as RoHS compliant in accordance with Directive 2011/65/EG.



EU DECLARATION OF CONFORITY

Hereby we guarantee that snakebyte distribution GmbH, located at 13 Konrad-Zuse-Str., Schwerte 58239 Germany, is marketing this device (BVB-PRO CONTROLLER) under the brand name BVB-PRO CONTROLLER and complies with the legal requirements and the requirements of Directive 2014/53/EU.

This notification is listed under: <http://snakebyte.com/main-menu/support/downloads.html>



Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measure:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

Item Number: SB913877



snakebyte

Documents / Resources



[snakebyte BVB-PRO Wireless Controller](#) [pdf] Instruction Manual
SB913877, BVB-PRO Wireless Controller, BVB-PRO, Wireless Controller, Controller

References

- [Konformitätserklärungen](#)
- [snakebyte Gaming Gear for PC and Konsole](#)