



SOAR SR-BTX4 Portable Bluetooth Speaker User Manual

[Home](#) » [Soar](#) » SOAR SR-BTX4 Portable Bluetooth Speaker User Manual 



SR-HFBL _Wireless Headphones
User Manual • Black and White
Double Sided Printing



 **Bluetooth speaker**

Thank you for choosing the SOAR Portable Wireless Speaker. High quality audio anywhere you go. Please familiarize yourself with the Bluetooth™ functionality of your smartphone or device before use. Includes: Portable Wireless Speaker, Micro USB Charging Cable, User Manual


Contents

- 1 **PRODUCT KEY**
- 2 **CHARGING**
- 3 **PAIRING**
- 4 **AUXILIARY MODE**
- 5 **TF CARD/USB DRIVE MODE**
- 6 **FM RADIO MODE**
- 7 **WARRANTY**
- 8 **Documents / Resources**



PRODUCT KEY

- 1. Play / Pause Button
- 2. Previous Track / Volume Down
- 3. Next Track / Volume Up
- 4. Mode Button
- 5. Cloth Lanyard
- 6. USB Drive Input
- 7. TF Card Slot
- 8. On / Off Switch
- 9. Micro USB Power Input
- 10. Subwoofer
- 11. Speaker (Front)

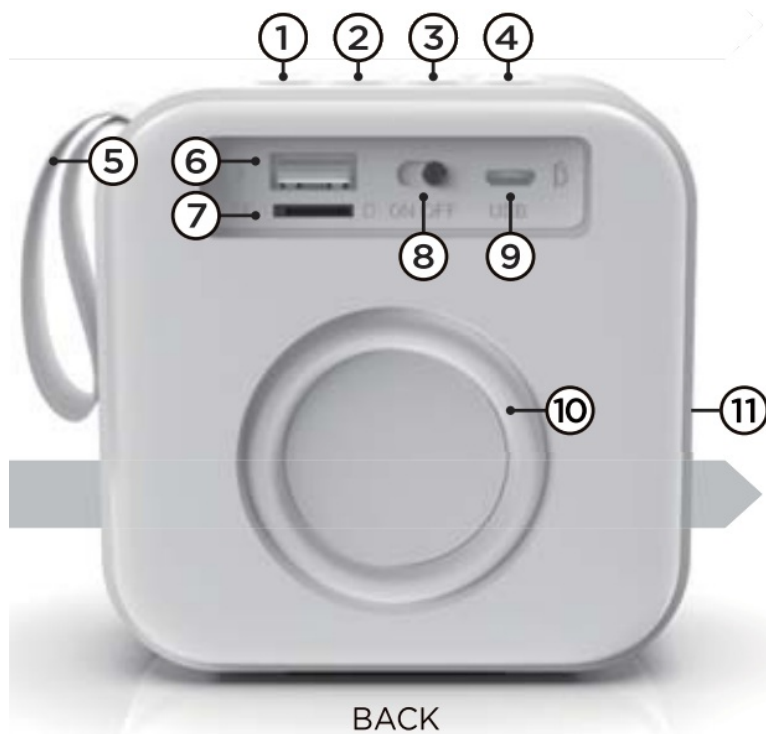

POWER ON

Switch unit on or by turning the “Power” button on the back to the “On” position. The item should come with enough power be powered on. If you are having trouble pairing or powering it on, please make sure it is fully charged.



CHARGING

Connect the provided charging cable to your speaker's Micro USB port. Connect the USB end to your computer or charger. The charging input power is 5V 1A. The red indicator light will turn off when charging completes.



PAIRING

Once powered on, the speaker will turn to Bluetooth mode by default while there is no other connection. The item will automatically connect to the last Bluetooth device first. If nothing found, it will search for a new one. If the LED blue light flashes at intervals, it means it's ready to pair. On the Bluetooth device, switch on Bluetooth setting and select "Prime BTX4". If necessary, enter the pass code "0000" or "1234". Once connected successfully, the LED blue light flashes slowly. To disconnect from current Bluetooth device, switch off Bluetooth from current device. Press the ">||" button one time to play or pause the music; short press the "-" or "+" button to skip songs; press and hold the "-" or "+" button to adjust volume. To sync two speakers for stereo sound. Turn on the 2 different units and ensure they are in Bluetooth mode. Press the "M" button on both devices at the same time and they will connect. Once both units are paired, follow the "Bluetooth Mode" steps to connect them to your device. To disconnect the two units press the "M" button on either speaker.



AUXILIARY MODE

Once powered on, connect the item to the audio device through the 3.5 mm aux-in cable, the unit will turn into "AUX" mode automatically. Press the ">||" button one time to play or pause. Press and hold the "-" or "+" button to adjust volume.



TF CARD/USB DRIVE MODE

Once a TF card/USB drive is inserted, the unit will turn to TF card/USB drive mode automatically and start playing. Press the ">||" button one time to pause or resume the music. Short press the "-" or "+" button to skip songs; press and hold the "-" or "+" button to adjust volume.



FM RADIO MODE

Once powered on, press the "M" button to change to "FM Tuner" mode. Insert USB charging cable as antenna. Press the ">||" button one time to search and lock all possible FM channels automatically. Press the "-" or "+" button one time to select a channel. Press and hold the "-" or "+" button to adjust volume.



WARNING

This device is not a toy and should be kept away from children. The product must not be dropped or subjected to impact. Do not use the device in humid environments or in extremely hot/ cold temperatures. Do not use chemicals or abrasive detergents to clean the product. Please return for repairs if the product is defective. The warranty is invalid if the product has metal rust, water damage, or other natural oxidation.



WARRANTY

This product has a 1 year warranty against defects in manufacturing under regular consumer use. For instructions about how to obtain warranty service for your product, please contact Customer Service:

info@primebrandsgroup.com. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. This product is compatible with all wireless audio devices, Bluetooth® and non-Bluetooth®. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



WARNING: This product can expose you to chemicals including Di(2-ethylhexyl)phthalate which is known to the state of California to cause cancer or birth defects or other reproductive harm. For more information, visit www.P65Warnings.ca.gov



© 12023 Prime Brands Group. All rights reserved.

All trade names are registered trademarks of the respective manufactures listed. Made in China.

Prime Brands Group • Brooklyn, NY 11232 • SHOPSOAR.COM

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received , including interference that may cause undesired operation.


Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Documents / Resources

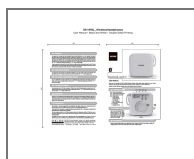

[SOAR SR-BTX4 Portable Bluetooth Speaker](#) [pdf] User Manual

2AY4Z-BTX4, 2AY4ZBTX4, btx4, SR-BTX4 Portable Bluetooth Speaker, SR-BTX4, Portable Bluetooth Speaker, Bluetooth Speaker, Speaker